





	Sicherheitshinweise
Bestimmungs- gemäßer Betrieb	Der Handy-Programmer BIS M-81_ bildet zusammen mit den anderen Bausteinen des Systems BIS M ein mobiles Identifikations-System und darf nur für diese Aufgabe im indu- striellen Bereich entsprechend Klasse A des EMV-Gesetzes eingesetzt werden.
Installation und Betrieb	Installation und Betrieb sind nur durch geschultes Fachpersonal zulässig. Unbefugte Ein- griffe und unsachgemäße Verwendung führen zum Verlust von Garantie- und Haftungsan- sprüchen.
	Bei der Installation des Handy-Programmers ist das Kapitel Inbetriebnahme des Geräts genau zu beachten.
Einsatz und Prüfung	Für den Einsatz des Identifikations-Systems sind die einschlägigen Sicherheitsvorschriften zu beachten. Insbesondere müssen Maßnahmen getroffen werden, dass bei einem Defekt des Identifikations-Systems keine Gefahren für Personen und Sachen entstehen können.
	Hierzu gehören die Einhaltung der zulässigen Umgebungsbedingungen und die regelmäßige Überprüfung der Funktionsfähigkeit des Identifikations-Systems mit allen damit verbundenen Komponenten.
Funktionsstörungen	Wenn Anzeichen erkennbar sind, dass das Identifikations-System nicht ordnungsgemäß arbeitet, ist es außer Betrieb zu nehmen und gegen unbefugte Benutzung zu sichern.
Gültigkeit	Diese Beschreibung gilt für Handy-Programmer der Baureihe BIS M-810-0-003 und BIS M-812-0-003 (ab Software-Stand V1.2, Hardware-Stand V2.0) sowie BIS M-811-0-003 (ab Software-Stand V1.2, Hardware-Stand V1.1).





	BIS M-81_ Basiswissen für die Anwendung
Bedienung, Tastatur und Display	Die Bedienung des Handy-Programmers erfolgt menügesteuert. Die Eingaben werden über eine Folientastatur mit 32 Tasten vorgenommen. Einige Tasten sind mehrfach belegt. Zwei Arten der Mehrfachbelegung sind zu unterscheiden:
	2 Funktionen Umschaltung mit der Taste 3 Buchstaben 1× drücken = 1. Buchstabe, 2× = 2. Buchstabe, 3× = 3. Buchstabe Umschaltung auf Großbuchstaben mit der Taste Smith
	Das LCD-Display, mit dem alle Daten angezeigt werden, hat 4 Zeilen mit je 20 Zeichen.
Sprachen Deutsch/Englisch	Im Hauptmenü kann durch gleichzeitiges Drücken von Shift+F1 eine andere Sprache gewählt werden. Die gewählte Sprache bleibt jedoch nur bis zum nächsten Ausschalten des Handy Programmers erhalten. Um sie dauerhaft anzuwählen, muss sie im Konfigurationsmenü aus- gewählt werden.
Menü-/ Bedienkonzept	
Menü-/ Bedienkonzept	Die wesentlichen Funktionen des Geräts werden im Hauptmenü 1 angezeigt. Jedes Unterme- nü ist durch eine Ziffer gekennzeichnet. Durch Drücken der entsprechenden Zifferntaste wird das betreffende Untermenü aufgerufen und das zugehörige Fenster angezeigt. In einigen Fäl- len wird die Funktion direkt ausgeführt, in anderen Fällen muss eine weitere Menüauswahl durchlaufen werden.
Menü-/ Bedienkonzept	Die wesentlichen Funktionen des Geräts werden im Hauptmenü 1 angezeigt. Jedes Unterme- nü ist durch eine Ziffer gekennzeichnet. Durch Drücken der entsprechenden Zifferntaste wird das betreffende Untermenü aufgerufen und das zugehörige Fenster angezeigt. In einigen Fäl- len wird die Funktion direkt ausgeführt, in anderen Fällen muss eine weitere Menüauswahl durchlaufen werden. Zur raschen Orientierung ist im Handbuch stets die Taste/Tastenfolge angegeben, mit der die jeweilige Funktion / das jeweilige Menü – stets ausgehend vom Hauptmenü 1 – direkt er- reicht wird.
Menü-/ Bedienkonzept	Die wesentlichen Funktionen des Geräts werden im Hauptmenü 1 angezeigt. Jedes Unterme- nü ist durch eine Ziffer gekennzeichnet. Durch Drücken der entsprechenden Zifferntaste wird das betreffende Untermenü aufgerufen und das zugehörige Fenster angezeigt. In einigen Fäl- len wird die Funktion direkt ausgeführt, in anderen Fällen muss eine weitere Menüauswahl durchlaufen werden. Zur raschen Orientierung ist im Handbuch stets die Taste/Tastenfolge angegeben, mit der die jeweilige Funktion / das jeweilige Menü – stets ausgehend vom Hauptmenü 1 – direkt er- reicht wird. <u> Hauptmenü</u>

	Basisw	vissen für die Anwendun	g		
Batteriebetrieb	Die Spannungsversorgung des Gerätes erfolgt über einen Akku. Beim Schreiben oder Lesen beträgt der Stromverbrauch 275 mA. Findet kein Schreib-/Lesevorgang statt, hat das Gerät einen Stromverbrauch von 65 mA.				
	Die Syste ger stellt führung. Trägersig In dieser erfolgen.	enkomponenten werden vom Hau eine eigenständige Einheit dar, be Er bekommt seine Energie vom S nal aus, das den Datenträger ven Phase findet der Schreib-/Lesevo	ndy-Programn enötigt also ke Schreib-/Lesek sorgt, sobald organg statt. [ner elektrisch versorgt. Der Datenträ eine leitungsgebundene Stromzu- copf. Dieser sendet ständig ein der notwendige Abstand erreicht ist Dieser kann statisch oder dynamisch	
Auswahl der Schreib-/Leseköpfe beim BIS M-811	Für den Handy-Programmer sind verschiedene Schreib-/Leseköpfe *) erhältlich. Diese werden über ein Kabel an den Handy-Programmer angeschlossen. Die Auswahl des Schreib-/ Lesekopfs *) hängt von dem verwendeten Datenträgertyp ab. Über das Adapterkabel BKS-S115-PU-02 *) kann ein Schreib-/Lesekopf BIS M-3_ (ab Hardware-Stand V2.0) aus dem BIS M-Lieferprogramm angeschlossen werden.				
Dialogmodus	Über der oder liest ten zu ve im ASCII- werden.	Schreib-/Lesekopf schreibt der sie vom Datenträger. Um zu sc rändern, besitzt der Handy-Prog , HEX-, BCD- oder BINÄR-Form	Handy-Progra hreibende Dat rammer eine at gelesen od	ammer Daten auf den Datenträger ten vorzubereiten oder gelesene Da Editor-Funktion. Die Daten können er auf den Datenträger geschrieben	
	Das Dars werden:	tellungsformat der angezeigten D	aten kann mit	den Tasten abo und ghi umgeschalte	
	Taste	Darstellungsformat	Taste	Darstellungsformat HEX	
	abc				

	Basiswissen für die Anwendung			
Datensicherheit der gelesenen und geschriebenen Daten	Bei der Übertragung der Daten zwischen Schreib-/Lesekopf und Datenträger bedarf es eines Verfahrens, welches erkennen kann, ob die Daten richtig gelesen bzw. richtig ge- schrieben worden sind.			
	Bei der Auslieferung ist der Handy-Programm des doppelten Einlesens mit anschließendem ren steht ein zweites als Alternative zur Verfüg Prüfcode auf den Datenträger geschrieben, d Daten auf Gültigkeit erlaubt.	ner auf das bei Balluff gebräuchliche Verfahren v Vergleich eingestellt. Neben diesem Verfah- gung: die CRC_16-Datenprüfung. Hier wird ein er jederzeit und überall das Kontrollieren der		
	Vorteile mit CRC 16 Check	Vorteile mit doppeltem Lesen		
	Datensicherheit auch während der nicht aktiven Phase (Datenträger außerhalb des Schreib- /Lesebereichs).	Beim Datenträger gehen keine Nutzbyte zur Speicherung eines Prüfcodes verloren.		
	Kürzere Lesezeiten, da jede Seite nur einmal gelesen wird.	Kürzere Schreibzeiten, da kein CRC geschrieben werden muss.		
	Da beide Varianten je nach Anwendung vorte heit vom Kunden eingestellt werden (siehe Ko	ilhaft sind, kann die Methode der Datensicher- onfiguration I 15 "Datenträger auswählen").		
	Ein Mischbetrieb der beiden Prüfverfahren ist nic	cht möglich!		

	BIS M-81_ Basiswissen für die Anwendung
Datensicherheit der gelesenen und geschriebenen Daten	Um die Methode mit dem CRC-Check verwenden zu können, müssen die Datenträger in- itialisiert werden. Entweder man benutzt Datenträger mit dem Datensatz bei Werksaus- lieferung (alle Daten sind 0) oder man muss den Datenträger initialisieren. Dazu stehen zwei Möglichkeiten zur Verfügung:
	- Über die Funktion "Init" im Hauptmenü 2 den Datenträger initialisieren (siehe î 28). - Über den speziellen Initialisierungsbefehl 'Z' den Datenträger beschreiben (siehe î 39).
	Ist die CRC_16-Datenprüfung aktiviert, wird bei Erkennen eines CRC-Fehlers eine spezielle Fehlermeldung ausgegeben.
	Wenn die Fehlermeldung keine Folge aus einem missglückten Schreibauftrag ist, kann da- von ausgegangen werden, dass eine oder mehrere Speicherzellen auf dem Datenträger defekt sind. Der betreffende Datenträger ist auszutauschen.
	lst der CRC-Fehler jedoch eine Folge aus einem missglückten Schreibauftrag, muss der Datenträger neu initialisiert werden, um ihn wieder verwenden zu können.
CRC_16	Die Prüfsumme wird je CRC-Block (entspricht 16 Byte) auf den Datenträger als 2 Byte grosse Information geschrieben. Es gehen 2 Byte pro CRC-Block verloren, d.h. der CRC-Block enthält nur noch 14 Byte Nutzdaten. Dies bedeutet, dass sich die konkret nutzbare Anzahl Byte verringert (siehe hanz 11 "Unterstützte Datenträger und Speicherkapazität").
	Werkseitig ist die CRC_16-Datenprüfung nicht eingestellt.
Gelesene Daten abspeichern	Aus einem Datenträger gelesene Daten, die sich im Arbeitsspeicher des Handy- Programmers befinden, können unter einem Dateinamen in einem EEPROM abgelegt wer- den.

	BIS M-81_ Basiswissen fi	ür die A	nwendung	1		
Kommunikation zwischen Handy- Programmer und PC	Der Handy-Progran Leseaufträge ausge übertragen werden	nmer verfü eführt und können. H	gt über eine Dateien zwisc ierzu wird da	serielle RS 232-So chen einem PC ur Is Kabel BIS C-52	chnittstelle, über die 1d dem Handy-Progr 2 *) benötigt.	Schreib-/ rammer
über die RS 232-	Die Kommunikation	auf der se	riellen Schnitt	stelle erfolgt in ein	em festgelegten Pro	tokoll.
Schnittstelle	Der Datenverkehr z festgelegte Telegrar	wischen d nme. Folge	em Handy-Pr ende Möglichk	ogrammer und de	em Laptop/PC gesch	nieht über
	 Lese-/Schreib der Handy-Pr Dateiverwaltu Programmer. 	aufträge vo ogrammer ung und Da Details sie	m PC über de die Funktion e atenaustausc ehe ab 🗅 42.	en Handy-Program iner BIS-Auswerter h gespeicherter D	imer abwickeln, dabei einheit. Details siehe a Paten zwischen PC u	i übernimmt ab 🖻 29. ınd Handy-
Unterstützte Datenträger und	Mifare Balluff Datenträgertyp	Hersteller	Bezeichnung	Speicherkapazität	Nutzbara Byta bai CPC	Spaicharty
Speicherkapazität	BIS M-101	Philips	Mifare Classic	752 Byte	658 Byte	EEPROM
Speicherkapazität	BIS M-101 Die ISO15693 Datent V2.0 bearbeitet werd senen Schreib-/Lesel	Philips räger könne en. Zusätzlic köpfe BIS M	Mifare Classic n bei den Gerät h muss beim E -3_ V2.0 ode	752 Byte ten BIS M-810 und E BIS M-811 der Hardv r höher sein!	658 Byte BIS M-812 ab dem Hard vare-Stand der extern a	EEPROM lware-Stand ngeschlos-
Speicherkapazität	BIS M-101 Die ISO15693 Datent V2.0 bearbeitet werd senen Schreib-/Lesel	Philips räger könne en. Zusätzlic köpfe BIS M	Mifare Classic n bei den Gerät h muss beim E -3 V2.0 ode	ten BIS M-810 und E 3IS M-811 der Hardv r höher sein!	658 Byte BIS M-812 ab dem Hard vare-Stand der extern a	EEPROM ware-Stand
Speicherkapazität	BIS M-101 Die ISO15693 Datent V2.0 bearbeitet werd senen Schreib-/Lesel ISO15693 Balluff Datenträgertyp BIS M-102 BIS M-103' BIS M-104' BIS M-106' BIS M-107'	Philips räger könne en. Zusätzlic köpfe BIS M Hersteller Fujitsu Philips Texas Inst. Infineon EM Infineon	Mifare Classic In bei den Geräti th muss beim E -3V2.0 ode Bezeichnung MB89R118 SL2ICS20 TAG-IT Plus SRF55V02P EM4135 SRF55V10P	752 Byte 752 Byte ten BIS M-810 und E 3IS M-811 der Hardv r höher sein! Speicherkapazität 2000 Byte 112 Byte 266 Byte 224 Byte 288 Byte 992 Byte	Nutzbare Byte bei ORC 658 Byte BIS M-812 ab dem Hard vare-Stand der extern a Nutzbare Byte bei CRC 1750 Byte 98 Byte 224 Byte 196 Byte 252 Byte 868 Byte	Speicherty Ware-Stand ngeschlos- Speicherty FRAM EEPROM EEPROM EEPROM EEPROM

	BIS M-81_ Inbetriebnahme des Geräts
	Die Handy-Programmer BIS M-810 und BIS M-812 haben eine integrierte Antenne und be- nötigen keinen externen Schreib-/Lesekopf.
Schreib-/Lesekopf einstecken beim BIS M-811	Bei dem Handy-Programmer BIS M-811 wird an der Stirnseite des Gerätes über ein Lese- kopfkabel ein Standard Schreib-/Lesekopf BIS M-3 betrieben. Wird kein Schreib-/Lese- kopf BIS M-3 angeschlossen und das Gerät eingeschaltet, erscheint folgender Warnhin- weis:
	!!!! FEHLER !!!!
	S/L-Kopf Fehler
	Fehlermeldung wenn kein S/L-Kopf angeschlossen wurde
einschalten	Der Handy-Programmer wird eingeschaltet, indem die Taste 🖂 gedrückt wird.
	Das Gerät meldet sich mit der Anzeige von Gerätetyp und Software-Version. Gleichzeitig wird ein Akkutest durchgeführt.
	BALLUFF BIS M-81_ Die Anzeigendauer kann durch drücken der Taste im verkürzt werden. Balluuff Bis M-81_ Stattdienlau mit Software-Version
	Startdisplay mit Software-Version

13	
	BIS M-81_ Inbetriebnahme des Geräts
Handy-Programmer einschalten (Fortsetzung)	Falls die Spannung unter eine bestimmte Nennkapazität abgesunken ist, wird eine Warnmeldung ausgegeben. Das Gerät kann trotz dieser Warnung noch eine kurze Zeit be- nutzt werden. Der Akku sollte jedoch sobald wie möglich aufgeladen werden (siehe 🏱 53).
	Nach Drücken der Taste Emei zeigt das Gerät mit folgender Anzeige seine Betriebsbereit- schaft an.
	Nach einem bestandenen Akkutest erscheint diese Anzeige direkt.
	Hauptmenü 1 Lesen 4 Datei 2 Schreiben 5 Konfig 3 Editieren 6 Weiter
	Hauptmenü 1
	deutsch BALLUFF 13

14	BIS M-81_ Konfiguration		
Konfiguration 1	Falls nicht mit der W ist zu Beginn die Ko durchzuführen. Über Menüpunkt 5 ir	/erkseinstellung gearbeitet werden so nfiguration des Handy-Programmers n Hauptmenü 1 gelangt man in das	NI, Konfiguration 1 Adressen 4 V24 2 Format 3 Datenträger 6>
5	Konfigurationsmenü	1:	Konfigurationsmenü 1
Adressen konfigurieren	Die Adressbereiche t beim Editieren könne	für Lesen und Schreiben der Datenträ en voreingestellt werden.	äger und für die Einsprungadresse
51	Die Auswahlziffer des jeweiligen Modus sowie die ge- wünschten Werte müssen eingegeben und mit webestätigt werden. Werte, die übernommen werden sollen, können direkt mit webestätigt werden. Auf diese Weise werden die gezeigten Menüs nacheinander durchlaufen.		igt Eingabemodus LESEN
	Eingabemodus LES Startadresse / E Startadresse / A	EN: Indadresse bzw. Inzahl Byte für Lesen	Eingabemodus zum Lesen wählen
	Bereich LESEN	Bereich LESEN	Bereich LESEN
		von Byte Nr.: <u>0</u> bis Byte Nr.: 255	von Byte Nr.: <u>0</u> Anzahl Byte: 0256
		Eingabemenü 0 für Modus Start-/Endadresse zum Lesen	Eingabernenü 1 für Modus Start- adresse/Anzahl Byte zum Lesen
14 BALLUFF deuts	sch		





	Konfiguration	
Schnittstelle parametrieren	Einstellung der serie Laptop:	llen RS 232-Schnittstelle zur Kommunikation mit einem PC oder
5 4	Folgende Parameter	können eingestellt werden:
	 Baudrate: Stopbit: Datenbit: Parität: BCC / CB: 	9600, 19200, 38400 oder 57600 Baud 1 oder 2 8 (kann nicht geändert werden) E (even), O (odd) oder N (none) B (BCC), C (CB)
	übernommen werde	n sollen, können direkt mit Ener bestätigt werden. Werte, die
Konfiguration 2 Language	Über Menüpunkt 6 k	kommt man in das Konfigurationsmenü 2:
Konfiguration 2 Language	Über Menüpunkt 6 k Konfigurati 1 Language 2 <	kommt man in das Konfigurationsmenü 2: Hier kann die Sprache des Menüs gewählt werden. Menüpunkt 2 führt über die Abfrage, ob die Konfiguration gespeichert werden soll, wieder zurück ins Hauptmenü 1.
Konfiguration 2 Language	Über Menüpunkt 6 k Konfigurati 1 Language 2 < Konfigurationsmenü 2	xommt man in das Konfigurationsmenü 2: Hier kann die Sprache des Menüs gewählt werden. Menüpunkt 2 führt über die Abfrage, ob die Konfiguration gespeichert werden soll, wieder zurück ins Hauptmenü 1.

	Funktionsbeschreibung B Datenträger bearbeiten	IS M-81_	
Datenträger lesen	Durch Auswahl des Menüpunkts 1 " sen des Datenträgers. Es wird die E ten Eingabemodus – der Endadress	'Lesen" im Hauptmenü 1 e ingabe der Startadresse u e oder der Anzahl Byte ver	rreicht man das Menü zum Le- nd – abhängig vom konfigurier- rlangt:
	Datenträger lesen		Datenträger lesen
	von Byte Nr.: bis Byte Nr.:	oder	von Byte Nr.: Anzahl Byte :
	Eingabemenü 1 zum Lesen vom		Eingabernenü 2 zum Lesen vom Datenträger
	Datentrager		Batoritragor
	Datentrager Die Daten der zuletzt erfolgten Eing für Startadresse und Endadresse L Mit den Tasten I und I kann zw Mit der Taste Einer werden die Date	gabe bzw. die in der Konfi szw. Anzahl Byte werden vischen den beiden Eingal n übernommen.	iguration angegebenen Daten als Vorgabewerte angezeigt. befeldern gewechselt werden.
	Datentrager Die Daten der zuletzt erfolgten Eing für Startadresse und Endadresse b Mit den Tasten <u>1</u> und <u>1</u> kann zw Mit der Taste <u>eine</u> werden die Date Werden die eingegebenen Daten ir bzw. im Feld "Anzahl Byte: " mit d wird der Lesevorgang gestartet. So träger im Lesebereich erkannt wird Mitte der 2 Zeile Befindet sich ein	gabe bzw. die in der Konfi zzw. Anzahl Byte werden vischen den beiden Eingal n übernommen. m Feld "bis Byte Nr.:" ler Taste Em bestätigt, blange noch kein Daten- i, blinkt ein Balken in der Datenträger im Lese-	jguration angegebenen Daten als Vorgabewerte angezeigt. befeldern gewechselt werden.
	Datentrager Die Daten der zuletzt erfolgten Eing für Startadresse und Endadresse b Mit den Tasten 🗋 und 🗍 kann zw Mit der Taste 🔤 werden die Date Werden die eingegebenen Daten ir bzw. im Feld "Anzahl Byte :" mit wird der Lesevorgang gestartet. So träger im Lesebereich erkannt wird Mitte der 2. Zeile. Befindet sich eir bereich des Schreib-/Lesekopfs, h kens auf und die Daten werden au sen.	gabe bzw. die in der Konfi bzw. Anzahl Byte werden vischen den beiden Eingal in übernommen. m Feld "bis Byte Nr.:" ler Taste en bestätigt, olange noch kein Daten- t, blinkt ein Balken in der n Datenträger im Lese- ört das Blinken des Bal- is dem Datenträger gele-	iguration angegebenen Daten als Vorgabewerte angezeigt. befeldem gewechselt werden. Datenträger lesen von Byte Nr.: Anzahl Byte : Maske während dem Lesen vom Datenträger
	Datentrager Die Daten der zuletzt erfolgten Eing für Startadresse und Endadresse b Mit den Taste und f kann zw Mit der Taste med werden die Date Werden die eingegebenen Daten ir bzw. im Feld "Anzahl Byte :" mit d wird der Lesevorgang gestartet. Sc träger im Lesebereich erkannt wird Mitte der 2. Zeile. Befindet sich eir bereich des Schreib-/Lesekopfs, h kens auf und die Daten werden au sen. Während der Zeit, in der die Daten vo dem Schreib-/Lesebereich entfernt w	gabe bzw. die in der Konfi zzw. Anzahl Byte werden vischen den beiden Eingal in übernommen. m Feld "bis Byte Nr.:" ler Taste em bestätigt, olange noch kein Daten- i, blinkt ein Balken in der n Datenträger im Lese- ört das Blinken des Bal- s dem Datenträger gele- m Datenträger gelesen werd- rerden!	iguration angegebenen Daten als Vorgabewerte angezeigt. befeldern gewechselt werden. Datenträger lesen

	Datenträger bearbeiten
Datenträger lesen	Soll der Lesevorgang abgebrochen werden, ist die Taste Enter zu drücken.
1 (Fortsotzung)	Nach einem erfolgreichen Lesevorgang verschwindet der Balken und die Daten werden auf dem Display angezeigt.
(Fortsotzung)	Die Daten werden abhängig vom eingestellten Format als HEX-Werte, ASCII-Zeichen, BCD- Ziffern oder BINÄR dargestellt. Mit den Tasten 🔤 und 폐 kann zwischen den Darstellungsformaten umgeschaltet werden:
	Taste Darstellungsformat Taste Darstellungsformat Image: BCD -> BIN Image: BCD -> BIN Image: BCD -> BIN
	Anzeige 0010 - 0049 Anzeige 0100 - 0119 Anzeige 0150 - 0163
	ABCDEFGHIJKLMNOPQRST 01234567890123456789 00 01 02 03 04 05 06 UVWXYZ123456789abcde 01234567890123456789 07 08 09 0A 0B 0C 0D
	Anzeige der Daten imAnzeige der Daten imAnzeige der Daten imASCII-FormatBCD-FormatHEX-Format
	Nach Betätigen der Taste Ener befindet man sich wieder im Hauptmenü 1.



21	-
	Funktionsbeschreibung BIS M-81_ Datenträger bearbeiten
Fehler beim L (Fortsetzung)	Fehlermeldung "??? Abstand ???" Patenträger lesen - Abstand Datenträger - Schreib-/Lesekopf zu groß
	 Abstand 222 von Byte Nr.: 0 Anzahl Byte : 0600 Endadresse (= Startadresse + Anzahl Byte) liegt außerhalb der Kapazität des Datenträgers Datenträger defekt
	Fehlermeldung 3 beim Lesen
	Der Handy-Programmer wiederholt den Lesevorgang noch 2 Mal. Schlägt auch der 3. Lesevorgang fehl, wird mit die-
	ser Fehlermeldung abgebrochen: Fehler beim Lesen Abstand / sonstig.
	Fehlermeldung 4 beim Lesen
	deutsch BALLUFF 21

	Datentrager bearbeiten						
Auf Datenträger schreiben 2	Wird Menüpunkt 2 "Schreiben" im Hauptmenü ausgewählt, erscheint die Eingabemaske zum Schreiben auf den Datenträger. Es wird die Eingabe der Startadresse und – abhängig vom konfigurierten Eingabemodus – der Endadresse oder der Anzahl Byte verlangt.						
	Datenträg. schreiben		Datenträg. schreiber				
	von Byte Nr.: bis Byte Nr.:	oder	von Byte Nr.: Anzahl Byte :				
	Eingabemenü 1 zum Schreiben auf den Datenträger		Eingabemenü 2 zum Schreiben auf den Datenträger				
	Eingabemenü 1 zum Schreiben auf den Datenträger Die Daten der zuletzt erfolgten Eir Daten für Startadresse und Endac Mit den Tasten 1 und 1 kann zw der Taste werden die Daten ü	ngabe bzw. die in der Stan dresse bzw. Anzahl Byte w vischen den beiden Eingat bernommen.	Eingabemenü 2 zum Schreiben auf den Datenträger dard-Konfiguration angegebene erden als Vorgabewerte benutzt. pefeldern gewechselt werden. Mi				
	Eingabemenü 1 zum Schreiben auf den Datenträger Die Daten der zuletzt erfolgten Eir Daten für Startadresse und Endac Mit den Tasten 📋 und 🗍 kann zw der Taste 🔤 werden die Daten ü Werden die eingegebenen Daten i im Feld "Anzahl Byte :" mit der Ta	ngabe bzw. die in der Stan dresse bzw. Anzahl Byte w vischen den beiden Eingat bernommen. m Feld "bis Byte Nr.:" bzw ste cm bestätigt, wird der	Eingabemenü 2 zum Schreiben auf den Datenträger dard-Konfiguration angegebene erden als Vorgabewerte benutzt. befeldern gewechselt werden. Mi				
	Eingabemenü 1 zum Schreiben auf den Datenträger Die Daten der zuletzt erfolgten Eir Daten für Startadresse und Endac Mit den Tasten 🗍 und 🗍 kann zw der Taste 페 werden die Daten ü Werden die eingegebenen Daten i im Feld "Anzahl Byte :" mit der Ta Schreibvorgang gestartet. Solang Schreibbereich erkannt wird, blir der 2. Zelle. Befindet sich ein Da	ngabe bzw. die in der Stan fresse bzw. Anzahl Byte w vischen den beiden Eingat bernommen. im Feld "bis Byte Nr.:" bzw ste ein bestätigt, wird der ge noch kein Datenträger ikt ein Balken in der Mitt tenträger im Schreib-	Eingabemenü 2 zum Schreiben auf den Datenträger dard-Konfiguration angegebene erden als Vorgabewerte benutzt. befeldern gewechselt werden. Mi Datenträg. schreiber von Byte Nr.: Anzahl Byte :				
	Eingabemenü 1 zum Schreiben auf den Datenträger Die Daten der zuletzt erfolgten Eir Daten für Startadresse und Endac Mit den Tasten 🗍 und 🗍 kann zw der Taste 💷 werden die Daten ü Werden die eingegebenen Daten i im Feld "Anzahl Byte:" mit der Ta Schreibborgang gestartet. Solang Schreibbereich erkannt wird, blir der 2. Zeile. Befindet sich ein Da bereich des Schreib-/Lesekopfs, I kens auf und die Daten werden au ben.	ngabe bzw. die in der Stan dresse bzw. Anzahl Byte w vischen den beiden Eingat bernommen. im Feld "bis Byte Nr.:" bzw ste End bestätigt, wird der ge noch kein Datenträger ikt ein Balken in der Mitta atenträger im Schreib- hört das Blinken des Bal- Jf den Datenträger geschri	Eingabemenü 2 zum Schreiben auf den Datenträger dard-Konfiguration angegebene erden als Vorgabewerte benutzt. befeldern gewechselt werden. Mi Datenträg. schreiber von Byte Nr.: Anzahl Byte : Maske während dem Schreiber auf den Datenträger				

23	8
	Funktionsbeschreibung BIS M-81_ Datenträger bearbeiten
Fehler beim Schreiben	Tritt während des Schreibens ein Fehler auf, wird eine Fehlermeldung auf dem Display ausge- geben. Fehlermeldung "Datenträger entfernt "
	Fellermeloung Datemager enterna
	1111 FEHLER 1111 - Datenträger zu früh aus dem Schreibbereich entfernt - - Abstand Datenträger – Schreib-/Lesekopf zu groß
	Fehler b. Schreiben Datenträger entfernt Nach Bestätigen der Fehlermeldung mit der Taste Eme befindet man sich wieder im Hauptmenü 1.
	Fehlermeldung 1 beim Schreiben
	Fehlermeldung "Maximale Endadresse überschritten"
	Fehlerursachen:
	EHLER EHLER Endadresse ist größer als die konfigurierte Kapazität des Detenträgere
	Maximale Endadresse überschritten Nach Bestätigen der Fehlermeldung mit der Taste
	Fehlermeldung 2 beim Schreiben
	deutsch BALLUFF 23

24	Funktionsbeschreibung BIS M-81_ Datenträger bearbeiten	
Fehler beim Schreiben (Fortsetzung)	Fehlermeldung "??? Abstand ???"Datenträg. schreiben ??? Abstand ??? von Byte Nr.: 0 Anzahl Byte : 0600Fehlerursachen: - Abstand Datenträger - Sc - Endadresse (= Startadress halb der Kapazität des Da - Datenträger defektFehlermeldung 3 beim SchreibenDatenträger defekt	chreib-/Lesekopf zu groß se + Anzahl Byte) liegt außer- atenträgers
	Der Handy-Programmer wiederholt den Schreibvorgang noch 2 Mal. Schlägt auch der 3. Schreibvorgang fehl, wird mit dieser Fehlermeldung abgebrochen:	<pre>!!!! FEHLER !!!! </pre>
		Fehlermeldung 4 beim Schreiben
24 BALLUFF deuts	sch)	





	Funktionsbeschreibung BIS M-81_ Arbeiten mit Dateien	
Datei speichern	Über den Menüpunkt 2 "Speichern" im Dateimenü können diejenigen Daten, die zuletzt von eitsnem Datenträger gelesen wurden und sich noch im Arbeitsneicher des Handv-	Bitte Namen eingeben
	Programmers befinden, als Datei im EEPROM-Speicher abge- speichert werden.	-
		Datei im EEPROM-Speicher abspeichern
Datenaustausch über die serielle Schnittstelle	Über den Menüpunkt 3 "Datenüber" (für Datenübertragung) kö Schnittstelle von einem PC / Laptop in den Handy-Programme kehrt. Weitere Einzelheiten siehe 🗋 42ff.	nnen Dateien über die serielle r übertragen werden und umg
Datei(en) löschen	Über den Menüpunkt 4 "Lösche" im Dateimenü können ge- speicherte Dateien gelöscht werden.	Löschmenü
	Mit dem Menüpunkt 1 wird eine einzelne Datei gelöscht. Es öffnet sich eine Eingabemaske, in welcher der Dateiname einzugeben ist.	2 Alle Einträge 6 <
	Mit dem Menüpunkt 2 werden alle gespeicherten Dateien gemeinsam gelöscht.	Löschmenü
Verzeichnis anzeigen	Über den Menüpunkt 5 "Verzei" (für Verzeichnis) kann die Liste der gespeicherten Dateien angezeigt werden.	Daten1 Daten5
	Mit der Taste Ener wird die Anzeige beendet.	Daten2 Daten6 Daten3 Daten4

28	Funktionsbeschreibun Spezielle Datenträger	g BIS M-81_ funktionen	
Hauptmenü 2 6	Durch Auswahl des Menüpun menü 1 erreicht man das Hau	kts 6 "Weiter" im Haupt- Iptmenü 2.	Hauptmenü 2 1 Init 2 Serial Number 6 <
Init-Menü: Datenträger initialisieren 1	Init-Menü I CRC 6 < Init-Menü CRC Mit dem Menüpunkt 1 "CRC" den Betrieb mit CRC-Datenpr	Nach Auswahl des Menüpunl gelangt man zum Init-Menü. wird der Datenträger mit 00 _{Hex} üfung vorbereitet.	Hauptmenu 2 kts 1 "Init" im Hauptmenü 2 beschrieben und dadurch für
Serial Number lesen 2	Serial 11 22 33 44 Number 55 66 77 88 DTTyp: BIS M-1XX	Über den Menüpunkt 2 "Seria (Mifare) oder 8 Byte (ISO1569 Datenträgers ausgelesen und ist nur lesbar. Weiterhin wird XX steht für Balluffdatenträge zeigt, die Balluff nicht unterst Mit Emei wird wieder in das Ho	al Number" wird die 4 Byte 33) lange Seriennummer des im HEX-Format angezeigt. Sie der Datenträgertyp angezeigt. rtyp. ?? wird für Typen ange- tützt. auptmenü 2 verzweigt.
28 BALLUFF deutsc	Ð		









	Funktionsbeschreibung BIS M-81_ / PC Lesen / Schreiben über die serielle Schnittstelle					
Bildung des	Byte					
Blockcheck BCC	Der Blockcheck BCC wird als EXOR-Verknüpfung aus den seriell übertragenen Binär- zeichen des Telegrammblocks gebildet. Beispiel: Lesen ab Adresse 13, 128 Byte sind zu lesen. Die Befehlszeile ohne BCC lautet: 'I. 0013 0128 10'					
	$\begin{array}{rcl} \text{BCC wird gebildet:} & \text{'L} &=& 0100\ 1100 & \text{EXOR} \\ 0 &=& 0011\ 0000 & \text{EXOR} \\ 0 &=& 0011\ 0000 & \text{EXOR} \\ 1 &=& 0011\ 0001 & \text{EXOR} \\ 3 &=& 0011\ 0001 & \text{EXOR} \\ 0 &=& 0011\ 0001 & \text{EXOR} \\ 1 &=& 0011\ 0001 & \text{EXOR} \\ 2 &=& 0011\ 0001 & \text{EXOR} \\ 2 &=& 0011\ 0001 & \text{EXOR} \\ 1 &=& 0011\ 0000 & \text{EXOR} \\ 1 &=& 0011\ 0000 & \text{EXOR} \end{array}$					
Variante bei Abschluss mit 'CR' anstatt BCC	ergibt als Blockcheck: BCC = 0100 0100 = 'D' Bei Bedarf kann der Abschluss mittels Blockcheck BCC durch ein spezielles ASCII-Zeichen ersetzt werden. Dies ist: – Carriage Return 'CR'					
	Beispiel: Lesen ab Adresse 13, 128 Byte sind zu lesen Die Befehlszeile mit 'CR' als Abschluss lautet: 'L 0013 0128 10 CR'					
	(deutsch) BALLUFF					

Task	Datenfluss	Befehl	Startadresse	Anzahl der		Abschluss	Quittung	Start	Daten (von	Abschluss	Quittung
			des ersten zu übertragen- den Byte	zu über- tragenden Byte			2)	zur Über- tragung	Startadresse bis Startadresse + Anzahl Bytes)		2)
Lesen	vom steuernden System zum BIS	'L'	A3 A2 A1 A0 '0 0 0 0' bis Speicherka- pazität -1	L3 L2 L1 L0 '0 0 0 1' bis Speicherka- pazität	'1' '0'	BCC oder 'CR'		<stx></stx>			
	vom BIS zum steuernden System			-			<ack>'0' oder <nak> + Fehler-Nr.</nak></ack>		D1 D2 D3 Dn	BCC oder 'CR'	
Schreiben	vom steuernden System zum BIS	'P'	A3 A2 A1 A0 '0 0 0 0' bis Speicherka- pazität -1	1) L3 L2 L1 L0 '0 0 0 1' bis Speicherka- pazität	'1' '0'	BCC oder 'CR'		<stx></stx>	D1 D2 D3 Dn	BCC oder 'CR'	
	vom BIS zum steuernden System			I			<ack>'0' oder <nak> + Fehler-Nr.</nak></ack>				<ack>'0 oder <nak> + Fehler-N</nak></ack>
				1)					1)		

	Lesen / Schreiben über die serielle Schnittstelle
Telegrammbeispiel	Es sollen 10 Byte ab Adresse 50 vom Datenträger gelesen werden.
Lesen vom Daten-	Das Steuersystem sendet 'L 0 0 5 0 0 0 1 0 1 0 I' BCC (49 Hex)
träger mit Blockcheck (BCC)	Adresse des ersten zu lesenden Byte Anzahl der zu lesenden Byte Fest im Protokoll Fest im Protokoll
	Der Handy-Programmer quittiert mit <ack> '0'</ack>
	Das Steuersystem glot den Startbefeni <stx> Der Handv-Programmer liefert die Daten vom Datenträger '1 2 3 4 5 6 7 8 9 A F' BCC (70 Hex)</stx>
Telegrammbeispiel zu ∏34:	Es sollen 5 Byte ab Adresse 500 auf den Datenträger geschrieben werden.
Schreiben auf den Datenträger mit Blockcheck (BCC)	Adresse des ersten zu schreibenden Byte Anzahl der zu schreibenden Byte Fest im Protokoll
	Der Handy-Programmer quittiert mit <ack> '0'</ack>
	Der Handy-Programmer quittiert mit CACK> '0'
	Angaben in spitzen Klammern stellen ein Steuerzeichen dar. Angaben in Hochkommata stellen das/die ieweilige/n Zeichen im ASCII-Code dar.

Schreiber	n eines kor	nstan	ten Wertes a	uf den Dat	enträg	ger					
Dieser Be schreiben	fehl kann z den Byte.	um L	öschen eines	Datenträge	ers vei	wendet v	verden. N	/lan spa	rt die Zeit zur Ü	Übertragur	ng der z
Task	Datenfluss	Be- fehl	Startadresse des ersten zu übertragen- den Byte	Anzahl der zu über- tragenden Byte		Abschluss	Quittung 2)	Start zur Über- tragung	Daten (von Startadresse bis Startadresse + Anzahl Byte)	Abschluss	Quittung 2)
Schreiben	vom steuernden System zum BIS	'C'	A3 A2 A1 A0 '0 0 0 0' bis Speicherka- pazität -1	L3 L2 L1 L0 '0 0 0 1' bis Speicherka- pazität	'1' '0'	BCC oder 'CR'		<stx></stx>	D	BCC oder 'CR'	
	vom BIS zum steuernden System						<ack>'0' oder <nak> + F-Nr.</nak></ack>				<ack>'0 oder <nak> + F-Nr.</nak></ack>
				1)					1)		
2) Als Quitt	ung kommt < <i>k</i>	ACK> '	0', wenn kein Fe	hler aufgetrete	en ist, o	der <nak></nak>	+ 'Fehler-N	Ir.', wenn (ein Fehler aufgetret	en ist.	

	Lesen / Schreiben über die serielle Schnittstelle
Telegrammbeispiel zu ∏36: Schreiben auf den	Es sollen 500 Byte ab Adresse 20 auf den Datenträger mit dem ASCII Datenwert 0 (30 Hex) geschrieben werden.
Schreiben auf den Datenträger	Das Steuersystem sendet 'C 0 0 2 0 0 5 0 0 1 0 E' BCC (46 Hex)
mit Blockcheck (BCC)	Adresse des ersten zu schreibenden Byte
	Der Handy-Programmer quittiert mit <ack> '0' Das Steuersystem gibt den Startbefehl und die Daten <stx> '0 2' BCC (32 Hex) Der Handy-Programmer quittiert mit <ack> '0'</ack></stx></ack>
	Angaben in spitzen Klammern stellen ein Steuerzeichen dar. Angaben in Hochkommata stellen das/die jeweilige/n Zeichen im ASCII-Code dar.

	Telegrammaufbau und Beispiele Lesen / Schreiben über die serielle Schnittstelle Durch das Absenden des Telegramms Neustart wird ein in Arbeit befindliches Telegramm ab- gebrochen und der Handy-Programmer in den Grundzustand gebracht. Nach der Quittierung dieses Telegramms sind mindestens 1600 ms Pause vorzusehen, bevor ein neues Telegramm gestartet wird.								
Neustart des Handy- Programmers (Quit)									
Ŕ	Wichtig! D schlussze Nutzzeich	Wichtig! Der Befehl Quit ist nicht zugelassen, während der Handy-Programmer auf ein Ab- schlusszeichen wartet (BCC oder 'CR'). In dieser Situation würde Quit als Abschluss- oder Nutzzeichen fehlinterpretiert.							
	Task	Datenfluss	Befehl	Abschluss	Quittung	Abschluss			
	Neustart (Quit)	vom steuernden System zum BIS	'Q'	BCC oder 'CR'		•			
	. ,	vom BIS zum steuernden System			'Q'	BCC oder 'CR'			
		1)							
	1) Der Befeh	I Quit ist an dieser Stelle nicht zugel	assen.						
Telegrammbeispiel mit	Der Handy-Programmer soll in den Grundzustand gebracht werden.								
Blockcheck (BCC):	Das Steuer	rsystem sendet		'Q Q'	BCC (51 He	ex)			
	Der Handy	Der Handy-Programmer quittiert mit 'Q Q' BCC (51 Hex)							
	Angaben i Angaben i	n spitzen Klammern stellen ein n Hochkommata stellen das/die	Steuerzeich e jeweilige/n	ien dar. I Zeichen im AS	CII-Code dar				

•	er fur die	CRC_	16-Datenprü	fung initialis	siere	n					
Mit diesen dung bei 0 CRC-Fehle lisiert werc	n Telegramr CRC_16-Da er als Folge den, um ihn	n wird tenprü aus e wiede	ein Datenträ ifung initialisi inem missglü er verwender	äger, der sich ert. Dieses T ückten Schre n zu können.	n vor elegr eibauf	dem akti amm mus trag aufg	ven Sch ss auch etreten is	reib-/Le dann er st, d.h.	sekopf befinde neut gesendet der Datenträge	et, für die werden, v er muss ne	Verwen- wenn ei eu initia-
Bitte bead Summe au	chten Sie die us Startadres	e Tabe sse plu	lle auf ि`10! D s Anzahl Byte	lie angegeben darf die nutzb	e Anz are D	ahl nutzba atenträger	rer Byte o -Kapazitä	larf nich it nicht ü	t überschritten w berschreiten!	verden. D.h	. die
Task	Datenfluss	Befeh	Startadresse des ersten zu übertragen- den Byte	Anzahl der zu über- tragenden Byte		Abschluss	Quittung 2)	Start zur Über- tragung	Daten (von Startadresse bis Startadresse + Anzahl Byte)	Abschluss	Quittung 2)
CRC_16 Bereich initialisieren	vom steuernden System zum BIS	'Z'	A3 A2 A1 A0 '0 0 0 0' bis nutzbare Byte bei CRC -1	L3 L2 L1 L0 '0 0 0 1' bis nutzbare Byte bei CRC	'1' '0'	BCC oder 'CR'		<stx></stx>	D1 D2 D3 Dn	BCC oder 'CR'	
	vom BIS zum steuernden System						<ack>'0' oder <nak> + Fehler-Nr.</nak></ack>				<ack>'0 oder <nak> + Fehler-Ni</nak></ack>
				1)					1)		



	Lesen / Schreiben über die s Schreib-/Lesezeiten	erielle Schn	ittstelle		
Lesezeiten	Datenträger mit je 16 Byte/Block	BIS M-101	BIS M-102	1	
	Zeit zur Datenträgererkennung/serial ID	≤ 20 ms	≤ 30 ms		
	Lesen von Byte 0 bis 15	<u>≤</u> 20 ms	≤ 30 ms		
	für jeweils weitere angebrochene 16 Byte addieren Sie weitere	<u>≤</u> 10 ms	≤ 15 ms]	
Schreihzeiten	Datantyägay mit is 16 Duto/Dissir	DIC M 1 01		1	
Gennenszenten	Zeit zur Datenträgererkennung/serial ID		< 30 ms		
	Schreiben von Byte 0 bis 15	< 40 ms	< 65 ms		
	für jeweils weitere angebrochene	< 30 ms	< 45 ms		
	16 Byte addieren Sie weitere	200110	<u> </u>		
	Schwankungen im ms-Bereich sind mög Elektrische Störeinflüsse können die Sch	lich. reib-/Lesezeit erh	öhen.		
			<	deutsch	BALLUFF 41





Task	Datenfluss	Be- fehl	Dateiname 3)	Abschluss	Quittung 2)	Start zur Über- tragung	Startadresse auf dem Datenträger	Anzahl Byte auf dem Datenträger	Daten (von Startadresse bis Startadresse + Anzahl Byte)	Abschlus
Datei vom Handy- Programmer auslesen	vom steuernden System zum BIS	'G'	'D7 D0' 'MUSTER'	BCC		<stx></stx>				•
	vom BIS zum steuernden System				<ack>'0' oder <nak> + Fehler-Nr.</nak></ack>		A3 A2 A1 A0 '0 0 0 0' bis Speicherka- pazität -1	L3 L2 L1 L0 '0 0 0 1' bis Speicherka- pazität	D1 D2 D3 Dn	BCC
1) Der Befehl	Quit ist an die	ser Ste	1) lle nicht zugelas	sen.					1)	
2) Als Quittur 3) Hat der Da	ıg kommt <ac teiname weniş</ac 	:K> '0', ger als 8	wenn kein Fehle Zeichen, muss	er aufgetrete er mit Leer:	en ist, oder ∢ zeichen (20	<nak> + 'l auf 8 Z</nak>	Fehler-Nr.', wer eichen aufgefü	nn ein Fehler a llt werden.	ufgetreten ist.	

Telegrammbeispiel zu ∏43:	Die Datei MUSTER1 soll an den Handy-Programmer gesendet werden. Auf den Datenträger soll ab Adresse 27 die Anzahl von 5 Byte geschrieben werden.							
Date an den Handy- Programmer senden mit Blockcheck (BCC)	Das Steuersystem sendet 'T MUSTER1_ 0 0 2 7 0 0 0 5 M' BCC (4D Hex)							
	Dateiname (auf 8 Byte aufgefüllt) *) Adresse des ersten Byte auf dem Datenträger Anzahl Byte							
	Der Handy-Programmer quittiert mit <ack> '0' Das Steuersystem gibt den Startbefehl und die Daten <stx> '12345 3' BCC (33 Hex) Der Handy-Programmer quittiert mit <ack> '0' </ack></stx></ack>							
Telegrammbeispiel zu \144:	Die Datei MUSTER1 soll aus dem Handy-Programmer ausgelesen werden. Auf dem Datenträ ger soll ab Adresse 27 die Anzahl von 5 Byte gelesen werden.							
Datei aus dem Handy-Programmer auslesen	Das Steuersystem sendet 'G MUSTER1_ ^' BCC (5E Hex)							
mit Blockcheck (BCC)	Dateiname (auf 8 Byte aufgefüllt) *)							
	Der Handy-Programmer quittiert mit CCC OCC CCC ACC CCC CCC CCC CCC CCC CCC ACC CCC CCC ACC							
	Das Steuersystem sendet <stx> Der Handy-Programmer sendet '0027000512345 1' BCC (33 Hex)</stx>							
	*) Auch ein Leerzeichen La das zum Auffüllen benutzt wird, muss im BCC berücksichtigt werden.							

	Telegrai	mmaufbau i	und	Beispie	ele				
Dateiverzeichnis vom Handy-	Dieser Bef verzeichnis	Dieser Befehl wird dazu verwendet, um das im Handy-Programmer gespeicherte Datei- verzeichnis auszulesen.							
Programmer in den PC / Laptop auslesen	Task	Datenfluss	Befehl	Abschluss	Quittung 2)	Start zur Übertragung	Daten	Abschlus	
	Verzeichnis aus dem	vom steuernden System zum BIS	'D'	BCC		<stx></stx>			
	Handy- Programmer auslesen	vom BIS zum steuernden System			<ack>'0' oder <nak> + Fehler-Nr.</nak></ack>		D1 D2 D3 Dn	BCC	
				1)			1)		
Telegrammbeispiel: Dateiverzeichnis aus	Das Dateiverzeichnis soll aus dem Handy-Programmer ausgelesen werden. Auf dem Handy- Programmer sind 2 Dateien gespeichert.							Handy-	
Programmer auslesen mit Blockcheck (BCC)	Das Steuer	system sendet		'D	D' BCC (44	Hex)			
	Der Handy Das Steuer	Der Handy-Programmer quittiert mit <ack> '0' Das Steuersystem sendet <stx></stx></ack>							
	Der Handy	-Programmer se	ndet	'00	02MUSTEI	R1_00270005 MUS	STER2_00350	012 EOT	
							BCC	(04 Hex)	
		*) Auch ein Leerzeichen un das zum Auffüllen benutzt wird, muss im BCC berücksichtigt werden.							

Eine Datei im Handy- Programmer löschen	Dieser Befehl wird dazu verwendet eine im Handy-Programmer gespeicherte Datei zu lö- schen.							
	Task	Datenfluss	Befeh	Dateiname 3)	Abschluss	Quittung 2)		
	Eine Datei im Handy- Programmer löschen	vom steuernden System zum BIS	'E'	'D7 D0' 'MUSTER'	BCC			
		vom BIS zum steuernden System				<ack>'0' oder <nak> + Fehler-Nr.</nak></ack>		
		· · · · ·			1)			
Datei im Handy-	Das Steuersvstem sendet 'E MUSTER1\' BCC (5C Hex)							
mit Blockcheck (BCC)						,		
	Dateiname (a	uf 8 Byte aufgefül	lt)*) -					
	Der Handy-Progra	mmer quittiert mit	</td <td>CK> '0'</td> <td></td> <td></td>	CK> '0'				
					DCC hardelesia	htint		
	*) Auch ein Leerzeiche	n _L , das zum Auffüller) benut:	a wira, muss im	BCC Derucksic	nligt werden.		

Alle Dateien im Handy-Programmer	Dieser Befehl wird dazu verwendet eine im Handy-Programmer gespeicherte Datei zu lö- schen.						
löschen	Task	Datenfluss	Befehl	Abschluss	Quittung 2)		
	Alle Dateien im Handy- Programmer löschen	vom steuernden System zum BIS	'K'	BCC			
		vom BIS zum steuernden System			<ack>'0' oder <nak> + Fehler-Nr.</nak></ack>		
				1)			
Telegrammbeispiel: Alle Dateien im	Alle Dateien sollen aus dem Handy-Programmer gelöscht werden.						
Handy-Programmer löschen	Das Steuersystem se	endet	кк	- всс (4В н	lex)		
mit Blockcheck (BCC)	Der Handy-Program	mer quittiert mit	<acł< td=""><td><> '0'</td><td></td></acł<>	<> '0'			











34	BIS M-81_ Technische Dat	en	
Gehäuse	Gehäusematerial Abmessungen Gewicht mit Akku		Kunststoff ABS ca. 97 x 232 x 55 mm ca. 420 g
	Tastatur		32 Tasten, 4 × 8 mm, alphanumerisch und Sonderzeichen
	Anzeige		LCD-Display, 80 Zeichen / 4 Zeilen
Anschlüsse	Serielle Schnittstelle Lesekopfanschluss	RS 232 BIS M-810 BIS M-811 BIS M-812	Einbaustecker 5-polig interne Antenne Einbaustecker 8-polig interne Antenne im M18 Gehäuse
	Ladebuchse	Klinkenbuchse 2,5 mm geeignet für BIS C-701-A	
Schutzart	Schutzart		IP 40 (in angeschlossenem Zustand)
Temperaturbereich	Umgebungstemperat	ur	0 °C bis +50 °C
54 BALLUFF (deutsc)	D		

	BIS M-81_ Technische Daten					
Elektrische Daten	Spannungs- und Stromversorgung Kapazität max. Ladespannung Ladestrom Ladezeit	2,4 V Akkupack NiMH 1650 mAh 5 - 10 V, intern begrenzt ca. 400 mA ca. 4 h				
Stromverbrauch	Stromverbrauch, normaler Betrieb Stromverbrauch, Lesen/Schreiben	ca. 65 mA ca. 275 mA				
	Mit dem CE-Zeichen bestätige der EG-Richtlinie 89/336/EV	n wir, dass unsere Produkte den Anforderungen VG (EMV-Richtlinie)				
	und des EMV-Gesetzes entsprechen. In unserem EMV-Labor, das von der DATech für Prüfungen der elektromagnetischen Verträglichkeit akkreditiert ist, wurde der Nachweis erbracht, dass die Balluff-Produkte die EMV-Anforderungen der Fachgrundnorm					
	EN 61000-6-4 (Emission), EN 61000-6-2 (Störfestigkeit) erfüllen.				

56	
	BIS M-81_ Bestellinformationen
Typenschlüssel	BIS M-810-003
	Balluff Identifikations-System Baureihe M Hardware-Typ 810 = interne Antenne mit Tastatur und Display, zum Anschluss an PC oder Laptop mit 9-poligem SUB-D-Stecker (seriell) 811 = Einbaustecker 8-polig, zum Anschluss von Standard Schreib-/Leseköpfen BIS M-3 (ab Hardware-Stand V2.0) über Anschlusskabel, mit Tastatur 812 = interne Antenne im M18 Gehäuse mit Tastatur und Display, zum Anschluss an PC oder Laptop mit 9-poligem SUB-D-Stecker (seriell) Schnittstelle 0 = RS 232 (V.24 Schnittstelle) Software-Typ 003 = Balluff Software für BIS M-81
56 BALLUFF deuts	sch

	BIS M-81_ Zubehör					
Zubehör (im Lieferumfang enthalten)	Die Handlesegeräte werden mit einer Schutztasche ausgeliefert.					
Zubehör	Artikel		Bestellbezeichnung			
(optional, nicht im	Ladegerät (siehe auch 🗅 58)		BIS C-701-A			
Elolor annung)	Ladeschale (siehe auch 🗋 59)		BIS C-702-A			
	Schnittstellen-Kabel für den Anschluss des Handy-Programmers BIS M-81_ an eine 9-polige SUB-D COM-Schnittstelle an einem Laptop oder PC	2 m 3 m	BIS C-522-PVC-02 BIS C-522-PVC-03			
	Zusätzlicher Akku (siehe auch 🗅 60)		125997			
	Für BIS M-811					
	Anschlussstecker für Schreib-/Leseköpfe BIS M-3 (ohne Kabel)		BKS-S117-00			
	Anschlusskabel für Schreib-/Leseköpfe BIS M-3 (max. 2 m) *)		BKS-S115-PU-02			
	Leseköpfe BIS M-3 (siehe Katalog) ab Hardware-Stand V2.0					
	 ein Stecker angespritzt anderes Ende offen (f ür BKS-S117-00) 					



	BIS M-81_ Zubehör						
Zubehör	Ladeschale BIS C-702-A						
(optional, nicht im Lieferumfang)	bestehend aus Lade-/Netzteil mit Ladezustandsanzeige und Ladeschale						
Technische Daten	Merkmal	Wert / Einheit / Bedingung					
	U _{Primär}	100 - 240 V _{AC}	Ladezustandsanzeige:				
	F _{Primär}	50 - 60 Hz	LED rot blinkend Akku lädt				
	U _{Sek.}	10 V _{DC} ±5%	_				
	I _{Sek.}	800 mA	_				
	T _A	-40 +70 °C	- I Officie and a little				
	Primärstecker auswechselbar	EURO, UK, USA (im Lieferumfang enthalten)	Ladezustands-				
	Zulassung	CE, UL	anzeige				
	Material: PPI Farbe: sch Gehäuse: MP Ausgangsleitung: Länge:	E-V1-125°C warz P10 11.7892.503-80 2000 mm, 3 x 0,5 mm ² Stecker geseher	Primärstecker auswechselbar D				
		geseher	deutsch BALLUF				

60		L		
		BIS M-81_ Zubehör		
	Zubehör (optional, nicht im Lieferumfang)	Zusätzlicher Akku Spannungs- und Stromversorgung Kapazität	2,4 V Akkupack NiMH 1650 mAh	
	60 BALLUFF deutsch			

l

				Anha	ang	, asc	CII-Ta	belle											
Deci- mal	Hex	Control Code	ASCII	Deci- mal	Hex	Control Code	ASCII	Deci- mal	Hex	ASCII	Deci- mal	Hex	ASCII	Deci- mal	Hex	ASCII	Deci- mal	Hex	ASC
0	00	Ctrl @	NUL	22	16	Ctrl V	SYN	44	2C	,	65	41	А	86	56	V	107	6B	k
1	01	Ctrl A	SOH	23	17	Ctrl W	ETB	45	2D	-	66	42	В	87	57	W	108	6C	1
2	02	Ctrl B	STX	24	18	Ctrl X	CAN	46	2E		67	43	С	88	58	Х	109	6D	m
3	03	Ctrl C	ETX	25	19	Ctrl Y	EM	47	2F	/	68	44	D	89	59	Y	110	6E	n
4	04	Ctrl D	EOT	26	1A	Ctrl Z	SUB	48	30	0	69	45	Е	90	5A	Ζ	111	6F	0
5	05	Ctrl E	ENQ	27	1B	Ctrl [ESC	49	31	1	70	46	F	91	5B	[112	70	р
6	06	Ctrl F	ACK	28	1C	Ctrl \	FS	50	32	2	71	47	G	92	5C	\	113	71	q
7	07	Ctrl G	BEL	29	1D	Ctrl]	GS	51	33	3	72	48	Н	93	5D]	114	72	r
8	08	Ctrl H	BS	30	1E	Ctrl ^	RS	52	34	4	73	49	1	94	5E	^	115	73	s
9	09	Ctrl I	HT	31	1F	Ctrl _	US	53	35	5	74	4A	J	95	5F		116	74	t
10	0A	Ctrl J	LF	32	20		SP	54	36	6	75	4B	К	96	60	`	117	75	u
11	0B	Ctrl K	VT	33	21		!	55	37	7	76	4C	L	97	61	а	118	76	v
12	0C	Ctrl L	FF	34	22		•	56	38	8	77	4D	М	98	62	b	119	77	w
13	0D	Ctrl M	CR	35	23		#	57	39	9	78	4E	Ν	99	63	с	120	78	х
14	0E	Ctrl N	SO	36	24		\$	58	3A	:	79	4F	0	100	64	d	121	79	у
15	0F	Ctrl O	SI	37	25		%	59	3B	;	80	50	Р	101	65	е	122	7A	z
16	10	Ctrl P	DLE	38	26		&	60	3C	<	81	51	Q	102	66	f	123	7B	{
17	11	Ctrl Q	DC1	39	27		'	61	3D	=	82	52	R	103	67	g	124	7C	
18	12	Ctrl R	DC2	40	28		(62	3E	>	83	53	S	104	68	h	125	7D	}
19	13	Ctrl S	DC3	41	29)	63	3F	?	84	54	Т	105	69	i	126	7E	~
20	14	Ctrl T	DC4	42	2A		*	64	40	0	85	55	U	106	6A	j	127	7F	DEL
21	15	Ctrl U	NAK	43	2B		+												







Installation and Installation and operation should be carried out only	
operation work and improper use will void the warranty and lial	by trained personnel. Unauthorized bility.
When installing the Handy Programmer, follow the ch	apter "Start-up" closely.
Use and testing Prevailing safety regulations must be adhered to whe particular, steps must be taken to ensure that a failur tem does not result in hazards to persons or equipme	n using the Identification System. In e of or defect in the identification sys ent.
This includes maintaining the specified ambient condi ality of the Identification System including all its asso	itions and regular testing for function ociated components.
Function faults Should there ever be indications that the identification should be taken out of commission and secured from u	n system is not working properly, it inauthorized use.
Scope This manual applies to Handy Programmer in the seri BIS M-812-0-003 (Software version V1.2, Hardware BIS M-811-0-003 (Software version V1.2, Hardware	es BIS M-810-0-003 and version V2.0 and higher) as well as version V1.1 and higher).
BIS M-811-0-003 (Software version V1.2, Hardware	version VI.I and higher).





Operation, keyboard and display The Handy Programmer features menu-driven operation. Entries are made on a memb keypad with 32 keys. Some keys have multiple functions. There are two types of multipluction: 2 functions Switch using the Image Rey 3 letters Press 1x = 1st letter, 2x = 2nd letter, 3x = 3rd letter Switching to capital letters using the Image Rey The LCD display where all data are displayed has 4 lines with 20 characters each. Languages German/English From the main menu you can press Shift+F1 to change the language. The selected lat is only retained however until the next time the Handy Programmer is turned off. To m selection permanent, you must select it in the configuration menu. Menu/Controls The main functions of the unit are shown in Main Menu 1. Each sub-menu is indicated number. Pressing the appropriate number key opens the corresponding menu and the ated window. In some cases the function is carried out immediately, in other cases you first make some menu selections. For quick orientation, the key / key sequence is always indicated in the manual for reaching the respective function or menu, always starting from Main Menu 1. Image: Main menu Image: Main Menu Image: Wait menu Image: Main Menu Image: Main menu Image: Main Menu Image: Main menu Image: Main Menu		BIS M-81_ Basic knowledge for the application
 2 functions Switch using the See key 3 letters press 1x = 1st letter, 2x = 2nd letter, 3x = 3rd letter Switching to capital letters using the See key The LCD display where all data are displayed has 4 lines with 20 characters each. From the main menu you can press Shift+F1 to change the language. The selected lat is only retained however until the next time the Handy Programmer is turned off. To m selection permanent, you must select it in the configuration menu. Menu/Controls The main functions of the unit are shown in Main Menu 1. Each sub-menu is indicated number. Pressing the appropriate number key opens the corresponding menu and the ated window. In some cases the function is carried out immediately, in other cases you first make some menu selections. For quick orientation, the key / key sequence is always indicated in the manual for reaching the respective function or menu, always starting from Main Menu 1. 	Operation, keyboard and display	The Handy Programmer features menu-driven operation. Entries are made on a membrane keypad with 32 keys. Some keys have multiple functions. There are two types of multiple function:
Languages German/English The LCD display where all data are displayed has 4 lines with 20 characters each. From the main menu you can press Shift+F1 to change the language. The selected lai is only retained however until the next time the Handy Programmer is turned off. To m selection permanent, you must select it in the configuration menu. Menu/Controls The main functions of the unit are shown in Main Menu 1. Each sub-menu is indicated number. Pressing the appropriate number key opens the corresponding menu and the ated window. In some cases the function is carried out immediately, in other cases you first make some menu selections. For quick orientation, the key / key sequence is always indicated in the manual for reaching the respective function or menu, always starting from Main Menu 1. Image: Control of the section of the section of the section of the respective function or menu, always starting from Main Menu 1. Image: Control of the section of the sectio		2 functions Switch using the $\frac{1}{3}$ key 3 letters press 1x = 1st letter, 2x = 2nd letter, 3x = 3rd letter Switching to capital letters using the $\frac{1}{3}$ key
Languages German/English From the main menu you can press Shift+F1 to change the language. The selected lai is only retained however until the next time the Handy Programmer is turned off. To m selection permanent, you must select it in the configuration menu. Menu/Controls The main functions of the unit are shown in Main Menu 1. Each sub-menu is indicated number. Pressing the appropriate number key opens the corresponding menu and the ated window. In some cases the function is carried out immediately, in other cases you first make some menu selections. For quick orientation, the key / key sequence is always indicated in the manual for reaching the respective function or menu, always starting from Main Menu 1. Image: Control and the second always indicated in the manual for reaching the respective function or menu, always starting from Main Menu 1. Image: Control always indicated in the manual for reaching the respective function or menu, always starting from Main Menu 1. Image: Control always indicated in the manual for reaching the respective function or menu, always starting from Main Menu 1. Image: Control always indicated in the manual for reaching the respective function or menu, always starting from Main Menu 1. Image: Control always indicated in the manual for reaching the respective function or menu always starting from Main Menu 1.		The LCD display where all data are displayed has 4 lines with 20 characters each.
Menu/Controls The main functions of the unit are shown in Main Menu 1. Each sub-menu is indicated number. Pressing the appropriate number key opens the corresponding menu and the ated window. In some cases the function is carried out immediately, in other cases you first make some menu selections. For quick orientation, the key / key sequence is always indicated in the manual for reaching the respective function or menu, always starting from Main Menu 1. Image: Constraint of the set of	Languages German/English	From the main menu you can press Shift+F1 to change the language. The selected language is only retained however until the next time the Handy Programmer is turned off. To make the selection permanent, you must select it in the configuration menu.
For quick orientation, the key / key sequence is always indicated in the manual for reaching the respective function or menu, always starting from Main Menu 1.	Menu/Controls	The main functions of the unit are shown in Main Menu 1. Each sub-menu is indicated by a number. Pressing the appropriate number key opens the corresponding menu and the associated window. In some cases the function is carried out immediately, in other cases you must first make some menu selections.
Main menu 1 READ 4 File 1 Init 2 WRITE 5 Config 2 Serial Number		For quick orientation, the key / key sequence is always indicated in the manual for directly reaching the respective function or menu, always starting from Main Menu 1
3 Edit 6 More 6 <		
Main menu 1 Main menu 2		Main menu Main Menu 2 1 READ 4 File 2 WKITE 5 Config 3 Edit 6 More

	Basic knowledge for the application
Battery operation	The device is powered by a rechargeable battery. The current draw when reading or writing is 275 mA. When there is no read/write procedure in process, the unit has a current draw of 65 mA.
	The system components are powered by the Handy Programmer. The data carrier repre- sents an independent unit, and does not require any cable-supplied power but rather gets its energy from the read/write head. The latter sends a continuous carrier signal which powers the data carrier as soon as the required distance is reached. The read/write proce- dure takes place during this phase, and may be static or dynamic.
Selecting read/write heads on the BIS M-811	Various read/write heads *) are available for the Handy Programmer. These are connected to the Handy Programmer using a jack plug. Which read/write head *) model is used depends on the data carrier type used. The BKS-S115-PU-02 *) adapter cable can be used to connect a series BIS M-3 read/write head (Hardware version V2.0 and higher).
Dialog mode	The Handy Programmer writes to or reads from the data carrier through the read/write head. To prepare data for writing or change data that have been read, the Handy Programmer features an editor function. The data can be read from or written to the data carrier in ASCII, HEX, BCD or BINARY format.
	Switch formats for the displayed data by pressing the act and and the second
	Key Format Key Format
	Key Format Key Format Image: Solution of the displayed data by pressing into in a logicity Key Format Image: Solution of the displayed data by pressing into in a logicity Key Format Image: Solution of the displayed data by pressing into in a logicity Key Format Image: Solution of the displayed data by pressing into in a logicity Key Format Image: Solution of the displayed data by pressing into in a logicity Image: Solution of the displayed data by pressing into in a logicity Image: Solution of the displayed data by pressing into in a logicity Image: Solution of the displayed data by pressing into in a logicity Image: Solution of the displayed data by pressing into in a logicity Image: Solution of the displayed data by pressing into in a logicity Image: Solution of the displayed data by pressing into in a logicity Image: Solution of the displayed data by pressing into in a logicity Image: Solution of the displayed data by pressing into in a logicity Image: Solution of the displayed data by pressing into in a logicity Image: Solution of the displayed data by pressing into in a logicity Image: Solution of the displayed data by pressing in a logicity Image: Solution of the displayed data by pressing in a logicity Image: Solution of the displayed data by pressing in a logicity Image: Solution of the displayed data by pressing in a logicity Image: Solution of the displayed data by pressing in a logicity <

9		
	BIS M-81_ Basic knowledge for the applicat	ion
Data security f written and rea	When sending data between the read/write h quired for recognizing whether the data were	ead and the data carrier a procedure is re- correctly read or written.
data	The processor is supplied with standard Ball ing. In addition to this procedure a second a Here a test code is written to the data carrier any time or location.	uff procedure of double reading and compar- Iternative is available: CRC_16 data checking. allowing data to be checked for validity at
	Advantages of CRC 16	Advantages of double reading
	Data checking even during the non-active phase (data carrier outside read/write head zone).	No bytes on the data carrier need to be reserved for storing a check code.
	Shorter read times since each page is read only once.	Shorter write times since no CRC needs to be written.
	Since both variations have their advantages of to select which method of data checking he writer data").	Jepending on the application, the user is free vishes to use (see Configuration on ∩ 15 "Car-
	It is not permitted to operate the system using bo	oth check procedures!
		english BALLUFF 9

	BIS M-81_ Basic knowledge for the application
Data security for written and read data	To be able to use the CRC check method, the data carriers must be initialized. You either use data crriers with the factory default data set (all data are 0), or you must initialize the data carrier. There are two ways of doing this:
	- Initializing the data carrier sing the "Init" function in Main Menu 2 (see 🗅 28).
	– Writing to the data carrier using the special initialization command 'Z' (see \cap 39).
	If CRC_16 data checking is activated, a special error message is output to the interface when- ever a CRC error is detected.
	If the error message is not caused by a failed reed request, it may be assumed that one or more memory cells on the data carrier is defective. That data carrier must then be replaced.
	If the CRC error is however due to a failed write request, you must reinitialize the data carrier in order to continue using it.
CRC_16	The checksum is written to the data carrier for each CRC block (corresponds to 16 bytes) in 2-byte units of information. 2 bytes are lost for each CRC block, i.e. the CRC block contains only 14 bytes of user information. This means that the actual usable number of bytes is reduced (see ∩ 11 "Supported data carriers and memory capacity").
	CRC_16 is factory deactivated.
Saving read data	Data which have been read from a data carrier which are now stored in the Handy Pro- grammer can be saved in an EEPROM under a file name of your choice.

	BIS M-81_ Basic knowle	dge for t	he applica	ation			
	The Handy Progra be executed and f will need a BIS C-	mmer has i iles exchan 522 cable *	ts own serial ged between).	RS 232 port thro a PC and the H	ough which read/write andy Programmer. Fo	jobs can or this you	
Communication	Communication on the serial interface uses a specific protocol.						
between Handy Programmer and PC	Data transmission specific telegrams	between th . The follow	e Handy Pro	grammer and a l ties are offered:	aptop or PC takes pl	ace using	
interface	 Using the H Programmer File manage grammer. D 	andy Progr r assuming ment and d etails see s	ammer to har the function ata exchange tarting 1 42.	ndle read/write jo of a BIS Process of saved files be	bs from the PC, with or. Details see startin tween the PC and Ha	the Handy g 🗋 29. ndy Pro-	
Supported data carriers and memory capacity	Mifare Balluff data carrier type BIS M-101	Manufacture Philips	Name Mifare Classic	Memory capacity 752 Byte	Usable bytes using CRC 658 Byte	Memory type EEPROM	
$\mathbf{\Lambda}$	The ISO15693 data having hardware ver externally connected	carriers can sion V2.0 or d read/write h	be processed b higher. In additi leads BIS M-3_	oy the BIS M-810 a on, when using BIS _ must be V2.0 or	nd BIS M-812 Handy-Pro M-811 the hardware vers higher!	ogrammers sion for the	
	ISO15693						
*) See Accessories	Balluff data carrier type BIS M-102 BIS M-103' BIS M-104' BIS M-104' BIS M-106' BIS M-107'	Manufacture Fujitsu Philips Texas Inst. Infineon EM Infineon	Name MB89R118 SL2ICS20 TAG-IT Plus SRF55V02P EM4135 SRF55V10P	Memory capacity 2000 Byte 112 Byte 256 Byte 224 Byte 288 Byte 992 Byte	Usable bytes using CRC 1750 Byte 98 Byte 224 Byte 196 Byte 252 Byte 868 Byte	Memory type FRAM EEPROM EEPROM EEPROM EEPROM	
on 155	¹ on request				,		



13	
	BIS M-81_ Start-up
Turning on the Handy Programmer (cont.)	IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII
	After pressing the End key the unit indicates its battery state in the following display.
	Following a passed battery test this display will appear automatically.
	Main menu 1 READ 4 File 2 WRITE 5 Config 3 Edit 6 More Main menu 1
	english BALLUFF 13

14	BIS M-81_ Configuration		
	If you do not wish t figuring the Handy I	to use the factory setting, start by con- Programmer.	Configuration 1 Addresses 4 Serial
Configuration 1	Menu item 5 in Mai Menu 1:	n Menu 1 takes you to Configuration	2 Format 3 Carrier 6 More
_			Configuration menu 1
Configuring addresses	The address ranges editing can be prese	for reading and writing of data carriers an	d for the jump-to address for
51	51 The selection number for the respective mode as well as the desired values must be entered and confirmed by pressing the Figure Values you want to easy and he confirmed di		Input mode: READ
	rectly by pressing in the displayed menu	In this way you can proceed through s one after the other.	0 -> Start/End addr. 1 -> Start/Number <u>0</u>
	Input mode READ: Start address / Start address /	End address or Number of bytes for reading	Select input mode for reading
	READ range	READ range	READ range
		at byte no. : <u>0</u> to byte no. : 255	at byte no. : <u>0</u> no. of bytes: 0256
		Input menu 0 for mode Start/End address for reading	Input menu 1 for mode Start address/No. of bytes for reading
14 BALLUFF engl	lish		





	BIS M-81_ Configuration	
Configure port	Configuring the seria	al RS 232 port for communicating with a PC or laptop:
5 4	The following param	neters can be set:
	 Baud rate: Stop bits: Data bits: Parity: BCC / CR: 	9600, 19200, 38400 or 57600 Baud 1 or 2 8 (cannot be changed) E (even), O (odd) or N (none) B (BCC), C (CR)
Configuration 2	Manu itam 6 takas s	You to Configuration Manu 2:
Configuration 2 Language	Menu item 6 takes y	You to Configuration Menu 2:
Configuration 2 Language	Menu item 6 takes y Configurati 1 Language 2 <	You to Configuration Menu 2: Here you can select the menu language. Menu item 2 returns you to Main Menu 1 following a prompt asking whether you want to save the configuration.
Configuration 2 Language	Menu item 6 takes y Configurati 1 Language 2 < Configuration menu 2	rou to Configuration Menu 2: Here you can select the menu language. Menu item 2 returns you to Main Menu 1 following a prompt asking whether you want to save the configuration.

18	Function Description Processing data carrie	BIS M-81_ ers			
Read data carrier	Selecting "READ" in Main Mer are asked to enter the start a the end address or the number	reading the data carrier. You ich input mode is configured -			
	READ data carrier		READ data carrier		
	at byte no. : to byte no. :	or	at byte no. : no. of bytes:		
	Entry menu 1 for reading a data carrier	1	Entry menu 2 for reading a data carrier		
	The data for the last entry ma dress and end address with r 1 and 1 to toggle between	de or for the data specified in the humber of bytes are displayed the two entry fields. Press	the configuration for start ad- as the default values. Press to accept the data.		
	If you press the Emery key to co "up to byte no.:" or "number cedure will be started. As long the read range, a bar will flast As soon as a data carrier is re	READ data carrier at byte no. : no. of bytes:			
	stop and the data will be read	Screen shown while reading a data carrier			
	The data carrier must not be removed from the active zone of the read/write head while data are being read from the data carrier!				
_	To cancel the read, press the	nter key.			
18 BALLUFF (englis	Ð				

	Function Description BIS M-81_ Processing data carriers
Read data carrier	After a successful read, the bar disappears and the data are shown in the display. Depending on which format you have selected, the data will be displayed as hex values, ASCII characters, BCD numbers or BINARY. Use the ind ind ind keys to toggle between the various formats: Key Format Key Format Minimum Constraints (Second Second S
	Display 0010 0049 Display 0100 0119 Display 0150 0163 ABCDEFGHIJKLMNOPQRST 01234567890123456789 01234567890123456789 01000 0100 0100
	Pressing Energy returns you to Main Menu 1.
	english BALLUFF 1

20	
	Function Description BIS M-81_ Processing data carriers
Read errors	If an error occurs while reading, an error message is shown in the display. Error message " Data carrier removed "
	11111 Error 1111 READ error! data carrier removed Error mession Data carrier - read/write head distance too great After acknowledging the error message by pressing removed will be returned to Main Menu 1.
	Error message "Maximum end address exceeded"
	Image: Incomparison of the data carrier Causes: Maximum end address - End address is greater than the configured capacity of the data carrier After acknowledging the error message by pressing rew you will be returned to the entry screen for reading. Error message 2 for reading
	ish)



22	Function Description	BIS M-81	
	Processing data carrie	ers	
Writing to data carriers 2	If "WRITE" is selected in the N displayed. You are prompted t configured – the end address	Main Menu, the entry screen for for the start address and – de or number of bytes.	or writing to the data carrier is pending on the input mode
	WRITE to carrier		WRITE to carrier
	at byte no. : to byte no. :	or	at byte no. : no. of bytes:
	Entry menu 1 for writing to the data carrier	1	Entry menu 2 for writing to the data carrier
	The data for the last entry resp are used as default values. Pre to accept the data.	. the data for start address and ss ⊥ and 1 to toggle betweer	end address or number of bytes the two entry fields. Press
	Pressing the Enter key to confirm byte no.:" or "number of bytes' tion. As long as there is no data	n the data entered in the "to " field starts the write opera- a carrier in the read range, a	WRITE to carrier
	bar will flash in the middle of th carrier is recognized, the flashin be read from the data carrier	ne 2nd line. As soon as a data ng will stop and the data will	at byte no. : no. of bytes:
			Screen shown while writing to the data carrier
	The data carrier must not be reabeing read from the data carrier	moved from the active zone of the !	e read/write head while data are
22 BALLUFF englist	D		

20	Function Description BIS M-81_ Processing data carriers
Write errors	If an error occurs while writing, an error message is shown in the display.
	Image: State carrier removed Causes: MRITE error! Data carrier was removed from the active zone too soon Data carrier removed Data carrier - read/write head distance too great After acknowledging the error message by pressing removed will be returned to Main Menu 1.
	Error message "Maximum end address exceeded"
	!!!! Error !!!! Maximum end address exceeded - End address is greater than the configured capacity of the data carrier After acknowledging the error message by pressing interview will be returned to the entry screen for writing.
	Error message 2 for whung
	english BALLUFF 23

Write errors (cont.)	Error message "??? Distance ???"						
	WRITE to carrier Data carrier - read/write head distance too great ??? Distance ??? at byte no. : 0 0 no. of byte : 0600 - End address (= Start address + no. of bytes) is gr the capacity of the data carrier - Wrong block size configured for this data carrier						
	Error message 3 for writing - Data carrier defective						
	The Handy Programmer repeats the write operation another 2 times. If the 3rd attempt also fails, the operation is can- celled with this error message:	!!!! Error !!!!					
		WRITE error Distance / other					
		Error message 4 for writing					





Save file Use menu item 2 "Save" to save the data that were last read from a data carrier and are still contained in RAM of the Handy Programmer as a file in the EEPROM memory. Please enter name:		Function Description BIS M-81_ Working with files	
Exchanging data over the serial interface Using menu item 3 "Trans." (for data transmission) you can transmit files back and forth between a PC or laptop to the Handy Programmer over the serial interface. For additional interface 4 3 Delete file(s) Menu point 4 "Delete" allows you to delete saved files. 4 4 Menu point 1 deletes a single file. An input screen opens where you enter the file name. Menu point 2 deletes all saved files at one time.	Save file	Use menu item 2 "Save" to save the data that were last read from a data carrier and are still contained in RAM of the Handy Programmer as a file in the EEPROM memory.	Please enter name:
Exchanging data over the serial interface Using menu item 3 "Trans." (for data transmission) you can transmit files back and forth between a PC or laptop to the Handy Programmer over the serial interface. For additional information see [^ 42ff. Image: the serial interface Image: the serial interface Image: the series Image: the series Image: the series Image: the series			- Save file in EEPROM
Delete file(s) Menu point 4 "Delete" allows you to delete saved files. 4 4 Menu point 1 deletes a single file. An input screen opens where you enter the file name. Menu point 2 deletes all saved files at one time. Delete Menu 1 = One entry 2 = All entries 6 <	Exchanging data over the serial interface	Using menu item 3 "Trans." (for data transmission) you can between a PC or laptop to the Handy Programmer over the information see 이 42ff.	transmit files back and forth serial interface. For additional
Show directory Menu point 5 "Directory" displays a lists of the saved files File1 File5 4 5 Press rule to exit the display. File3 File4 Directory Directory Directory	Delete file(s)	Menu point 4 "Delete" allows you to delete saved files. Menu point 1 deletes a single file. An input screen opens where you enter the file name. Menu point 2 deletes all saved files at one time.	Delete Menu 1 = One entry 2 = All entries 6 <
Show directory Menu point 5 "Directory" displays a lists of the saved files 45 Press rem to exit the display. File3 File4 Directory			Delete menu
Directory	Show directory	Menu point 5 "Directory" displays a lists of the saved files Press Errel to exit the display.	File1 File5 File2 File6 File3 File4
			Directory

28	<u> </u>		
	Function Description Special data carrier fu	BIS M-81_ nctions	
Main Menu 2 6	Selecting menu point 6 "More Main Menu 2.	" in Main Menu 1 takes you to	Main Menu 2 1 Init 2 Serial Number 6 <
			Main menu 2
Init menu: Initialize data carrier 1	Initmenu 1 CRC 6 < Init menu	Selecting menu point 1 "Init" the Init menu.	in Main Menu 2 takes you to
	CRC		
	Menu point 1 "CRC" writes 00 CRC data check.	D_{Hex} to the data carrier, which pr	epares for operation with a
Read Serial Number	Serial 11 22 33 44 Number 55 66 77 88 DTTyp: BIS M-1XX	Menu item 2 "Serial Number" (Mifare) or 8-byte (ISO15693) data carrier and display it in In addition the data carrier ty Balluff data carrier type . ?? Balluff does not support. Use Em to return to Main Mer	is used to read out the 4-byte long serial number from the HEX format. This is read-only. pe is displayed. XX stands for is displayed for types which nu 2.
28 BALLUFF english	>		

29			
	Function Description Reading / Writing ove	BIS M-81_ / PC r the serial interface	
	In addition to key-controlled read and write operations fro grammer. The Handy Program	processing of the data carriers, m a PC or laptop over the serial nmer then functions just like a B	it is also possible to perform interface of the Handy Pro- NS Processor.
	The PC and Handy Programm between the Handy Programmer	ner are connected using a BIS C mer and the laptop / PC uses a	C-522 *) cable. Communication specific protocol (see
	For details on the individual t	elegrams see 🗅 31ff.	
Activate data transmission	Menu point 4 "File" is se- lected in Main Menu 1 and menu point 3 "Trans." acti- vated in the following file menu to start this function.	File menu 1 Load 4 Delete 2 Save 5 Directory 3 Trans. 6 End	Data transmission 6 <
		File menu	Data transmission
Data integrity on the RS 232 interface	All commands for reading an mand (Q) can, depending on check or with Carriage Return mitted characters using the s	d writing (L, Z, C and P) as well the configuration, be terminated n 'CR'. The Handy Programmer selected termination type.	as the Acknowledge com- I either with a BCC block then also terminates all trans-
*) See Accessories on ∏55			
			english BALLUFF 29







32 BALLUFF english



Read Write	from data to data ca	arrier v	er with bloc with block s	k size sele ize select	ct						
Task	Data flow	Com- mand	Start address of first byte to	Number of bytes to be sent		End	Acknow- ledge 2)	Start trans- mission	Data (from start address to start address + no. of	End	Acknow- ledge 2)
Read	from host system to BIS	'L'	A3 A2 A1 A0 '0 0 0 0' to memory capacity -1	L3 L2 L1 L0 '0 0 0 1' to memory capacity	'1' '0'	BCC or 'CR'		<stx></stx>	Dytes)		
	from BIS to host system			oupdoity			<ack>'0' or <nak> + Error-No.</nak></ack>		D1 D2 D3 Dn	BCC or 'CR'	
Write	from host system to BIS	'P'	A3 A2 A1 A0 '0 0 0 0' to memory capacity -1	1) L3 L2 L1 L0 '0 0 0 1' to memory capacity	'1' '0'	BCC or 'CR'		<stx></stx>	D1 D2 D3 Dn	BCC or 'CR'	
	from BIS to host system		oupdoity 1	oupdoity			<ack>'0' or <nak> + Error-No.</nak></ack>				<ack>'0' or <nak> + Error-No</nak></ack>
				1)					1)		

-	neading / writing over the senai interface						
Telegram example	You want to read 10 bytes from the data carrier starting at add	dress 50.					
Read from data carrier with BCC block check	The host sends 'L 0050 Address of first byte to read Number of bytes to read Fixed Fixed	0010 10 10 I' BCC (49 Hex)					
	The Handy Programmer acknowledges with <ac< td=""> The host gives the start command <st< td=""> The Handy Programmer provides the data from the data carrier '12'</st<></ac<>	K> '0' X> 3 4 5 6 7 8 9 A F' BCC (70 Hex)					
Telegram example	You want to write 5 bytes to the data carrier starting at address 500.						
Telegram example for ∩ 34: Write to data carrier with BCC block check	The host sends 'P 0 5 0 0 Address of first byte to write Number of bytes to write Fixed Fixed	0005 10Q'BCC (51 Hex					
	The Handy Programmer acknowledges with <ac< th="">The host gives the start command and data<st.< td="">The Handy Programmer acknowledges with<ac< td=""></ac<></st.<></ac<>	K> '0' X> '1 2 3 4 5 3' BCC (33 Hex) K> '0'					
	Data within angle brackets are control characters.						

			neading	/ writing	over the	5 3011		ace			
Writing	g a consta	ant va	lue in the da	ta carrier							
This co	ommand c	an be	used to eras	e a data car	rier data. C)ne sa	ves the tin	ne for the	e transmission o	of the	write byt
Task	Data Flow	Com- mand	Start address of first byte to be sent	Number of bytes to be sent		End	Acknow- ledge 2)	Start trans- mission	Data (from start address to start address + no. of bytes)	End	Acknow- ledge 2)
Write	from host system to BIS	'C'	A3 A2 A1 A0 '0 0 0 0' to '0 7 5 1'	L3 L2 L1 L0 '0 0 0 1' to '0 7 5 2'	'1' '0'	BCC or 'CR'		<stx></stx>	D	BCC or 'CR'	
	from BIS to host system						<ack>'0' or <nak> + Error-No.</nak></ack>				<ack>'0' or <nak> + Error-No</nak></ack>
				1)					1)		
I) The (2) <aci< td=""><td>Quit comman K> '0' is retur</td><td>id is not ned as</td><td>permitted at this acknowledgeme</td><td>s point. nt if there is no</td><td>error, or <na< td=""><td>K> + 'Er</td><td>ror No.' if an</td><td>error occu</td><td>rs.</td><td></td><td></td></na<></td></aci<>	Quit comman K> '0' is retur	id is not ned as	permitted at this acknowledgeme	s point. nt if there is no	error, or <na< td=""><td>K> + 'Er</td><td>ror No.' if an</td><td>error occu</td><td>rs.</td><td></td><td></td></na<>	K> + 'Er	ror No.' if an	error occu	rs.		

Tologram oxamplo	White ACCII date value 0 (201 law) to 500 bytes of the date service starting a Address 20							
for 136:	Write ASCII data value 0 (30Hex) to 500 bytes of the data carrier starting a Address 20.							
Writing a constant value in the data carrier with BCC block check	Address of first byte to write Number of bytes to write Fixed Fixed							
	The Handy Programmer acknowledges with <ack> '0' The host gives the start command and data <stx> '0 2' BCC (32 Hex) The Handy Programmer acknowledges with <ack> '0'</ack></stx></ack>							

Restart the Handy Programmer (Quit) After t before IN Task Restar (Quit)	ng the Restart comm Programmer in the this telegram is ac e starting a new te tant! The Quit comm hator (BCC or 'CR'). datum.	mand causes ground state knowledged, legram. nand is not per In this situation	a telegram i , a minimur mitted while n, the Quit w	in process to b n of 1600 ms the Handy Pro rould be incorre	be aborted and pause should ogrammer is wait actly interpreted	puts the be allowed ting for a as a termina-
Import termin tor or Task Restar (Quit)	tant! The Quit comn nator (BCC or 'CR'). datum. Data Flow	nand is not per In this situation	rmitted while n, the Quit w	the Handy Provould be incorre	grammer is wait actly interpreted	ting for a as a termina-
Task Restar (Quit)	Data Flow			1		
Restar (Quit)	+ from host s		Command	Terminator	Acknowledge	Terminator
(Quit)	τ ποιπποσεο	from host system to BIS 'C		BCC or'CR'		
(call)	from BIS to	host system			'Q'	BCC or'CR'
1) The (Quit command is not pe	mitted at this p	ooint.		1)	
Telegram example with Put the	e Handy Programm	er into the gro	ound state.			
BCC block check: The ho	ost sends			'Q Q'	BCC (51 Hex)
The Ha	andy Programmer a	.cknowledges	with	'Q Q'	BCC (51 Hex)
Data	within angle brack	ets are contr		rs		
Value	s inside apostroph	ets are contri es represent t	the respecti	ve character(s) in ASCII code	э.

This tele	gram initia gram must	lizes a also b	a data carrier be send again	located at t if a CRC erro	he active or results	read/w from a	rite head failed write	or use o operati	of CRC_16 data on, i.e., the data	chec carrie	king. er must be
reinitializ	ed in order	to us	e it again.								
plus nur	note the tal	es mus	t not exceed th	e data carrier	of usable to memory c	apacity	lust not be e	xceedeo	I, I.e., the sum of s	start a	aaress
		-	I			1			1	I= .	
Task	Data Flow	Com- mand	Start address of first byte to be sent	Number of bytes to be sent		End	Acknow- ledge 2)	Start trans- mission	Data (from start address to start address + no. of bytes)	End	Acknow- ledge 2)
Initialize CRC_16 range	from host system to BIS	'Z'	A3 A2 A1 A0 '0 0 0 0' to usable bytes using CRC -1	L3 L2 L1 L0 '0 0 0 1' to usable bytes using CRC	'1' '0'	BCC or 'CR'		<stx></stx>	D1 D2 D3 Dn	BCC or 'CR'	
	from BIS			<u> </u>			<ack>'0'</ack>				<ack>'0'</ack>
	system						+ Error-No.				+ Error-No
				1)					1)		

Error numbers	The	BIS M-81_ always output icated in the following tak	its an error number. The meaning of ble.	these error numbers is			
	No	Error Description	Effect				
	2	2 Read error Read telegram aborted, Handy Programmer goes into ground state.					
	3	Read aborted, since the data carrier was removed	Handy Programmer goes into ground s	tate.			
	4	Write error	Write telegram aborted, Handy Programmer goes into ground state.	CAUTION: An aborted write could			
	5	Writing aborted, since the data carrier was removed	Handy Programmer goes into ground state.	written to the data carrier which may be incomplete!			
	6	Interface error	Handy Programmer goes into ground state. (parity or stop bit error)				
	7	Telegram format error	Handy Programmer goes into ground s - Command is not 'L', 'P', 'Q', 'C' or 'Z Start address or number of bytes exce	tate. Possible format errors: " ed permissible range			
	8	BCC error, the trans- mitted BCC is wrong	Telegram is aborted, Handy Programmer goes into ground s	tate.			
	E	CRC error	The CRC for the read data does not ag carrier.	ree with the CRC on the data			

41				
	Reading / Writing over the se Read/Write Times	rial interfac	e	
Read times	Data corrier with each 16 bytes/black		DIE M 1 00	
	Time for data carrier recognition/serial ID	< 20 ms	< 30 ms	
	Bead bytes 0 to 15	< 20 ms	<u><</u> 30 ms	
	For each additional 16 bytes add another	< 10 ms	< 15 ms	
Write times	Data carrier with each 16 bytes/block	BIS M-101	BIS M-102	
	Time for data carrier recognition/serial ID	<u><</u> 20 ms	<u><</u> 30 ms	
	Write bytes 0 to 15	<u>≤</u> 40 ms	<u>≤</u> 65 ms	
	For each additional 16 bytes add another	<u>≤</u> 30 ms	<u>≤</u> 45 ms	
	Fluctuations in the ms range are possible. Electrical noise may increase the read/write	e time.	eng	Jish BALLUFF 41



This comm	and is use	d to s	end a file st	ored in a P	C or laptop	to the	Handy P	rogrami	ner.		
Task	Data Flow	Com- mand	File name 3)	Start address on the data carrier	No. of bytes on the data carrier	End	Acknow- ledge 2)	Start trans- mission	Data (from start address to start address + no. of bytes)	End	Acknow- ledge 2)
Send file to the Handy Programmer	from host system to BIS	ידי	'D7 D0' 'MUSTER'	A3 A2 A1 A0 '0 0 0 0' to memory capacity -1	L3 L2 L1 L0 '0 0 0 1' to memory capacity	BCC		<stx></stx>	D1 D2 D3 Dn	BCC	
	from BIS to host system			oupdoity !	oupdony		<ack>'0' or <nak> + Error-No.</nak></ack>				<ack>'0' or <nak> + Error-N</nak></ack>
				1)					1)		
 The Quit c <ack> '0'</ack> If the file n 	ommand is n is returned a ame is shorte	ot perm s ackno er than i	itted at this po wledgement if 3 characters, it	int. there is no erro must be filled	or, or <nak> + out to 8 chara</nak>	⊦ 'Error acters ι	No.' if an err ising spaces	ror occurs s (20 _{Hex}).			

This comma	and is used	to read	d out a file st	ored in	the Handy	Program	nmer.			
Task	Data Flow	Com- mand	File name 3)	End	Acknow- ledge 2)	Start trans- mission	Start address on the data carrier	No. of bytes on the data carrier	Data (from start address to start address + no. of bytes)	End
Read file from the Handy	from host system to BIS	'G'	'D7 D0' 'MUSTER'	BCC		<stx></stx>				1
Programmer	from BIS to host system				<ack>'0' or <nak> + Error-No.</nak></ack>		A3 A2 A1 A0 '0 0 0 0' to memory capacity -1	L3 L2 L1 L0 '0 0 0 1' to memory capacity	D1 D2 D3 Dn	BCC
1) The Quit co	mmand is not	permitte	1) ed at this point.					1)	
 2) <ack> '0' i</ack> 3) If the file na 	is returned as a ame is shorter f	acknowle than 8 c	edgement if then haracters, it mus	e is no er st be fille	ror, or <nak: d out to 8 ch</nak: 	> + 'Error N aracters us	lo.' if an error o sing spaces (20	CCU r S. Hex).		

Telegram example for ☐ 43:	Send file MUSTER1 to the Handy Programmer. Write 5 bytes to the data carrier starting with Address 27.
Send file to the Handy Programmer with BCC block check	The host sends 'T MUSTER1_ 0 0 2 7 0 0 0 5 M' BCC (4D Hex)
	File name (filled out to 8 bytes) *) Address of the first byte on the data carrier Number of bytes
	The Handy Programmer acknowledges with <ack> '0' The host gives the start command and data <stx> '12345 3' BCC (33 Hex) The Handy Programmer acknowledges with <ack> '0'</ack></stx></ack>
Telegram example for 144:	Read file MUSTER1 from the Handy Programmer. Read 5 bytes on the data carrier starting with Address 27.
Read file from the Handy Programmer with BCC block check	The host sends 'G MUSTER1_ ^' BCC (5E Hex)
	File name (filled out to 8 bytes) *)
	The Handy Programmer acknowledges with The host sends <ck> '0' <stx></stx></ck>
	The Handy Programmer sends '0027000512345 1' BCC (33 Hex)
	") A space $_{\mbox{\tiny Ln}}$ used for filling out the file name must also be accounted for in the BCC.

Read file directory from Handy	This command is used to read the file directory stored in the Handy Programmer. Task Data Flow Command End Acknowledge 2) Start transmission Data End								
from Handy Programmer to PC /	Task	Data Flow	Command	End	Acknowledge 2)	Start transmission	Data	End	
Laptop	Read directory	from host system to BIS	'D'	BCC		<stx></stx>			
	from Handy Programmer	from BIS to host system			<ack>'0' or <nak> + Error-No.</nak></ack>		D1 D2 D3 Dn	BCC	
				1)			1)		
Telegram example: Read file directory	Read the fil	le directory fi	acknowledg	andy	if there is no error, o Programmer. Tw	or <nak> + 'Error No.</nak>	' if an error occurs. in the Handy Pr	- D-	
Telegram example: Read file directory from Handy Programmer	Read the fil grammer. The host se	le directory fi	rom the H	andy	Programmer. Tw	or <nak> + 'Error No. o files are stored ex)</nak>	' if an error occurs. in the Handy Pr	0-	
Telegram example: Read file directory from Handy Programmer with BCC block check	Read the fil grammer. The host se The Handy acknowled The host se The Handy	le directory fi ends Programmer ges with ends Programmer Programmer	rom the H	andy	Programmer. Tw 'D D' BCC (44 He CACK> '0' STX> '0002MUSTER1.	o files are stored	' if an error occurs. in the Handy Pr 'ER2_00350012	o-	

Leiele a lile in (Ne	This comman	d is used to delete a fil	le stored ir	n the Handy P	rogrammer	
Handy Programmer	Task	Data Flow	Command	Dateiname 3)	End	Acknowledge 2)
	Delete a file in the Handy	from host system to BIS	'E'	'D7 D0' 'MUSTER'	BCC	
	Programmer	from BIS to host system				<ack>'0' or <nak> + Error-No.</nak></ack>
					1)	
T-1						
Telegram example: Delete file in Handv	Delete file MU	JSTER1 from the direct	tory in the	Handy Progra	ammer.	
Telegram example: Delete file in Handy Programme	Delete file ML The host send	JSTER1 from the direct	tory in the 'E MU	Handy Progra	ammer. CC (5C Hex)	
Telegram example: Delete file in Handy Programmer with BCC block check	Delete file ML The host senc File na	JSTER1 from the direct is ime (filled out to 8 byte	tory in the 'E MU es) *)	Handy Progra	ammer. CC (5C Hex)	
Telegram example: Delete file in Handy Programmer with BCC block check	Delete file MU The host send File na The Handy Pr	JSTER1 from the direct is ime (filled out to 8 byte ogrammer acknowledg	tory in the 'E MU: es) *) ges with	Handy Progra STER1. \' BO	ammer. CC (5C Hex)	

Handy Programmer	This command is u	in the Han	dy Pro	ogrammer.		
nanuy Programmer	Task	Data Flow	Command	End	Acknowledge 2)	
	Delete all files in	from host system to BIS	'K'	BCC		
	Handy Programmer	from BIS to host system			<ack>'0' or <nak> + Error-No.</nak></ack>	
				1)	divito i Endi itali	
lelegram example: Delete all files in the	Delete all files in tr	ne Handy Programmer				
Handy Programmer	The host sends		K K' BCC	C (4B F	Hex)	
WITH BCC DIOCK CHECK	The Handy Progra	mmer acknowledges v	vith <ac< td=""><td>K> '0</td><td>I</td><td></td></ac<>	K> '0	I	











Housing	Housing material Dimensions Weight incl. battery		ABS approx. 97 × 232 × 55 mm approx. 420 g
I	Keypad		32 keys, 4×8 mm, alphanumeric and special characters
I	Display		LCD-Display, 80 characters / 4 lines
Connections	RS 232 serial port		5-pin round connector
I	Read/Write head	BIS M-810 BIS M-811 BIS M-812	internal antenna 8-pin round connector internal antenna in M18 housing
(Charging socket		2.5 mm jack designed for BIS C-701-A
	Enclosure rating		IP 40 (when connected)
	Ambient temperature		0 °C to +50 °C

	BIS M-81_ Technical Data	
Electrical data	Power supply Capacity	2.4 V NIMH rechargeable battery
	max. charge voltage	5 – 10 V, internally limited
	Charging current	approx. 400 mA
	Charging time	approx. 4 h
Current draw	Current draw, normal operation	approx. 65 mA
	Current draw, reading/writing	approx. 275 mA
	and the EMC Law. It has been verified in DATech for Testing of Electromagnetic C requirements of the Harmonized Standar EN 61000-6-4 (Emission), El	our EMC Laboratory, which is accredited by the ompatibility, that Balluff products meet the EMC d I 61000-6-2 (Noise Immunity)

56	
	BIS M-81_ Ordering Information
Ordering code	BIS M-810-003
	Balluff Identification System Series M Hardware type 810 = internal antenna with keypad and display, for connecting to PC or laptop with 9-pin SUB-D connector (serial) 811 = 8-pin connector for connecting standard read/write heads BIS M-3 (Hardware version V2.0 and higher)over cable, with keypad 812 = internal antenna in M18 housing with keypad and display, for connecting to PC or laptop with 9-pin SUB_D plug (serial) Interface 0 = RS 232 (V.24 Interface) Software type 003 = Balluff software for BIS M-81
56 BALLUFF (englis	h)

	BIS M-81_ Accessories							
Accessories (included)	The hand-held readers include a carrying case.							
Accessories	Article		Ordering code					
(optional, not included)	Charger (see 🗅 58)		BIS C-701-A					
	Charge holder (see 1159)		BIS C-702-A					
	for connecting the BIS M-81_ Handy Programmer to a 9-pin SUB-D COM port on a laptop or PC	2 m 3 m	BIS C-522-PVC-02 BIS C-522-PVC-03					
	Additional battery (see 1760)		125997					
	For BIS M-811							
	Round connector for read/write heads BIS M-3 (without cable)		BKS-S117-00					
	Connector cable for read/write heads BIS M-3 (max. 2 m) *)		BKS-S115-PU-02					
	Read heads BIS M-3 (see catalog) Hardware version V2.0 and higher							



	BIS M-81_ Accessories										
Accessories	Charge holder BIS C-702-A										
(optional, not included)	Consisting of a charger with charging status indicator and base										
Technical Data	Feature	Value / Units / Condition	n								
	UPrimary	100 - 240 V _{AC}	Charging state indicator:								
	F _{Primary}	50 - 60 Hz	LED red flashing Charging								
	U _{Sec.}	10 V _{DC} <u>+</u> 5%									
	I _{Sec.}	800 mA									
	T _A	-40 +70 °C									
	Primary connector interchangeable	EURO, UK, USA (included)	Charging state Vent slit closed								
	Approvals	CE, UL									
	Material: PPE Color: blac Housing: MPF Output cable: 11.7 Length: 200	E-V1-125°C :k 210 2892.503-80 0 mm, 3 x 0.5 mm ² Cc vie	Primary connector interchangeable W								
			english BALLUFF								

60				
		BIS M-81_ Accessories		
Access (optiona not incl	a i , uded)	Additional battery Power supply pack Capacity	2.4 V NiMH battery 1650 mAh	
60 BALLU	IFF english	>		

				Арр	end	lix, A		Table											
Deci mal	Hex	Control Code	ASCII	Deci- mal	Hex	Control Code	ASCII	Deci- mal	Hex	ASCI									
0	00	Ctrl @	NUL	22	16	Ctrl V	SYN	44	2C	,	65	41	А	86	56	V	107	6B	k
1	01	Ctrl A	SOH	23	17	Ctrl W	ETB	45	2D	-	66	42	В	87	57	W	108	6C	1
2	02	Ctrl B	STX	24	18	Ctrl X	CAN	46	2E		67	43	С	88	58	Х	109	6D	m
3	03	Ctrl C	ETX	25	19	Ctrl Y	EM	47	2F	/	68	44	D	89	59	Y	110	6E	n
4	04	Ctrl D	EOT	26	1A	Ctrl Z	SUB	48	30	0	69	45	Е	90	5A	Z	111	6F	0
5	05	Ctrl E	ENQ	27	1B	Ctrl [ESC	49	31	1	70	46	F	91	5B	[112	70	р
6	06	Ctrl F	ACK	28	1C	Ctrl \	FS	50	32	2	71	47	G	92	5C	\	113	71	q
7	07	Ctrl G	BEL	29	1D	Ctrl]	GS	51	33	3	72	48	Н	93	5D]	114	72	r
8	08	Ctrl H	BS	30	1E	Ctrl ^	RS	52	34	4	73	49	1	94	5E	^	115	73	s
9	09	Ctrl I	HT	31	1F	Ctrl _	US	53	35	5	74	4A	J	95	5F		116	74	t
10	0A	Ctrl J	LF	32	20		SP	54	36	6	75	4B	К	96	60	`	117	75	u
11	0B	Ctrl K	VT	33	21		!	55	37	7	76	4C	L	97	61	а	118	76	v
12	0C	Ctrl L	FF	34	22			56	38	8	77	4D	М	98	62	b	119	77	w
13	0D	Ctrl M	CR	35	23		#	57	39	9	78	4E	Ν	99	63	С	120	78	х
14	0E	Ctrl N	SO	36	24		\$	58	ЗA	:	79	4F	0	100	64	d	121	79	у
15	0F	Ctrl O	SI	37	25		%	59	3B	;	80	50	Р	101	65	е	122	7A	z
16	10	Ctrl P	DLE	38	26		&	60	3C	<	81	51	Q	102	66	f	123	7B	{
17	11	Ctrl Q	DC1	39	27		'	61	3D	=	82	52	R	103	67	g	124	7C	
18	12	Ctrl R	DC2	40	28		(62	3E	>	83	53	S	104	68	h	125	7D	}
19	13	Ctrl S	DC3	41	29)	63	3F	?	84	54	Т	105	69	i	126	7E	~
20	14	Ctrl T	DC4	42	2A		*	64	40	@	85	55	U	106	6A	j	127	7F	DEL