



Mounting Instructions:

1. Place the sensor inside the housing with desired orientation.
2. Insert and tighten set screws until flush with housing.
3. Attach the BCC cable.
4. To mount the housing and sensor to a bracket the spacers must be used. Torque mounting screws to a maximum of 30in*lbs.(M5 socket head cap screws recommended)
5. NOTE: The sensor housings are equipped with magnets used to hold the housing together while the sensors are transmitting data.

