

Standard Base Product


BTL7-P511-Mxxxx-B/Z/A/Y-KAxx-xxxx

Deviation From Standard

-S140:
10-pin MS style connector added to end of cable

Wiring information

| S140 Pin | Interface BTL7-P511-....-S140 |
|----------|-------------------------------|
| A | GND |
| B | Not used ¹ |
| C | - Start/Stop |
| D | + Start/Stop |
| E | 10...30V (supply) |
| F | Not used ¹ |
| G | Not used ¹ |
| H | Not used ¹ |
| J | + Init |
| K | - Init |

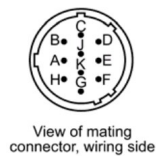

¹Unused leads can be connected to GND on the controller side, but not to the shield

Balluff Inc.
8125 Holton Drive
Florence, KY 41042
Phone: (859) 727-2200
Toll-free: 1-800-543-8390
Fax: (859) 727-4823
E-Mail: Balluff@balluff.com