BALLUFF

sensors worldwide

BIS U-6026-034-114-06-ST35 EtherNet/IP

Technical Description, User's Guide

BISU



english

www.balluff.com

1 User Instructions 4
1.1 About this Manual 4
1.2 Typographical Conventions 4
1.3 Symbols 4
1.4 Abbreviations 4

2 Safety 5
2.1 Intended Use 5
2.2 Meaning of Warning Notes 5
2.3 General Safety Notes 5
2.4 Conformity 6

3 Basic Knowledge 7
3.1 Function Principle of Identification Systems 7
3.2 Product Description 7
3.3 Control Function 8
3.4 Data Integrity 8
3.5 Bus Connection 8

4 Installation 9
4.1 Processor Unit Scope of Delivery 9
4.2 Processor Unit Installation 9
4.3 Interface Information / Wiring Diagrams 10

5 Technical Data 11

6 Bus Connection 14
6.1 IP Address 14
6.2 AnyBus IPconfig 14
6.3 Configuration via Web Browser 15

7 Setting the Processor Unit Parameters 16
7.1 BUS Parameters 16
7.2 Application Parameters 18

8 Device Function 26
8.1 Function Principle of the BIS U-6026 26
8.2 Function Indicators 42
8.3 Examples 45

Appendix 54

Index 56

1 User Instructions

1.1 About this Manual

This manual describes the processor unit for the BIS U-6026 identification systems and startup instructions for immediate operation.

1.2 Typographical Conventions

The following conventions are used in this manual.

Enumerations

Enumerations are shown as a list with an en-dash.
– Entry 1.
– Entry 2.

Actions

Action instructions are indicated by a preceding triangle. The result of an action is indicated by an arrow.
► Action instruction 1.
⇒ Action result.
► Action instruction 2.

Syntax

Numbers:
– Decimal numbers are shown without additional indicators (e.g. 123),
– Hexadecimal numbers are shown with the additional indicator $_{hex}$ (e.g. 00_{hex}).

Parameters:
Parameters are shown in italics (e.g. *Dynamic).*

Directory paths:
References to paths where data is stored or to be saved are shown in small caps (e.g. Project:\Data Types\User-Defined).

Control characters:
Control characters for sending are set in angle brackets (e.g. <ACK>).

ASCII code:
Characters transmitted in ASCII code are set in apostrophes (e.g. 'L').

1.3 Symbols

Caution!
This symbol indicates a safety instruction that must be followed without exception.

Note, tip
This symbol indicates general notes.

1.4 Abbreviations

BIS	Balluff Identification System
CRC	Cyclic Redundancy Check
EDS	Electronic Data Sheet
EEPROM	Electrical Erasable and Programmable ROM
EIRP	Equivalent Isotropically Radiated Power
EMC	Electromagnetic compatibility
EPC™	Electronic Product Code
ERP	Effective Radiated Power
FCC	Federal Communications Commission
IC	Industry Canada
IP	Internet Protocol
LBT	Listen Before Talk
LF CR	Line Feed with Carriage Return
MAC	Media Access Control
n. c.	not connected
PC	Personal Computer
PLC	Programmable Logic Controller
Tag	Data carrier with antenna
TID	Tag identifier
UHF	Ultra-high frequency

2 Safety

2.1 Intended Use

The BIS U-6026 processor unit is a component of the BIS U identification system. Within the identification system, it is used to connect to a higher-level controller (PLC, PC); it may only be used in the industrial sector.

This description applies to processor units of the following series:

– For operation in the USA, Canada
  BIS U-6026-034-114-06-ST35

2.2 Meaning of Warning Notes

Caution!
The pictogram used with the word "Caution" warns of a situation that could harm someone's health or damage equipment. Failure to observe these warning notes may result in injury or damage to equipment.
► Always observe the described measures for preventing this danger.

2.3 General Safety Notes

Caution!
This UHF system consists of a processor unit and antennas according to specifications and may only be operated within the specified countries subject to all applicable national legal regulations and standards.
► When using the UHF system in the USA, the directives of the FCC, Part 15 B and 15 C, apply.
► When using the UHF system in Canada, the directives of the IC, RSS-210 apply.

Installation and startup
Installation and startup are to be performed by trained technical personnel only.
Any damage resulting from unauthorized manipulation or improper use voids the manufacturer's guarantee and liability claims against the manufacturer. When connecting the processor unit to an external controller, observe proper selection and polarity of the connection as well as the power supply (see "Installation" on page 9).
The processor unit may only be used with approved power supplies (see "Technical Data" on page 11).

Caution!

The antennas of the identification system BIS U transmit ultra-high frequency electromagnetic waves.

IEC 62369 stipulates that personnel must not remain within close range of the UHF antenna for long periods (several hours).

For operation in the USA, Canada:
When selecting the installation position for the processor unit, make sure that the minimum distance between the UHF antenna and the workplace is 30 cm.
The radiated power must not exceed the permissible limit value of 4 watts$_{EIRP}$.

Note
See the "Basic UHF manual" for more information on minimum/maximum distances and antenna power.

2 Safety

2.4 Conformity

BIS U-6026-034-114-06-ST35

The product was developed and manufactured in accordance with the directives applicable in the USA and Canada. Conformity has been verified.

All approvals and certifications are no longer valid if:
– Components are used that are not part of the identification system BIS U.
– Components are used that have not been explicitly approved by Balluff.

Operation and testing
The operator is responsible for ensuring that local safety regulations are observed. If defects and persistent faults occur in the identification system, take it out of service and secure it to prevent unauthorized use.

3 Basic Knowledge

3.1 Function Principle of Identification Systems

The identification system BIS U is classified as a non-contacting system with read and write function, which not only allows it to detect information programmed permanently in the data carrier, but also to collect and pass on current information.

Main components of the identification system BIS U include:
– Processor unit
– Antennas
– Data carrier

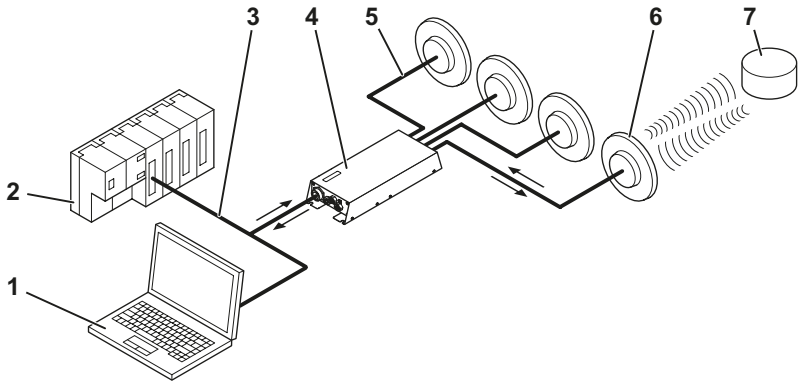


Figure 1: System overview

1 PC
2 PLC
3 Connection to the controlling system
4 Processor unit
5 Antenna cable
6 Antennas (max. 4)
7 Data carrier

The main areas of application are:
– In the production and control of material flow (e.g. in model-specific processes, workpiece transport in conveying systems, for acquiring safety-related data)
– In tool coding and monitoring
– In organization of tools and equipment
– In warehousing for monitoring material movements
– In transporting and conveyor technology
– in waste disposal for quantity-based fee assessment

Note
See the "Basic UHF manual" for more information on UHF identification systems.

3.2 Product Description

– UHF RFID
(for working frequencies, see "Operating frequencies and radiated power" on page 12)
– Read/write distance typically up to 6 m depending on ambient conditions and installed system components such as antennas, data carriers, cables, etc.
– Group detection of multiple data carriers, reading, writing of individual data carriers
– Connection option for 4 antennas
– 4 digital outputs and 2 digital inputs for additional functions
– Standard interface: EtherNet/IP
– Service interface: 1 x RS232
– Rugged metal housing
– Control indicators for communication and the status of ports
– Data carrier types according to ISO 18000-6 type C or EPCglobal™ Class 1 Generation 2

3 Basic Knowledge

3.3 Control Function

The processor unit is the link between data carrier and controlling system. It manages two-way data transfer between data carrier and antenna and provides buffer storage.
The processor unit uses the antenna to write data from the controlling system to the data carrier or reads the data from the data carrier and makes it available to the controlling system.

Controlling systems may be the following:
– A control computer (e.g. industrial PC)
– A PLC

Double bit string for asynchronous data transmission:
If a controller does not synchronously send the data range for updating the input/output buffer, data inconsistencies may occur when sending more than two bytes. Consistency of the sent data can then only be ensured by sending the control bits in the first byte and again in the last bytes of the input/output buffer. By comparing the two bit strings, it can be determined whether the data is fully updated and can be accepted.
This method affects neither the PLC cycle time nor the bus access time. Only one byte in the data buffer for the byte of the second bit string is required instead of using it for data.

3.4 Data Integrity

In order to ensure data integrity, the data transfer between the data carrier and processor unit can be monitored using a CRC-16 data check.

3.5 Bus Connection

The processor unit and the controlling system communicate via the EtherNet/IP protocol.

Ethernet/IP is an industrial networking standard. The IP in Ethernet/IP stands for "Industrial Protocol". Ethernet/IP uses the "Common Industrial Protocol" (CIP) open communication protocol at the application tier (in accordance with ISO/OSI reference model).
Ethernet/IP is supported by the "Open DeviceNet Vendor Association" (ODVA) network organization.

A switch in full-duplex operation has to be used for collision-free data exchange.


4 Installation

4.1 Processor Unit Scope of Delivery

Included in the scope of delivery:
- BIS U-6026
- 5x end cap
- Safety notes

Note
For corresponding technical documents as well as additional information on available software and accessories, see www.balluff.com.

4.2 Processor Unit Installation

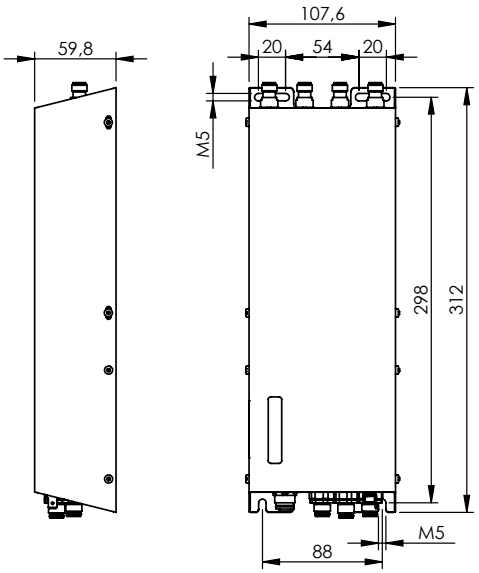

BIS U-6026-034-114-06-ST35

Figure 2: Installation

Caution!
The antennas for the BIS U identification system transmit ultra-high frequency electromagnetic waves!
► The installation position of the processor unit and antennas must guarantee a safety distance between the antennas and the workplaces of personnel. For safety distances, see Chapter 2 "Safety" beginning on page 5

The read/write distance can typically be as great as 6 m depending on the ambient conditions and installed system components. See the "Basic UHF manual" for more information on minimum/maximum distances.

► Select a suitable installation position.
► Secure the processor unit using four M5 screws (strength category 8.8, lightly oiled, tightening torque M = 5.2 Nm).

Note
Optional mounting plates are available for installing the processor unit (see Accessories on page 54).

4 Installation

4.3 Interface Information / Wiring Diagrams

Note
Make the ground connection either directly or using an RC combination to ground.


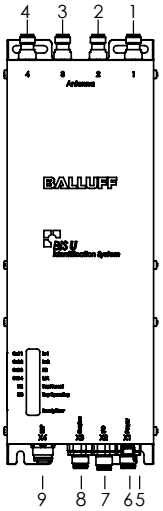


Figure 3: Electric connection of the BIS U-6026

1 Antenna port 1
2 Antenna port 2
3 Antenna port 3
4 Antenna port 4
5 Function ground FE
6 X1 – Power supply
7 X2 – Control inputs / outputs
8 X3 – Service interface RS232
9 X4 – Application interface EtherNet/IP


Note
Not all antenna ports 1…4 have to be connected.

X1 - Power supply

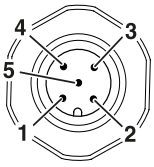


PIN	Function
1	$+V_S$
2	n. c.
3	$-V_S$
4	n. c.
5	n. c.

X3 - Service interface

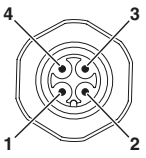


PIN	Function
1	n. c.
2	TxD
3	GND
4	RxD

X2 - Control inputs / outputs

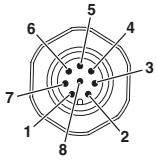

PIN	Function
1	Digital output 1
2	Digital output 2
3	Digital output 3
4	Digital output 4
5	Digital input 1
6	$+V_S$
7	$-V_S$
8	Digital input 2

X4 – EtherNet/IP

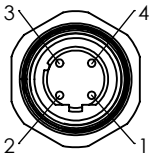

PIN	Function
1	TD+
2	RD+
3	TD–
4	RD–

5 Technical Data

Dimensions

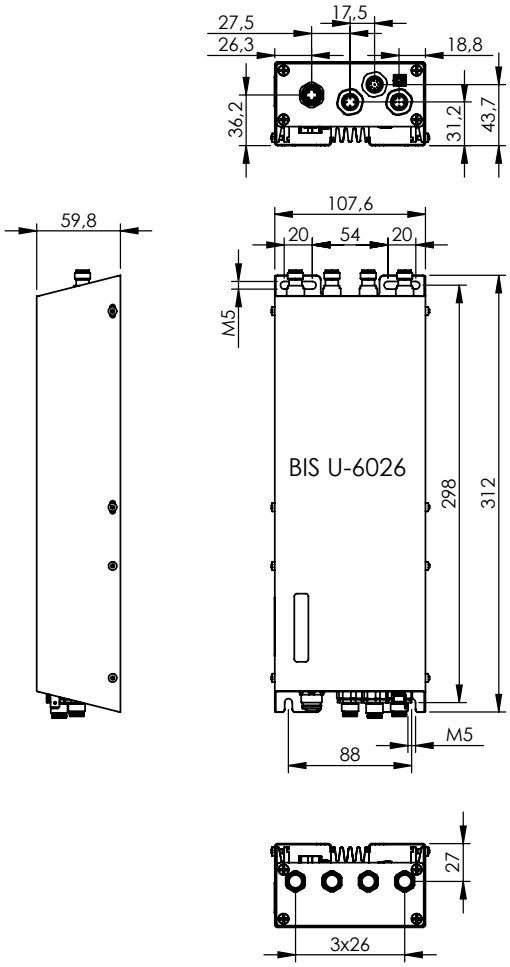


Figure 4: Dimensions of the BIS U-6026-…-ST35 (in mm)

Mechanical data

Housing material	Profile housing and frame made from coated steel
X1 - Power supply	M12 integral plug, 4-pin, A-coded
X2 – Control inputs / outputs	M12 integral plug, 8-pin
X3 – service interface	M12 integral plug, 4-pin, A-coded
X4 – EtherNet/IP port	M12 flush socket, 4-pin, D-coded
Antenna ports 1…4	Antenna socket R-TNC
Degree of protection as per IEC 60529	IP 65 (with plugs)
Weight	2050 g

5 Technical Data

Electrical data

Supply voltage V_S	24 V DC ±20%
Residual ripple	≤ 10%
Current consumption at 24 V DC	≤ 1 A
X4 – Application interfaces	Ethernet/IP
X3 - Service interface	RS232
Characteristic impedance of the antenna ports	50 Ω

Operating frequencies and radiated power


BIS U-6026-034-114-…

Operating frequency	902…928 MHz
Maximum permissible radiated power (ERP)	4 watts$_{ERP}$
Number of used channels	52
Channel selection process	Automatic (frequency hopping method)

Control inputs / outputs


Digital input (+IN, –IN)

Control inputs	2, galvanically isolated via optocoupler
Control voltage active	4…40 V
Control voltage inactive	1.5…–40 V
Input current at 24 V	11 mA



Control output (01, 02, 03, 04)

Control outputs	4, galvanically isolated via opto-coupler, PNP, positive switching
Supply voltage, output V_S	19.2…28.8 V DC
Output current	≤ 50 mA
Voltage drop at 20 mA	Approx. 2.5 V
Output resistance R_A	10 kΩ to $–V_S$

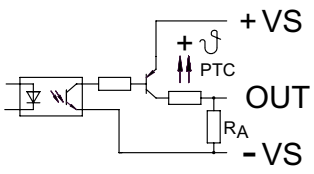

Operating conditions

Ambient temperature	–20 °C…+55 °C
Storage temperature	–20 °C…+60 °C
Interference radiation – FCC Part 15 B	 – Class A
Vibration/shock	EN 60068 Part 2-2-6/27/29/32

This UHF system consists of a processor unit and antennas as outlined in the specifications and may only be operated in industrial environments and only in the listed countries issuing operating licenses, subject to all applicable national legal regulations and standards.
(see Chapter 2 "Safety" beginning on page 5).

5 Technical Data

Data carrier

ISO 18000-6	Type C
EPCglobal™	Class 1 Generation 2

Multi-tagging

Configured EPC length	Maximum number of data carriers (Sum of all active antennas)
96 Bit	25 data carriers
496 Bit	15 data carriers

Function indicators

Operating states	Ready Error Tag present Digital input 1 Digital input 2 Digital output 1 Digital output 2 Digital output 3 Digital output 4	Green LED Red LED Orange LED Orange LED Orange LED Orange LED Orange LED Orange LED Orange LED
EtherNet/IP status	Module status Network Status Data rate Link/activity	Red/green LED Red/green LED Red/green LED Red/green LED

6 Bus Connection

6.1 IP Address

The processor unit and the controlling system communicate using Ethernet/IP. Assigning a unique IP address associates the processor unit with a network.

A processor unit can be integrated into a network in different ways (DHCP, ARP). A MAC address provides the basis for integration into a network. This hardware address is unique and identifies network devices such as the processor unit.

DHCP

Dynamic Host Configuration Protocol (DHCP) allows for dynamic assignment of an IP address using a server. The hardware can be integrated into the network without requiring any further configuration. Only automatic assignment (MAC address) of the IP address needs to be configured.

Default-IP


Factory setting for IP address is 192.168.10.2.

6.2 AnyBus IPconfig

"AnyBus IPconfig" is a software program that allows the address of the hardware to be assigned for the corresponding subnet before installation. In addition, assignment of the IP address via a DHCP server or BOOTP program can be enabled (DHCP on) or disabled (DHCP off).


The "Anybus IPconfig" application is included on the BIS CD provided.

► Start "Anybus IPconfig".
⇒ The subnet is scanned for a connected BIS U-6026. The result of the scan is shown in the "Anybus IPconfig" window.

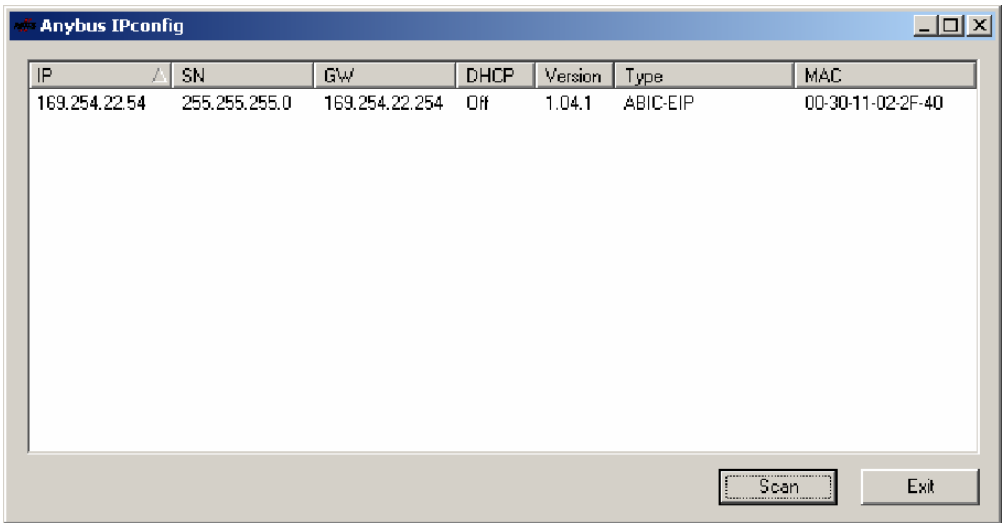

► Select the device from the scan list and double click it.
⇒ The "Configure" window opens.

6 Bus Connection

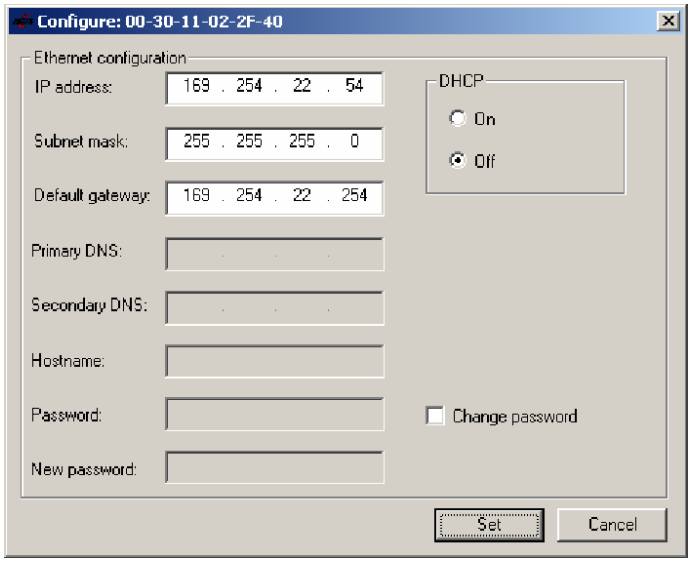

- ► Assign the IP address, subnet mask and gateway address.
- ► Switch DHCP on/off.
- ► Confirm the settings with Set.

6.3 Configuration via Web Browser

If the IP address of the device is known and valid in the local network, the device can be contacted by a web browser, for example "http://169.254.22.54/".

The current settings are displayed; the IP address, subnet mask, gateway and DHCP can be set (password-protected).

For diagnostic purposes, the current contents of the data buffer can also be displayed.

7 Setting the Processor Unit Parameters

The setting of the processor unit parameters is divided into two parts. One part is the configuration of the BUS parameters. The other is the configuration of the application parameters.
The BUS parameters are configured directly via EtherNet/IP and describe the behavior of the EtherNet/IP interface; see Chapter "BUS parameters" on page 16
The application parameters are configured via the service interface (RS232) and specify the behavior of the processor unit with respect to the application, see Chapter "Application parameters" on page 18

7.1 BUS Parameters

Basic knowledge

Schematic structure of the total buffer (process data)

Buffer 1 (for antenna 1 or antenna 3)
Buffer 2 (for antenna 2 or antenna 4)

Dynamic mode

If the dynamic mode function (Dynamic) is enabled, the processor unit accepts the read/write job from the controlling system and saves it, regardless of whether a data carrier is in the active range of the antenna. If a data carrier enters the active range of the antenna, the stored job is run.

Antenna number

If this parameter is activated, the antenna number of the currently selected antenna is displayed in the bit string.

Configuration

The parameters can be configured in two different ways. Configuration with a user program or the EDS file.

Basic information

The parameters for operating the processor unit are stored in the BIS Config Object (class 64_{hex}). Explicit messages are used to access the parameters.

Configuration with a user program
A common user program used for EtherNet/IP device configuration is the Windows software TSLogix5000 for the Logix5000 controller by Rockwell Automation.

EDS file
The EDS file contains all the device parameters for the processor unit. The file can be found on the BIS CD.

7 Setting the Processor Unit Parameters

Parameters

ShowAntenna

class:	64_{hex}
instance:	01_{hex}
attribute:	01_{hex}

Factory settings:	Enable	(=1)

The AN bit in the input buffer shows the selected antenna (1 or 3 for buffer 1 or 2, or 4 for buffer 2).

Other settings:	Disable	(=0)

The AN bit in the input buffer is always 0.

Dynamic1

class:	64_{hex}
instance:	01_{hex}
attribute:	02_{hex}

Factory settings:	Disable	(=0)

Antennas 1 and 3 are in static mode. Read/write commands from the controller are carried out only if there is a data carrier in the range of the respective antenna.

Other settings:	Enable	(=1)

Antennas 1 and 3 are in dynamic mode.

Dynamic2

class:	64_{hex}
instance:	01_{hex}
attribute:	03_{hex}

Factory settings:	Disable	(=0)

Antennas 2 and 4 are in static mode. Read/write commands from the controller are carried out only if there is a data carrier in the range of the respective antenna.

Other settings:	Enable	(=1)

Antennas 2 and 4 are in dynamic mode.

Setting the Parameters

The parameters can be edited with a variety of programs, such as the EtherNet/IP Tool (EIPTool) from Molex.


7 Setting the Processor Unit Parameters

Connection parameters

► Set the connection parameters as follows:

		Instance	Size
Connection parameters	Input:	100	32 bytes
	Output:	150	32 bytes
	Configuration:	1	0

Note
"Configuration" is not supported. Therefore the values are set to 1 and 0.

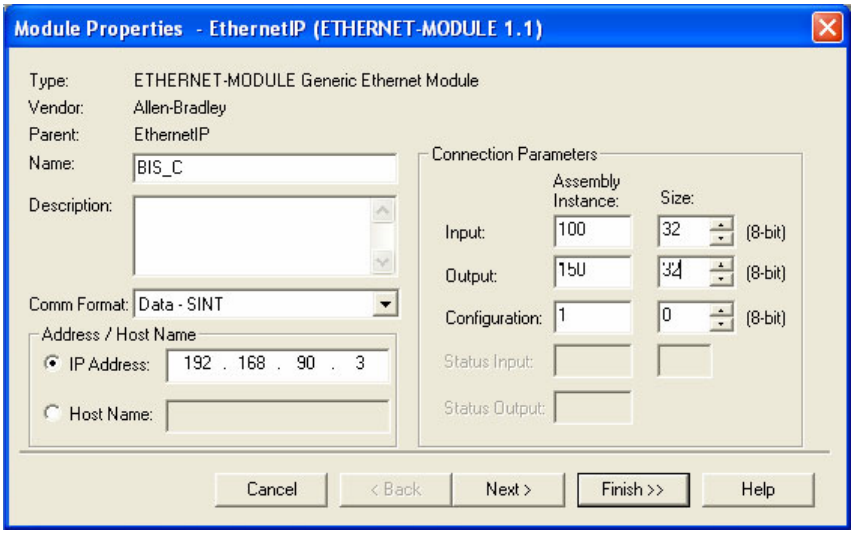

7.2 Application Parameters

Factory Settings

The device is preset ex works. The factory settings are highlighted for the respective parameters.

Some parameters are fixed and cannot be modified:

Multiplexing:
The multiplexing sequence and the dwell time in front of each antenna are fixed.
– The sequence in which the antennas are activated is always 1-2-3-4-1-2-….

Configuration software


The parameters are configured using the "BIS UHF Manager" software.
One requirement is that the processor is connected to the controlling system via the service interface (RS232). The configuration can be overwritten at any time.
The parameters can be saved in an XML file so that they can be retrieved whenever needed.

Note
Detailed information on "BIS UHF Manager" can be found in the software's online help system.

► Start "BIS UHF Manager".
► Click "Device Settings" and "Parameters…" in the menu bar.
⇒ The "Settings" window appears.

7 Setting the Processor Unit Parameters

Note
Only the parameters described in the following can be modified. The area for configuring advanced device parameters is password-protected and can only be accessed by a Balluff service technician.

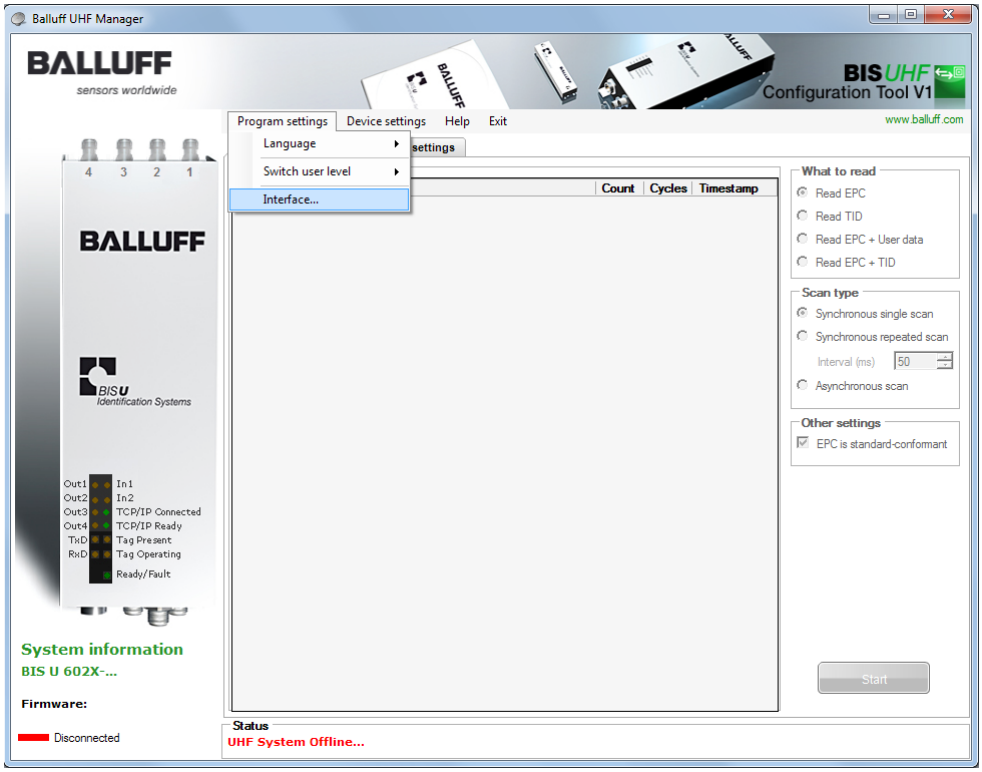


► Start "BIS UHF Manager".
⇒ If "Connect on startup" was selected in the "Interface Settings" window (default setting), the device automatically attempts to establish the last identified connection.

If the device is able to establish the last known connection, "BIS connected…" appears in the status bar.

If the device is not able to establish a connection, "BIS not connected…" appears in the status bar.
The device must then be connected manually:
► Click "Program Settings" and "Interface" in the menu bar.
⇒ The "Interface Settings" window opens.

7 Setting the Processor Unit Parameters

Interface settings
Service interface (RS232)

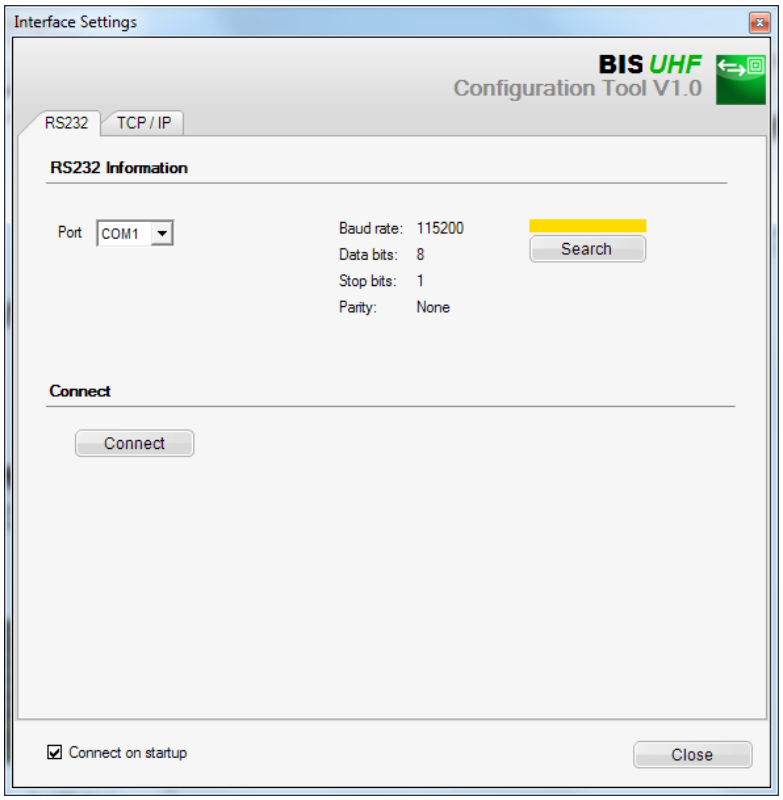

When the program starts, the device automatically connects if "Connect on startup" was selected in the "Interface Settings" window (factory setting).

When the "Interface Settings" window is opened, the last known connection is displayed and the bar above the "Search" button turns yellow.


► Click the "Search" button.
⇒ The program searches for connections.

If the program finds a connection, the connection settings are displayed and the bar above the "Search" button turns green.
► Click the "Connect" button.
⇒ The device is connected.

If the program does not find a connection, the bar above the "Search" button turns red.

7 Setting the Processor Unit Parameters

Device Settings

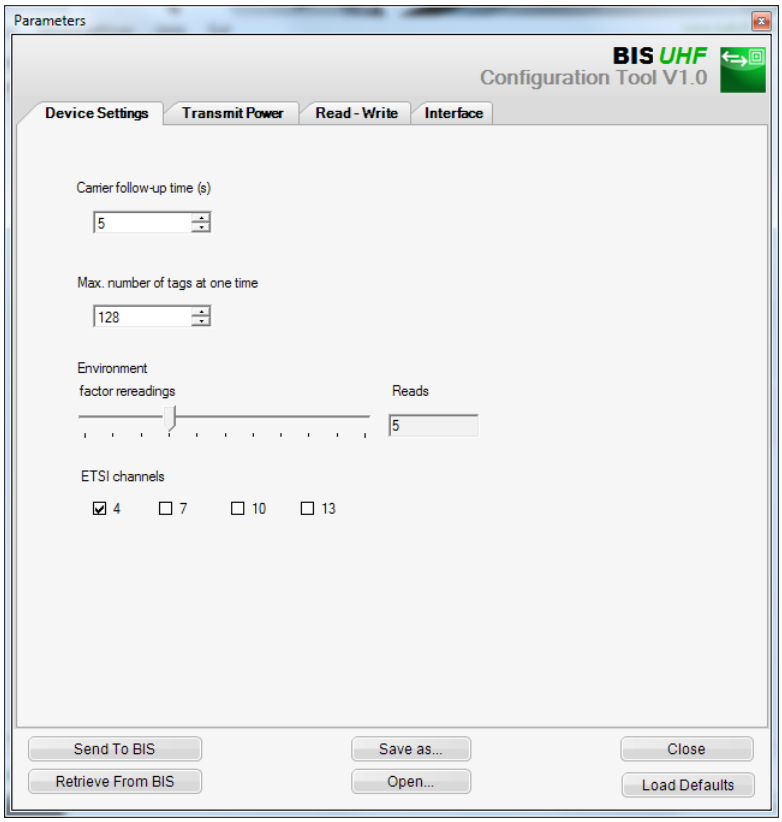

Carrier follow-up time
Follow-up time in seconds of the switched-on antennas after the command is sent. The read or write command should be executed within this time after detection.

Factory setting: *5 seconds*

Max. number of tags at the same time
Maximum number of expected data carriers in the field.

Factory setting: *128*

Environment
Factor rereadings (only for asynchronous detection or dynamic mode)

Number of rereadings after which a data carrier is reported as present (tag coming) or number of failed rereadings after which a data carrier is reported as not present (tag going) (only in dynamic mode).

Factory setting: *5*


ETSI channels
The channel setting determines the channel assignment. If multiple channels are activated, the device automatically selects them by means of the frequency hopping method.

Factory setting: *channel 4 switched on, channels 7…13 switched off*

Note
The ETSI channels selection is only available when using the devices within the European Community.

7 Setting the Processor Unit Parameters

Transmitting Power

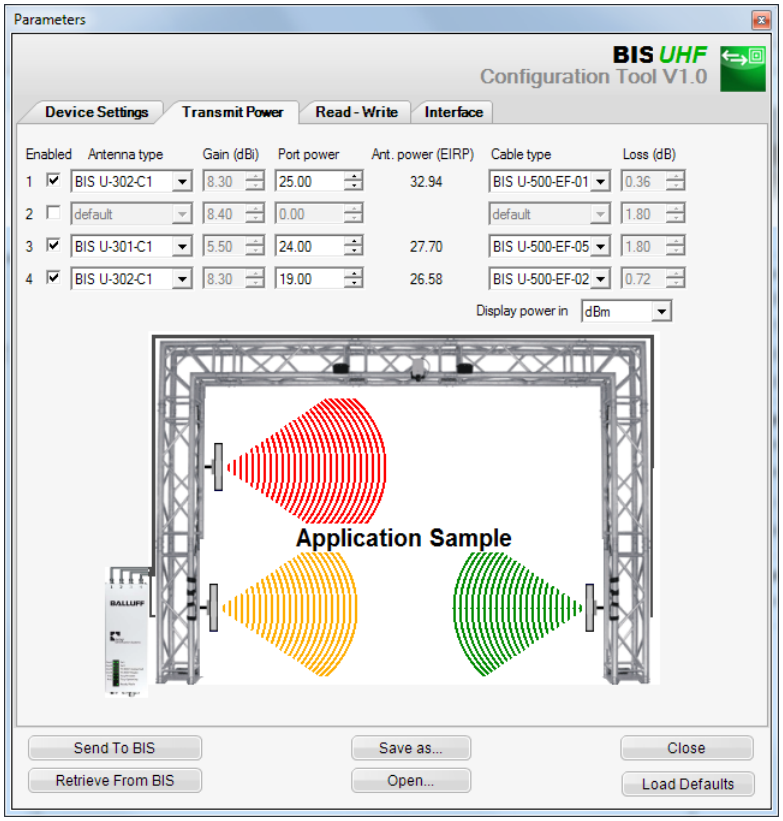

Note

The *Gain* and *Loss* parameters are defined in the *Antenna type* and *Cable type* fields. These values are used to determine the maximum permissible radiated power.

The maximum permissible radiated power and factory settings differ depending on the set country profile. For information on the valid regulations of the different countries, see Chapter 2 "Safety".

In the countries of the European Union, the radiated power is specified in the form of ERP (max. 2 $watts_{ERP}$).

In the USA and Canada, the radiated power is specified in the form of an EIRP power (max. 4 $watts_{EIRP}$).

See the "Basic UHF manual" for more information on radiated powers.

7 Setting the Processor Unit Parameters

Enabled:
Enables/disables antennas 1…4.

Factory setting: *antenna 1 enabled, antennas 2…4 disabled.*

Antenna type
Selection of the used antenna.

Factory setting: *BIS U-302-C1 or BIS U-302-C0*

Port power
For selecting the power on the device (port power).

Factory setting: *22.5 dBm (176 mW) or 20.5 dBm (112 mW)*

Antenna power
Power at the antenna (EIRP or ERP).


Factory setting: *27 dBm (500 mW)*

Cable type
Selection of the cable used.

Factory setting: *BIS U-500-EF-05*

7 Setting the Processor Unit Parameters

Reading/writing

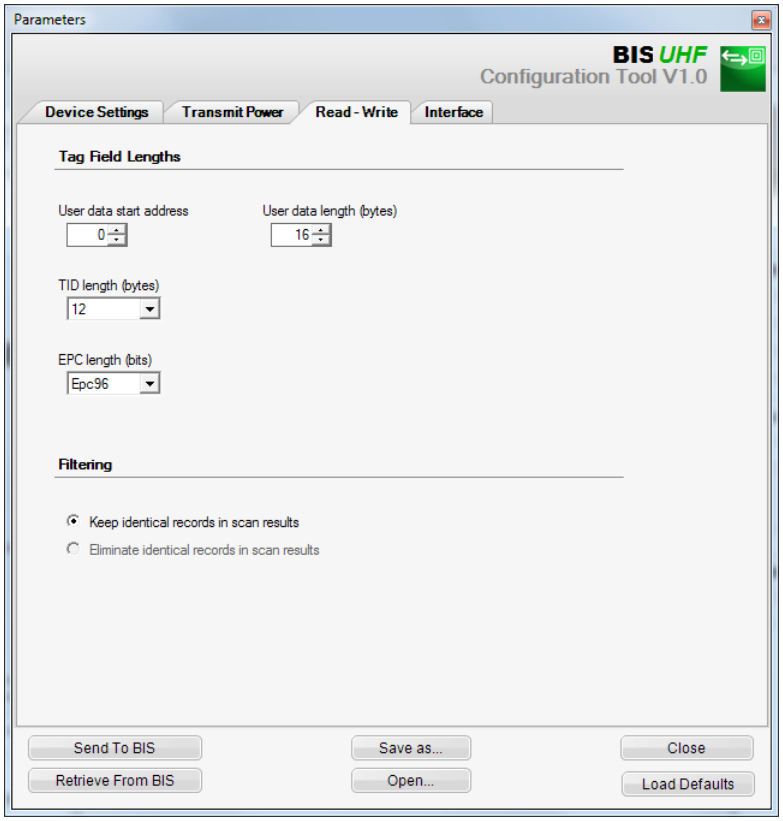

Tag Field Lengths area

User data start address
Start address of the USER data for automatic reading during data carrier searches and if USER data is used as an address during reading or writing.

Factory setting: *0 bytes*

User data length
Length of the USER data for automatic reading during data carrier searches and if USER data is used as an address during reading or writing. The value range is 1 to 16.

Factory setting: *16 bytes*

TID length
Length of the TID data with value range from 2 to 12.

Factory setting: *12 bytes*

Note
If data carriers have a length other than the TID set here, it is possible that they cannot be read from or written to.

7 Setting the Processor Unit Parameters

EPC length
Length of the EPC format on the data carriers. This parameter determines the maximum length of the EPC data to be processed and the output format for the command "Read multiple data carriers (EPC)".

Factory setting: *96 bits*

Note
If the actual EPC length of the data carriers is not equivalent to 96 bits, set the value to 496 bits. Otherwise the read and write commands cannot be run without errors.

8 Device Function

8.1 Function Principle of the BIS U-6026

Two buffers are needed to exchange data and commands between the processor unit and the controlling system. The buffer contents are exchanged using cyclical polling. The buffer content depends on the cycle in which it is written (e.g. control commands at the beginning of a job). When writing to the buffer, the transmitted data from the preceding cycle is overwritten. Unwritten bytes are not deleted and retain their data content.

Total buffer

The buffer size of the input and output buffer is 32 bytes.
This total buffer is divided into 2 halves, each with 16 bytes, for the two antenna pairs 1/3 or 2/4:

– The first 16 bytes contain the process data for antenna 1 or 3 (depending on the status of the HD bit).
– The second 16 bytes contain the process data for antenna 2 or 4 (depending on the status of the HD bit).

Fourteen bytes per antenna are available for data exchange, since the first and last byte of the respective data buffer are used for the controller and status messages.

Output buffer

The control commands for the identification system and the data to be written to the data carrier are sent via the output buffer.

Bit No. / Subaddress	7	6	5	4	3	2	1	0
00_{hex} = 1st bit string		TI	KA	HD		GR		AV
01_{hex}	Command designator or data							
02_{hex}	Start address (Low Byte) or data or number of bytes							
03_{hex}	Start address (Middle Byte) or data							
04_{hex}	Start address (High Byte) or data							
05_{hex}	Number of bytes (Low Byte) or data							
06_{hex}	Number of bytes (Middle Byte) or data							
07_{hex}	Number of bytes (High Byte) or data							
…	Data							
Last byte = 2nd bit string		TI	KA	HD		GR		AV

8 Device Function

Output buffer (cont.)

Configuration and explanation (output buffer)

Subaddress	Bit name	Meaning	Function description
00_{hex} = bit string	TI	Toggle bit in	Controller is ready to receive additional data (read job).
	KA	Antenna deactivation	Activates or deactivates the antenna selected with HD. 0: activated 1: deactivated
	HD	Antenna selection	Selection of the antennas for buffer 1 and buffer 2. Buffer 1: 0: antenna 1, 1: antenna 3 Buffer 2: 0: antenna 2, 1: antenna 4
	GR	Basic state	The processor unit goes into basic state for the respective antenna. Any pending job is canceled.
	AV	Job	A job is pending for the respective antenna.

8 Device Function

Input buffer

The input buffer is used to send the data read by the identification system, the designations and the status codes to the controlling system.

Bit No. / Subaddress	7	6	5	4	3	2	1	0
00_{hex} = 1st bit string	BB	HF	TO	AN	AF	AE	AA	TP
01_{hex}	Status code or Data							
02_{hex}	Data							
…	Data							
Last byte = 2nd bit string	BB	HF	TO	AN	AF	AE	AA	TP

Configuration and explanation (input buffer)

Subaddress	Bit name	Meaning	Function description
00_{hex} = bit string	BB	Ready	Processor unit is ready for operation.
	HF	Antenna error	Cable breakage at antenna or no antenna connected.
	TO	Toggle bit out	**Read operation:** additional data is made available by the processor unit. **Write operation:** processor unit can accept additional data.
	AN	Antenna	Selected antenna. Buffer 1: 0: antenna 1, 1: antenna 3 Buffer 2: 0: antenna 2, 1: antenna 4
	AF	Job error	Error in processing the job or job canceled.
	AE	Job end	Confirmation – Job finished without error.
	AA	Job start	Confirmation – Job was recognized and started.
	TP	Tag present	Data carrier is in the range of the antenna (only in connection with read, write and list commands).

8 Device Function

Input buffer (cont.)

Structure of the input buffer

The process data buffer is identical for all commands.

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Status code or data	– If AF bit 1: provides information on the status of a query – If AF bit 0: data is written as with the individual commands
…	Data	– If AF bit 1: unused – If AF bit 0: data
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

Information

- The status code is only sent if the AF bit is set in the bit string.
- Because the read EPC can have varying lengths (number of bytes), a length field is sent. The maximum processed EPC length (12 bytes or 62 bytes) is configured.
- The TID is always sent in a 12-byte frame. The actual length within this frame is configured (see Chapter "BUS Parameters", on page 16 and Chapter "Application Parameters", on page 18).

Status codes

Information
Status codes are only valid in combination with the AF bit!

Subaddress	Function description
01_{hex}	Job cannot be executed because there is no active data carrier in the active range of the antenna.
02_{hex}	Not possible to read the data carrier.
03_{hex}	Data carrier was removed from the range of the antenna during reading.
04_{hex}	Cannot write to the data carrier.
05_{hex}	Data carrier was removed from the range of the antenna during writing.
07_{hex}	No or invalid command designator with set AV bit or the number of bytes is 00_{hex}.
09_{hex}	Cable breakage at antenna or no antenna connected.
$0E_{hex}$	There is more than 1 data carrier or more than 1 selected data carrier in the active range of the antenna and the executed command is valid only for individual data carriers.
$0F_{hex}$	First and second bit string not equal. The second bit string must be used.
43_{hex}	Error when reading or writing parameters of the internal memory.
44_{hex}	Arbitrary device behavior.
46_{hex}	Command outside the address range of the data carrier.
$4E_{hex}$	No antenna activated.

8 Device Function

Communication

Communication between the controlling system and processor unit is defined by a sequence protocol. Communication between the controlling system and processor unit is implemented using control bit in the output and input buffer.

Basic sequence

1. The controller sends a command designator to the processor unit in the output buffer with the AV bit set. The AV bit tells the processor unit that a job is beginning and the transmitted data is valid.
2. The processor unit accepts the job and confirms the job by setting the AA bit in the input buffer.
3. If additional data needs to be exchanged for the job, readiness for additional data exchange is indicated by inverting the TI and TO toggle bits.
4. The processor unit has correctly executed the job and sets the AE bit in the input buffer.
5. The controller has accepted all data. The AV bit in the output buffer is reset.
6. The processor unit resets all control bits set in the input buffer during the job (AA bit, AE bit). The processor unit is ready for the next job.

Structure of the output buffer for various commands

Command designator 00_{hex}: No command present

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	00_{hex}: No command present.
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

Command designator 81_{hex} or 01_{hex}: Read individual data carrier (USER data)

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	81_{hex}: read data carrier (USER data).
02_{hex}	Start address 1 (Low Byte)	Start address (Low Byte) from which reading is to start.
03_{hex}	Start address 2 (Middle Byte)	Start address (Middle Byte) from which reading is to start.
04_{hex}	Start address 3 (High Byte)	Start address (High Byte) from which reading is to start.
05_{hex}	Number of bytes 1 (Low Byte)	The number of bytes (Low Byte) that are to be read starting from the start address.
06_{hex}	Number of bytes 2 (Middle Byte)	The number of bytes (Middle Byte) that are to be read starting from the start address.
07_{hex}	Number of bytes 3 (High Byte)	The number of bytes (High Byte) that are to be read starting from the start address.
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

8 Device Function

Command description (continued)

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Data	Transmission of data that was read from the data carrier.
…	Data	Transmission of data that was read from the data carrier. … is continued, if necessary, in further buffer transmissions until the total number of bytes is reached.
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

Command designator 42_{hex} or 03_{hex}: Read individual data carrier (EPC)

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	03_{hex}: Read data carrier (EPC).
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Data	Number of bytes of the EPC read
…	Data	Transmission of EPC data that was read from the data carrier. … is continued, if necessary, in further buffer transmissions until the total number of bytes is reached.
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

8 Device Function

Command description (continued)

Command designator 44_{hex} or 05_{hex}: Read individual data carrier (TID)

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	05_{hex}: read data carrier (TID).
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Data	Transmission of TID data that was read from the data carrier.
…	Data	Transmission of TID data that was read from the data carrier. … is continued, if necessary, in further buffer transmissions until the total number of bytes is reached.
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

8 Device Function

Command description (continued)

Command designator 82_{hex} or 02_{hex}: Write to individual data carrier (USER data)

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	82_{hex}: Write to data carrier (USER data).
02_{hex}	Start address 1 (Low Byte)	Start address (Low Byte) from which writing is to start.
03_{hex}	Start address 2 (Middle Byte)	Start address (Middle Byte) from which writing is to start.
04_{hex}	Start address 3 (High Byte)	Start address (High Byte) from which writing is to start.
05_{hex}	Number of bytes 1 (Low Byte)	The number of bytes that are to be written starting from the start address (Low Byte).
06_{hex}	Number of bytes 2 (Middle Byte)	The number of bytes that are to be written starting from the start address Middle Byte).
07_{hex}	Number of bytes 3 (High Byte)	The number of bytes that are to be written starting from the start address (High Byte).
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

Data is accepted from the processor unit only after the command has been accepted by the processor unit and acknowledged.

00_{hex}	1st bit string	
01_{hex}	Data	Transmission of the data that is to be written to the data carrier.
…	Data	Transmission of the data that is to be written to the data carrier.
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

8 Device Function

Command description (continued)

Command designator 43_{hex} or 04_{hex}: Write to individual data carrier (EPC)

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	04_{hex}: Write to data carrier (EPC).
02_{hex}	No. of bytes	Number of bytes (1…62) to be written beginning with the start address 00_{hex}.
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

Data is accepted from the processor unit only after the command has been accepted by the processor unit and acknowledged.

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Data	Transmission of the data that is to be written to the data carrier.
…	Data	Transmission of the data that is to be written to the data carrier.
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

Command designator $B2_{hex}$ or 32_{hex}: Write constant value to individual data carrier (USER data)

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	$B2_{hex}$: Write to data carrier (USER data).
02_{hex}	Start address 1 (Low Byte)	Start address (Low Byte) from which writing is to start.
03_{hex}	Start address 2 (Middle Byte)	Start address (Middle Byte) from which writing is to start.
04_{hex}	Start address 3 (High Byte)	Start address (High Byte) from which writing is to start.
05_{hex}	Number of bytes 1 (Low Byte)	The number of bytes that are to be written starting from the start address (Low Byte).
06_{hex}	Number of bytes 2 (Middle Byte)	The number of bytes that are to be written starting from the start address Middle Byte).
07_{hex}	Number of bytes 3 (High Byte)	The number of bytes that are to be written starting from the start address (High Byte).
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

Data is accepted from the processor unit only after the command has been accepted by the processor unit and acknowledged.

00_{hex}	1st bit string	
01_{hex}	Data	Value that is to be written to the data carrier.
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

8 Device Function

Command description (continued)

Command designator 45_{hex}: Set antenna power

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	45_{hex}: Set antenna power
02_{hex}	Antenna power	Antenna power for the current antenna (head) in increments of 0.25 dBm Permitted value range (decimal): **BIS U-6026-034-114-…:** 77 (+19.25 dBm EIRP) … 144 (+36.00 dBm EIRP) The set power is not permanently saved and is reset to the saved default value when the reader is booted. The socket power on the device is calculated and set based on the configured antenna/cable parameters.
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

Command designator 46_{hex}: Read out antenna power

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	46_{hex}: Read out antenna power
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Antenna power	Antenna power for the current antenna (head) in increments of 0.25 dBm or 0 for antenna that is switched off
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

8 Device Function

Command description (continued)

Command designator 47_{hex}: Read multiple data carriers (EPC)

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	47_{hex}: Read multiple data carriers (EPC)
02_{hex}	Type	0 = EPC (other values currently not supported)
03_{hex}	Max Number of Data Carriers	Maximum number of data carriers to be output 1…255, (0 = no limitation) If the number is greater than the values listed under "Technical Data - Multi-tagging", then the lower value applies.
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Number of data carriers read	1…255
02_{hex}	Number of bytes per EPC	12 or 64 This corresponds to the length of the longest transmitted EPC configured in the device. EPCs shorter than this length are output right-justified and filled with zeros on the left. In the following, the (number of data carriers read) × (number of bytes per EPC) are transmitted. For 64 bytes per EPC, the actual EPC length in ASCII is specified in the 1st and 2nd byte of the EPC.
03_{hex}	Data of 1st EPC	Actual EPC data
…	Data of 1st EPC	Actual EPC data
…	Data of 1st EPC	Actual EPC data
…	Data of 2nd EPC	Actual EPC data
…	Data of 2nd EPC	Actual EPC data
…	Data	… is continued, if necessary, in further buffer transmissions until the total number of bytes is reached.
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

This command always responds immediately—even for configured dynamic mode—with the currently identified number of tags.

If no tag is identified, this command generates an error message (status code 01).

8 Device Function

Command description (continued)

Command designator 55_{hex}: Read number of tags

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	55_{hex}: Read number of tags
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Number of data carriers read	0…255
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

This command always responds immediately—even for configured dynamic mode—with the currently identified number of tags.

If no tag is identified, this command returns the number "0" and no error message.

8 Device Function

Command description (continued)

Command designator 40_{hex}: Select (data carrier selection for multi-tagging)

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	40_{hex}: Select tag (selection of the data carrier to be used for further processing steps such as reading or writing)
02_{hex}	Type	0 = EPC (other values currently not supported)
03_{hex}	No. of bytes	Number of bytes of the data carrier identifier (EPC) that is transmitted in following cycles.
04_{hex}	Reserved	Reserved for expansions; please set to 0.
05_{hex}	Reserved	Reserved for expansions; please set to 0.
06_{hex}	Reserved	Reserved for expansions; please set to 0.
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

Data of the data carrier identifier is accepted from the processor unit only after the command has been accepted by the processor unit and acknowledged.

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Data	1st byte of the data carrier identifier (EPC or TID)
…	Data	Other bytes of the data carrier identifier (EPC or TID) … is continued, if necessary, in further buffer transmissions until the total number of bytes is reached.
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

After the Select command, read/write commands (command designators 01_{hex}, 02_{hex}, 03_{hex}, 04_{hex}, 05_{hex}, 32_{hex}, 42_{hex}, 43_{hex}, 44_{hex}, 81_{hex}, 82_{hex}, $B2_{hex}$) for the corresponding antenna are run only on the designated data carrier, if it is available.

If the selected data carrier is not in the field of the antenna at the moment, the Select command is processed without errors anyway, but following read/write commands return an error with status code 01_{hex} (no data carrier).

If the selected data carrier identifier is present on more than one tag, the following commands are run as follows:
- Read commands are run on **one** data carrier, which is randomly selected from the suitable data carriers.
- Write commands are run on **all** suitable data carriers.

8 Device Function

Command description (continued)

Information

– The data carrier identifier is usually taken from a preceding command 47_{hex}: *Read multiple data carriers (EPC)*. Omit the leading fill bytes in the data carrier list for this. The entire entry is usually used for the 12-byte EPC format; for the 64-byte format (as ASCII digits in byte address 0 and 1 of the respective entry), read the actual length and then read out the identifier starting from the byte address (64-length).
Example: Length specification = "24" means that the EPC is in byte address 40…63.

– If multiple data carriers are to be processed in sequence, what usually results is the following command sequence:

  Command 47_{hex}: Read multiple data carriers (EPC)

  Command 40_{hex}: Select (1st identifier)
  … Process 1st data carrier

  Command 40_{hex}: Select (2nd identifier)
  … Process 2nd data carrier

  Command 40_{hex}: Select (3rd identifier)
  … Process 3rd data carrier

  etc.

  Command 41_{hex}: Unselect

  The controller can choose the sequence of data carriers at random, omit data carriers or select the same one repeatedly.

– With the BIS U-602_ devices the selection is made only using the EPC, thereby also enabling operation of multiple antennas at one read position. Then a data carrier with a suitable data carrier identifier is also read if it is located in front of an antenna **other** than the one to which the Select command refers. If you need to ensure that only data carriers in front of the current antenna are read after a Select command, the EPC identifiers of the data carrier must be unique **and** the presence of the data carrier in front of the desired antenna must first be checked using command 47_{hex}: *Read multiple data carriers (EPC)*.

– A data carrier selection for an antenna remains valid until one of the following events occurs:
  – A new selection is defined.
  – An Unselect command undoes the selection.
  – The GR bit (basic state) for the corresponding antenna is set.
  – The device is restarted.

8 Device Function

Command description (continued)

Command designator 41_{hex}: Unselect (undo the data carrier selection)

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	41_{hex}: Unselect (undo the fixed data carrier selection)
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

The Unselect command undoes a data carrier selection for an antenna. If no selection was made, the status remains unchanged.

Subsequent read/write commands then refer to any individual data carrier in the field of the antenna. If multiple data carriers are in the field of the antenna, the following read/write commands are ended with an error and status code $0E_{hex}$ (multiple data carriers).

Command designator 61_{hex}: Set IO outputs

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	61_{hex}: Set IO outputs
02_{hex}	Outputs to be set (bit mask)	$01_{hex} = 00000001_b$ = Set output 1 $02_{hex} = 00000010_b$ = Set output 2 $04_{hex} = 00000100_b$ = Set output 3 $08_{hex} = 00001000_b$ = Set output 4 Combination is possible, for example $0D_{hex} = 00001101_b$ = Set outputs 1, 2 and 4; other outputs remain unaffected.
03_{hex}	Value to be set	00_{hex} = Set outputs to 0 01_{hex} = Set outputs to 1 02_{hex} = Invert outputs 03_{hex} = Flash outputs (0.5 s)
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

8 Device Function

Command description (continued)

Command designator 62_{hex}: Read in IO inputs

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Command designator	62_{hex}: Read in IO inputs
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

If execution is successful, the response is passed to the input buffer in the following format:

Subaddress	Meaning	Function description
00_{hex}	1st bit string	
01_{hex}	Status values (bit mask)	$00_{hex} = 00000000_b$ = In 1 Low, In 2 Low $01_{hex} = 00000001_b$ = In 1 High, In 2 Low $02_{hex} = 00000010_b$ = In 1 Low, In 2 High $03_{hex} = 00000011_b$ = In 1 High, In 2 High
…	None	No meaning
Last byte	2nd bit string	If first and second bit strings agree, there is valid data present.

8 Device Function

8.2 Function Indicators

The operating states of the identification system and the EtherNet/IP connection are indicated via LEDs.

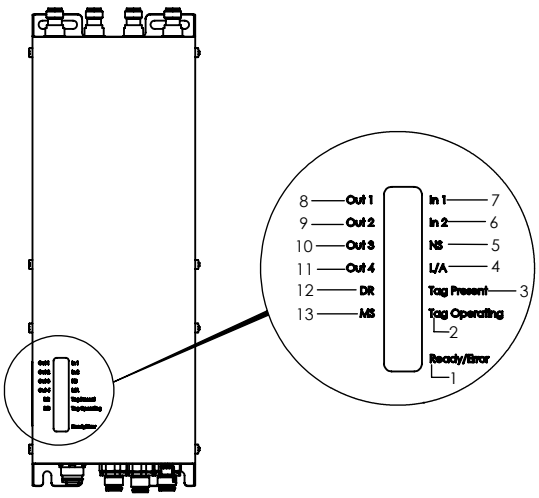


Figure 5: Function indicators

1 Ready / Error
2 Tag operating
3 Tag present
4 Link/Activity (L/A)
5 Network status (NS)
6 Digital input 2 (In 2)
7 Digital input 1 (In 1)
8 Digital output 1 (Out 1)
9 Digital output 2 (Out 2)
10 Digital output 3 (Out 3)
11 Digital output 4 (Out 4)
12 Data rate (DR)
13 Module status (MS)

Start-up phase

The "Ready/Error" LED flashes green during the start-up phase.
When setup is finished and the system is ready for operation, the "Ready/Error" LED lights up green.

The MS, NS, DR and L/A LEDs flash alternating between green and red during the switch-on operation before they reach their respective display status.

8 Device Function

Diagnostics

Identification system

Status LED	Meaning
Ready / Error	
Off	Device is not ready for operation
Illuminated green	Device is ready for operation
Flashing green	Startup phase of the device (Setup)
Flashing red	Error (e.g. device error or broken cable)
Red lit	Internal error (contact Service if this occurs repeatedly)

Tag operating	
Off	No command
Illuminated orange	Command to data carrier (e.g. detection, read or write)

Tag present	
Off	No command
Flashing orange	No data carrier detected in the active range of the antenna
Illuminated orange	Data carrier detected in the active range of the antenna

Digital inputs/outputs

In 1…In 2	
Off	Digital input is not set or not connected
Illuminated orange	Digital input is connected and set

Out 1…Out 2	
Off	Digital output is not set
Illuminated orange	Digital output is set

8 Device Function

Ethernet and EtherNet/IP connection

Status LED	Meaning
Data rate (DR)	
Off	Transmission rate 10 Mbit
Green	Transmission rate 100 Mbit
Red	–

Module status (MS)	
Off	No power supply for the module
Green	Device is ready for operation
Flashes green	Missing or incorrect configuration of the module
Red	Fatal error
Flashes red	Rectifiable error

Network status (NS)	
Off	No voltage or no IP address
Green	Device has at least one EtherNet/IP connection
Flashes green	Device has no EtherNet/IP connection
Red	One IP address exists in duplicate
Flashes red	One or more EtherNet/IP connections have a time-out

Link/Activity (L/A)	
Off	No voltage
Green	The device is connected over Ethernet
Flashes green	RX/TX activity
Red	–

8 Device Function

8.3 Examples

1st example **Read 33 bytes of USER data starting at data carrier address 10**

Command from controller		BIS U-6026 reaction	
1. Process output buffer (note sequence):		2. Process input buffer (note sequence):	
01_{hex}	Command designator 01_{hex}	$00_{hex}/0F_{hex}$	Set AA bit
02_{hex}	Start address $0A_{hex}$	$01…0E_{hex}$	Enter first 14 bytes
03_{hex}	Start address 00_{hex}	$00_{hex}/0F_{hex}$	*Set AE bit*
04_{hex}	Start address 00_{hex}		
05_{hex}	No. of bytes 21_{hex}		
06_{hex}	No. of bytes 00_{hex}		
07_{hex}	No. of bytes 00_{hex}		
$00_{hex}/0F_{hex}$	Set AV bit		
3. Process input buffer:		4. Process input buffer:	
$01…0E_{hex}$	Copy first 14 bytes	$01…0E_{hex}$	Enter second 14 bytes
Process output buffer:		$00_{hex}/0F_{hex}$	Invert TO bit
$00_{hex}/0F_{hex}$	Invert TI bit		
5. Process input buffer:		6. Process input buffer:	
$01…0E_{hex}$	Copy second 14 bytes	$01…05_{hex}$	Enter last 5 bytes
Process output buffer:		$00_{hex}/0F_{hex}$	Invert TO bit
$00_{hex}/0F_{hex}$	Invert TI bit		
7. Process input buffer:		8. Process input buffer:	
$01…05_{hex}$	Copy last 5 bytes	$00_{hex}/0F_{hex}$	Reset AA and AE bits
Process output buffer:			
$00_{hex}/0F_{hex}$	Reset AV bit		

8 Device Function

2nd example **Read the EPC of the data carrier**

For configuration with EPC length of 12 bytes!

Command from controller		BIS U-6026 reaction	
1. Process output buffer (note sequence):		2. Process input buffer (note sequence):	
01_{hex}	Command designator 03_{hex}	$00_{hex}/0F_{hex}$	Set AA bit
$00_{hex}/0F_{hex}$	Set AV bit	01_{hex}	Length of the received EPC
		$02…0D_{hex}$	Enter EPC
		$00_{hex}/0F_{hex}$	*Set AE bit*
3. Process input buffer:		4. Process input buffer:	
$02…0D_{hex}$	Copy EPC	$00_{hex}/0F_{hex}$	Reset AA and AE bits
Process output buffer:			
$00_{hex}/0F_{hex}$	Reset AV bit		

8 Device Function

3rd example **Read the TID of the data carrier**

If the TID length configured in the UHF manager is shorter than 12 bytes, leading zeros are used to pad the TID to 12 bytes.

Command from controller		BIS U-6026 reaction	
1. Process output buffer (note sequence):		2. Process input buffer (note sequence):	
01_{hex}	Command designator 05_{hex}	$00_{hex}/0F_{hex}$	Set AA bit
$00_{hex}/0F_{hex}$	Set AV bit	$01…0C_{hex}$	Enter TID
		$00_{hex}/0F_{hex}$	*Set AE bit*
3. Process input buffer:		4. Process input buffer:	
$01…0C_{hex}$	Copy TID	$01…0F_{hex}$	Reset AA and AE bits
Process output buffer:			
$00_{hex}/0F_{hex}$	Reset AV bit		

8 Device Function

4th example **Read 30 bytes of USER data starting at data carrier address 10 with read error**

> **Information**
> If an error occurs, the AF bit is set instead of the AE bit, together with a corresponding error number. Setting the AF bit cancels the job and declares it as finished.

Command from controller		BIS U-6026 reaction	
1. Process output buffer (note sequence):		2. Process input buffer (note sequence): **If an error occurs immediately!**	
01_{hex}	Command designator 01_{hex}	$00_{hex}/0F_{hex}$	Set AA bit
02_{hex}	Start address $0A_{hex}$	01_{hex}	Enter error number
03_{hex}	Start address 00_{hex}	$00_{hex}/0F_{hex}$	*Set AF bit*
04_{hex}	Start address 00_{hex}		
05_{hex}	No. of bytes $1E_{hex}$		
06_{hex}	No. of bytes 00_{hex}		
07_{hex}	No. of bytes 00_{hex}		
$00_{hex}/0F_{hex}$	Set AV bit		
3. Process input buffer:		4. Process input buffer:	
01_{hex}	Copy error number	$00_{hex}/0F_{hex}$	Reset AA and AF bits
Process output buffer:			
$00_{hex}/0F_{hex}$	Invert AV bit		


8 Device Function

5th example **Write 32 bytes of USER data starting at data carrier address 20**

Command from controller		BIS U-6026 reaction	
1. Process output buffer (note sequence):		2. Process input buffer (note sequence):	
01_{hex}	Command designator 02_{hex}	$00_{hex}/0F_{hex}$	Set AA bit Invert TO bit
02_{hex}	Start address 14_{hex}		
03_{hex}	Start address 00_{hex}		
04_{hex}	Start address 00_{hex}		
05_{hex}	No. of bytes 20_{hex}		
06_{hex}	No. of bytes 00_{hex}		
07_{hex}	No. of bytes 00_{hex}		
$00_{hex}/0F_{hex}$	Set AV bit		
3. Process output buffer:		4. Process output buffer:	
$01…0E_{hex}$	Enter first 14 bytes	$01…0E_{hex}$	Copy first 14 bytes
$00_{hex}/0F_{hex}$	Invert TI bit	Process input buffer:	
		$00_{hex}/0F_{hex}$	Invert TO bit
5. Process output buffer:		6. Process output buffer:	
$01…0E_{hex}$	Enter second 14 bytes	$01…0E_{hex}$	Copy second 14 bytes
$00_{hex}/0F_{hex}$	Invert TI bit	Process input buffer:	
		$00_{hex}/0F_{hex}$	Invert TO bit
7. Process output buffer:		8. Process output buffer:	
$01…04_{hex}$	Enter last 4 bytes	$01…04_{hex}$	Copy last 4 bytes
$00_{hex}/0F_{hex}$	Invert TI bit	Process input buffer:	
		$00_{hex}/0F_{hex}$	Set AE bit
9. Process output buffer:		10. Process input buffer:	
$00_{hex}/0F_{hex}$	Reset AV bit	$00_{hex}/0F_{hex}$	Reset AA and AE bits

8 Device Function

6th example **Write 12 bytes of EPC on the data carrier**

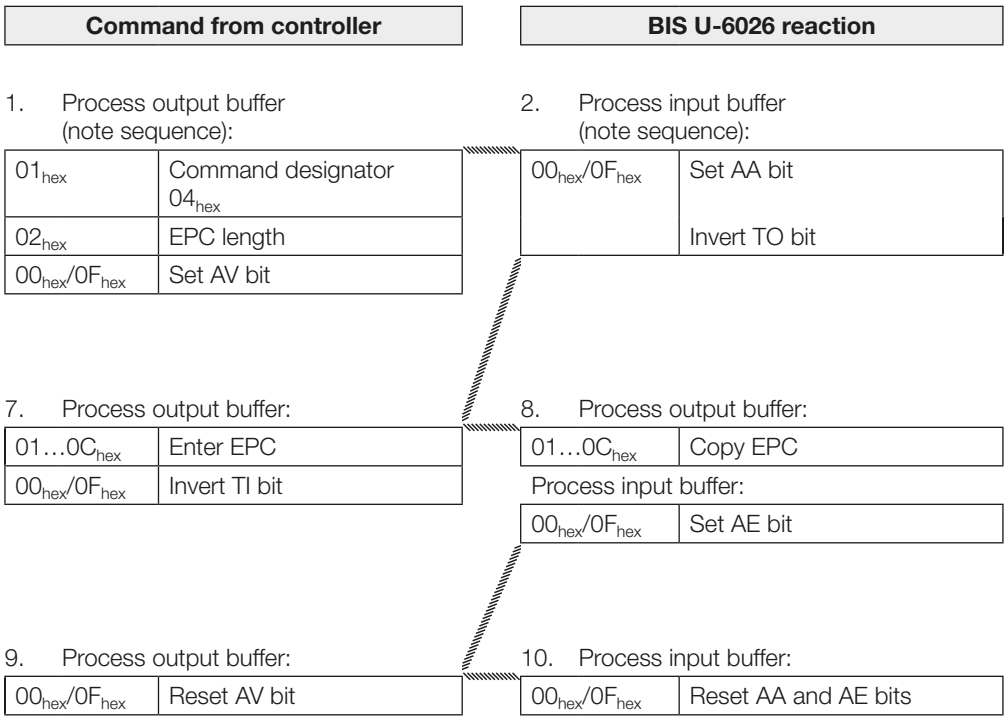

8 Device Function

7th example **Establish basic state of antenna 1**

The antennas of the BIS U identification system can be set to the basic state independent of one another.

Controller		BIS U-6026 reaction	
1. Process output buffer (note sequence):		2. Go to basic state. Process input buffer:	
$00_{hex}/0F_{hex}$	Set GR bit	$00_{hex}/0F_{hex}$	Reset BB bit
3. Process output buffer:		4. Process input buffer:	
$00_{hex}/0F_{hex}$	Reset GR bit	$00_{hex}/0F_{hex}$	Set BB bit

8th example **Switch off antennas**

In normal operation, all antennas are switched on. By setting the KA bit, the antenna selected by the HD bit can be switched off (antenna 1 or 3 for buffer 1, antenna 2 or 4 for buffer 2).

Controller	
1. Process output buffer:	
$00_{hex}/0F_{hex}$	Set KA bit

The antennas are switched back on by resetting the KA bit.

8 Device Function

9th example **Read the EPCs of multiple data carriers in front of the antenna**


With a maximum number of 5, EPC size of 12 bytes configured, 3 data carriers identified

Command from controller		BIS U-6026 reaction	
1. Process output buffer (note sequence):		2. Process input buffer (note sequence):	
01_{hex}	Command designator 47_{hex}	00_{hex}/$0F_{hex}$	Set AA bit
02_{hex}	Type EPC 00_{hex}	01_{hex}	Number of data carriers 03_{hex}
03_{hex}	Max. number 05_{hex}	02_{hex}	Number of bytes per EPC $0C_{hex}$
00_{hex}/$0F_{hex}$	Set AV bit	03_{hex}…$0E_{hex}$	First EPC 12 bytes
		00_{hex}/$0F_{hex}$	Set AE bit
3a. Process input buffer:		4. Process input buffer:	
01_{hex}	Note number of data carriers	$01…0C_{hex}$	Enter second EPC 12 bytes
02_{hex}	Save number of bytes	$0D_{hex}$ /$0E_{hex}$	Enter third EPC 2 bytes
03_{hex} /$0E_{hex}$	Copy first EPC 12 bytes	00_{hex}/$0F_{hex}$	Invert TO bit
3b. Process output buffer:			
00_{hex}/$0F_{hex}$	Invert TI bit		
5a. Process input buffer:		6. Process input buffer:	
01_{hex}…$0C_{hex}$	Copy second EPC 12 bytes	01_{hex}…$0A_{hex}$	Enter third EPC 10 bytes
$0D_{hex}$ /$0E_{hex}$	Copy third EPC 2 bytes	00_{hex}/$0F_{hex}$	Invert TO bit
5b. Process output buffer:			
00_{hex}/$0F_{hex}$	Invert TI bit		
7a. Process input buffer:		8. Process input buffer:	
01_{hex} /$0A_{hex}$	Copy third EPC 10 bytes	00_{hex}/$0F_{hex}$	Reset AA and AE bits
7b. Process output buffer:			
00_{hex}/$0F_{hex}$	Reset AV bit		

8 Device Function

10th example **Select a data carrier for further processing**

For configuration with EPC size of 12 bytes

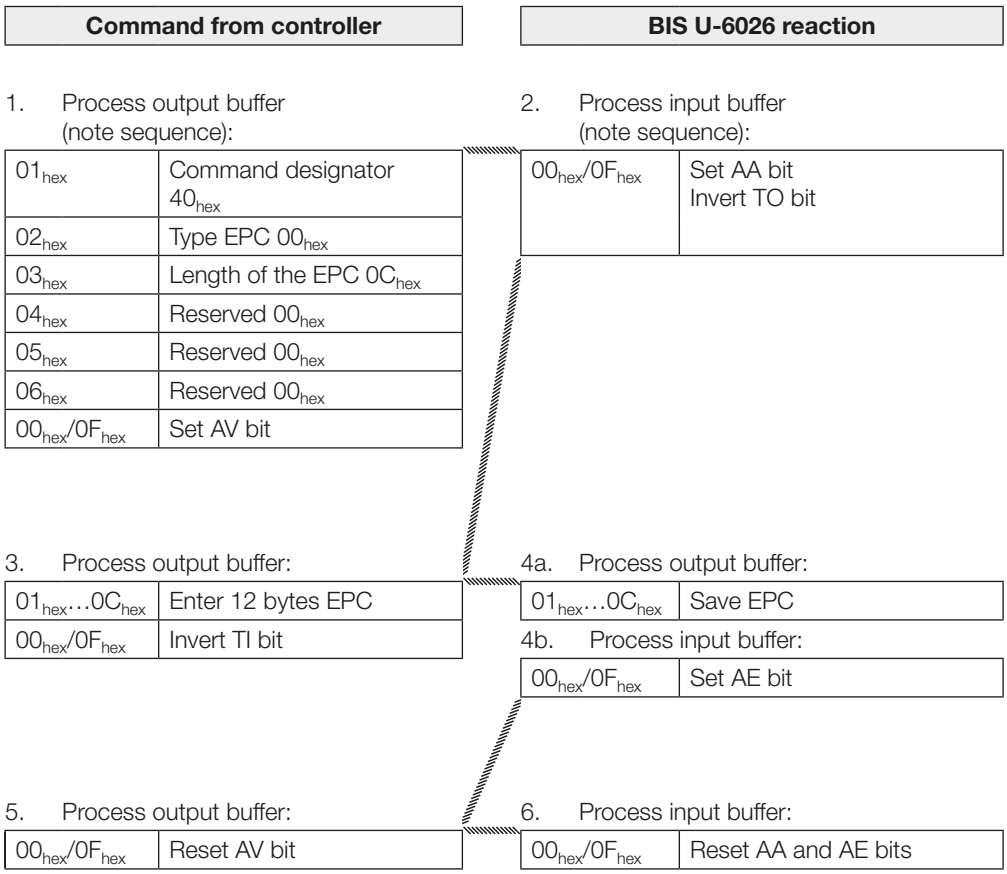

Appendix

Type code

BIS U– 6026 –034–114–06–ST35

Balluff Identification System

Series U read/write system

Hardware type

6020 = Serial interface RS232 (metal housing)
6026 = EtherNet/IP (metal housing)
6027 = Ethernet TCP/IP (metal housing)
6028 = PROFINET (metal housing)

Software type

034 = Balluff protocol EtherNet/IP
048 = Balluff protocol PROFINET
053 = Balluff protocol RS232 UHF for Europe
054 = Balluff protocol Ethernet TCP/IP UHF for Europe
059 = Balluff protocol RS232 UHF for USA/Canada/Mexico/Brazil/China/Japan etc.
060 = Balluff protocol Ethernet TCP/IP UHF for USA/Canada/Mexico/Brazil/China/Japan etc.

Antenna socket version

10_ = Country setting 865…868 MHz Europe
11_ = Country setting 902…928 MHz USA/Canada/Mexico/Argentina
12_ = Country setting 920.5…924.5 MHz China
13_ = Country setting 915…928 MHz Brazil
15_ = Country setting 916.8…920.4 MHz Japan
17_ = Country setting 920…926 MHz Australia
__4 = 4 antenna sockets

Interface

00 = RS232
06 = Ethernet

Customer connection

ST22 = for PROFINET device with AIDA recommendation
ST26 = for serial device
ST27 = for TCP/IP device
ST28 = for PROFINET device
ST35 = for EtherNet/IP device

Accessories (optional, not included in scope of delivery)

Type	Ordering code
Mounting plates	BIS Z-HW-004

Note
You can find more accessories for the BIS U-6026-… in the Balluff BIS catalog and at www.balluff.com.

Appendix

ASCII table

Decimal	Hex	Control code	ASCII	Decimal	Hex	ASCII	Decimal	Hex	ASCII
0	00	Ctrl @	NUL	43	2B	+	86	56	V
1	01	Ctrl A	SOH	44	2C	,	87	57	W
2	02	Ctrl B	STX	45	2D	-	88	58	X
3	03	Ctrl C	ETX	46	2E	.	89	59	Y
4	04	Ctrl D	EOT	47	2F	/	90	5A	Z
5	05	Ctrl E	ENQ	48	30	0	91	5B	[
6	06	Ctrl F	ACK	49	31	1	92	5C	\
7	07	Ctrl G	BEL	50	32	2	93	5D	[
8	08	Ctrl H	BS	51	33	3	94	5E	^
9	09	Ctrl I	HT	52	34	4	95	5F	_
10	0A	Ctrl J	LF	53	35	5	96	60	`
11	0B	Ctrl K	VT	54	36	6	97	61	a
12	0C	Ctrl L	FF	55	37	7	98	62	b
13	0D	Ctrl M	CR	56	38	8	99	63	c
14	0E	Ctrl N	SO	57	39	9	100	64	d
15	0F	Ctrl O	SI	58	3A	:	101	65	e
16	10	Ctrl P	DLE	59	3B	;	102	66	f
17	11	Ctrl Q	DC1	60	3C	<	103	67	g
18	12	Ctrl R	DC2	61	3D	=	104	68	h
19	13	Ctrl S	DC3	62	3E	>	105	69	i
20	14	Ctrl T	DC4	63	3F	?	106	6A	j
21	15	Ctrl U	NAK	64	40	@	107	6B	k
22	16	Ctrl V	SYN	65	41	A	108	6C	l
23	17	Ctrl W	ETB	66	42	B	109	6D	m
24	18	Ctrl X	CAN	67	43	C	110	6E	n
25	19	Ctrl Y	EM	68	44	D	111	6F	o
26	1A	Ctrl Z	SUB	69	45	E	112	70	p
27	1B	Ctrl [	ESC	70	46	F	113	71	q
28	1C	Ctrl \	FS	71	47	G	114	72	r
29	1D	Ctrl]	GS	72	48	H	115	73	s
30	1E	Ctrl ^	RS	73	49	I	116	74	t
31	1F	Ctrl _	US	74	4A	J	117	75	u
32	20		SP	75	4B	K	118	76	v
33	21		!	76	4C	L	119	77	w
34	22		"	77	4D	M	120	78	x
35	23		#	78	4E	N	121	79	y
36	24		$	79	4F	O	122	7A	z
37	25		%	80	50	P	123	7B	{
38	26		&	81	51	Q	124	7C	|
39	27		'	82	52	R	125	7D	}
40	28		(	83	53	S	126	7E	~
41	29		)	84	54	T	127	7F	DEL
42	2A		*	85	55	U			

Index

A

Accessories 54
Areas of application 7

C

Conformity 6
Control bit
  Basic state 27
  Job 27
  Toggle bit in 27

D

Data carriers, approved 13
Data integrity 8
Dimensions 11
Display elements
  Identification system 43

E

Electrical connection 10
Electrical data 12

F

Function indicators 13
Function principle 7, 26

I

Installation 9
Intended Use 5
Interface information 10

M

Main components 7

O

Operating conditions 12, 13

P

Product description 7

S

Safety
  Antennas 5
  Installation 5
  Minimum distance 9
  Operation 6
  Startup 5
Scope of delivery 9
Status indicators 42

T

Technical Data
  Electrical 12
  Mechanical 11
  Operating conditions 12, 13
Type code 54

www.balluff.com

Balluff GmbH
Schurwaldstrasse 9
73765 Neuhausen a.d.F.
Germany
Phone +49 7158 173-0
Fax +49 7158 5010
balluff@balluff.de
www.balluff.com

No. 916264-726 EN · 01.122289 · D16; Subject to modification. Replaces B15.