BALLUFF

BNI PNT-507-005-Z040
BNI PNT-527-005-Z040

IP67 Module
User's Guide

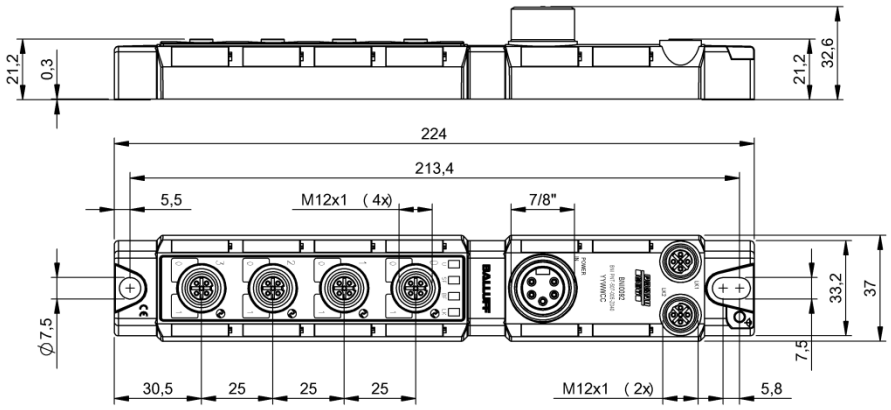


Table of Contents

1 General 4
1.1. Structure of the guide 4
1.2. Typographical Conventions 4
Enumerations 4
Actions 4
Syntax 4
Cross-references 4
1.3. Symbols 4
1.4. Abbreviations 4
1.5. Differing views 4
1.6. Disposal 4

2 Safety 5
2.1. Intended use 5
2.2. Installation and Startup 5
2.3. General Safety Notes 5
2.4. Resistance to Aggressive Substances 5
Dangerous Voltage 5

3 First Steps 6
3.1. Module overview 6
3.2. Mechanical Connection 7
3.3. Electrical Connection 7
Supply voltage 7
Grounding 7
PROFINET interface 7
Port 8

4 Technical data 9
4.1. Dimensions 9
4.2. Mechanical Data 9
4.3. Operating conditions 9
4.4. Electrical Data 9
4.5. PROFINET 10
4.6. Function indicators 10
Module Status 10
Port 11

5 Integration 12
5.1. Configuration 12
GSDML file 12
Integration of the module 12
Configuration of the header module 13
Hardware configuration 14
IO-Link configuration 15
IO-Link functions 15
Cycle Settings 15
Data selection 15
Validation 15
Device name, Profinet address 16
Establishing device relationship 17
Assigning device name 17
Concluding the configuration 18
5.2. Functions in module properties 19
Module settings 19
Port functions 19
Safe state 19
5.3. Bit mapping and function 20
Inputs pin 4 20

Inputs pin 2* 20
Outputs pin 4* 20
Outputs pin 2* 20
IO–Link modules 20
Actuator shutdown* pin 4 / pin 2 20
Actuator warning* pin 4 / pin 2 20
Restart* pin 4 / pin 2 20
Switching IO-Link diagnostics on / off 21
IO-Link communication 21
Peripheral error, socket 21
Sensor supply 21
Short-circuit 21
Class B supply short circuit** 21
Station diagnostics 21
IO-Link PD valid 21
Parameter server 22

6 Monitoring & diagnostics 23
6.1. General 23
6.2. SNMP MIBs 23

7 Web Server 25
7.1. General information 25
7.2. Navigation / Info 26
7.3. Login/Logout 27
7.4. "Home" dialog 28
7.5. "Ports" dialog 30
No appropriate IODD uploaded 30
Appropriate IODD uploaded 31
7.6. "IODD" dialog 33
7.7. "Config" dialog 34
7.8. "Log" dialog 36

8 Diagnostics 38
8.1. Diagnostics messages 38
8.2. Block Header 39
Block Type 39
Block Length 39
Block Version 39
Alarm Type 39
API 39
Slot 39
Subslot 39
Module ID 40
Submodule ID 40
8.3. AlarmSpecifier 41
Sequence Number 41
Channel Diagnostic 41
Manufacturer-Specific Diagnosis 41
Submodules 41
Diagnostic State 41
ARDiagnosis State 41
User Structure ID 41
8.4. Channel Number 42
8.5. Channel Properties 43
Type 43
Accumulative 43
Maintenance 43
Specifier 43
Direction 43
8.6. Channel Error Type 44

9 Configuration of IO-Link devices 45
Options 45
Read 45
Write 45

10 Appendix **46**
10.1. Included in the Scope of Delivery **46**
10.2. Order number **46**
10.3. Ordering information **46**

1 General

1.1. Structure of the guide

This guide is arranged so that one chapter builds upon the other.
Chapter 1: General
Chapter 2: Basic safety instructions
……

1.2. Typographical Conventions

The following typographical conventions are used in this manual.

Enumerations

Enumeration is shown in list form with indentation.

- Entry 1
- Entry 2

Actions

Action instructions are indicated by a preceding triangle. The result of an action is indicated by an arrow.

- ➢ Action instruction 1
  - ↳ Result of action
- ➢ Action instruction 2

Actions can also be indicated as numbers in parentheses.

(1) Step 1
(2) Step 2
(3)

Syntax

Numbers:
Decimal numbers are shown without additional information (e.g. 123),
Hexadecimal numbers are shown with the additional indicator hex (e.g., 00_{hex}) or the prefix "0x" (e.g., 0x00).

Cross-references

Cross-references indicate where additional information on the topic is located.

1.3. Symbols

Note
This symbol indicates general notes.

Attention!
This symbol indicates a security notice which must be observed.

1.4. Abbreviations

BNI	Balluff Network Interface
I	Standard input port
PNT	ProfiNet™
EMC	Electromagnetic Compatibility
FE	Function ground
O	Standard output port
US	Sensor supply undervoltage
UA	Actuator supply undervoltage

1.5. Differing views

Product views and images in this manual may differ from the product described. They are intended to serve only as illustrations.

1.6. Disposal



This product falls under the current EU Directive for WEEE 2012/19/EU (waste of electrical and electronic equipment).

Dispose of the product properly and not as part of the normal waste stream. Observe the regulations of the respective country. Information can be obtained from the national authorities. Or return the product to us for disposal.

2 Safety

2.1. Intended use

The BNI PNT-… is a decentral IO-Link input and output module for connecting to a ProfiNet™ network.

2.2. Installation and Startup

Attention!
Installation and startup are to be performed by trained technical personnel only. Skilled specialists are people who are familiar with the work such as installation and the operation of the product and have the necessary qualifications for these tasks. Any damage resulting from unauthorized tampering or improper use shall void warranty and liability claims against the manufacturer. The operator is responsible for ensuring that the valid safety and accident prevention regulations are observed in specific individual cases.

2.3. General Safety Notes

Commissioning and inspection
Before commissioning, carefully read the User's Guide.
The system must not be used in applications in which the safety of persons depends on the function of the device.

Intended use
Warranty and liability claims against the manufacturer shall be rendered void by damage from:

- Unauthorized tampering
- Improper use
- Use, installation or handling contrary to the instructions provided in this User's Guide.

Obligations of the owner/operator!
The device is a piece of equipment in accordance with EMC Class A. This device can produce RF noise. The owner/operator must take appropriate precautionary measures against this for its use. The device may be used only with a power supply approved for this. Only approved cables may be connected.

Malfunctions
In the event of defects and device malfunctions that cannot be rectified, the device must be taken out of operation and protected against unauthorized use.
Approved use is ensured only when the housing is
fully installed.

2.4. Resistance to Aggressive Substances

Attention!
The BNI modules always have good chemical and oil resistance. When used in aggressive media (such as chemicals, oils, lubricants and coolants, each in a high concentration (i.e. too little water content)), the material must first be checked for resistance in the particular application. No defect claims may be asserted in the event of a failure or damage to the BNI modules caused by such aggressive media.

Dangerous Voltage

Attention!
Before working on the device, switch off its power supply.

Note
In the interest of continuous improvement of the product,
Balluff GmbH reserves the right to change the technical data of the product and the content of these instructions at any time without notice.

3 First Steps

3.1. Module overview

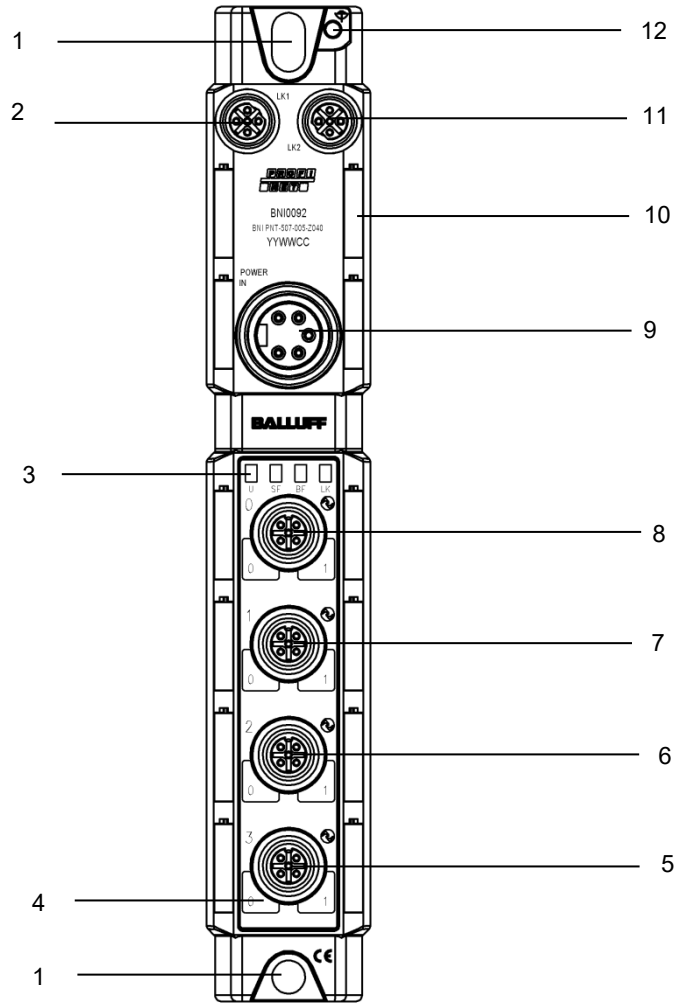


Figure 1 – Overview of BNI PNT-50x-005-Z040

1	Mounting hole	8	Port 0
2	PROFINET ™ Port 1	9	Power IN
3	Status LEDs	10	Labels
4	Pin/Port-LED : Signal status	11	PROFINET ™ Port 2
5	Port 3	12	Ground connection
6	Port 2		
7	Port 1		


3 First Steps

3.2. Mechanical Connection

The module is secured by means of two M6 screws and two washers.
Insulation support is available separately.

3.3. Electrical Connection

Supply voltage




7/8", male

	Pin	Function	Description
Class A	1	0 V	GND module / sensor and actuator supply
	2		
	3	FE	Function ground
	4	+24 V	Module / sensor supply
	5	+24 V	Actuator supply
Class B	1	N24	Separate supply voltage (-)
	2	0 V	GND module / sensor supply
	3	FE	Function ground
	4	+24 V	Module / sensor supply
	5	P24	Separate supply voltage (+)

Note
Where possible, use separate power supplies for sensor/bus and actuator.
Total current < 9 A The total current of all modules must not exceed 9 A even in the case of series connection of the actuator supply.


Grounding

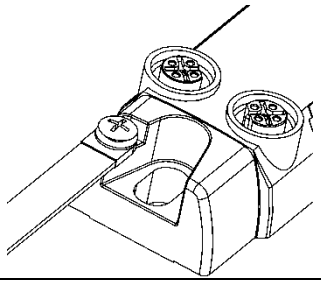

Note
The functional ground connection between housing and machine must have a low impedance and be as short as possible.

PROFINET interface

M12, D-coded, female




Pin	Function	
1	Tx+	Transmit Data +
2	Rx+	Receive Data +
3	Tx-	Transmit Data -
4	Rx-	Receive Data -

Note
Unused I/O ports must be provided with cover caps to comply with degree of protection IP67.

3 First Steps

Port

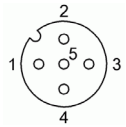

M12
A-coded
female

Pin	Function	
	Class A	Class B
1	+24V 1.6 A	+24V 1.6A
2	Input/output 2A	P24
3	0V	0V
4	IO-Link input/output 2A	Input / IO-Link
5	n. c.	N24


Note
The IO-Link interface is powered from the sensor supply.

Note
For the digital sensor inputs, refer to guideline on inputs EN 61131-2, Type 3.

	Port
	0 - 3
BNI PNT-507-005-Z040	IO-Link Class A
BNI PNT-527-005-Z040	IO-Link Class B

4 Technical data

4.1. Dimensions

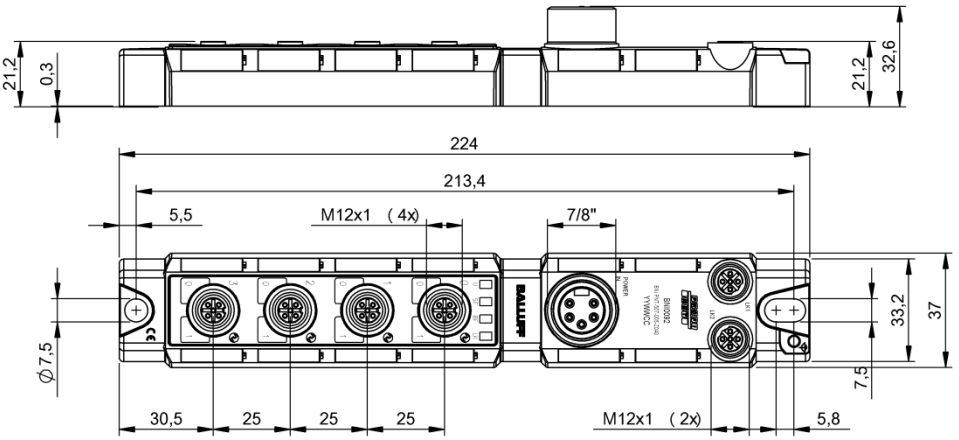

4.2. Mechanical Data

Housing material	Zinc diecasting, matte nickel-plated
Enclosure rating per IEC 60529	IP 67 (only in plugged-in and screwed-down state)
Supply voltage	7/8" female, 5-pin
Input ports / output ports	M12, A-coded (4x female)
Dimensions (W x H x D in mm)	37 x 224 x 32.6
Type of mounting	Screw mounting with 2 mounting holes
Ground strap installation	M4
Weight	Approx. 350 g

4.3. Operating conditions

Ambient temperature T_a	-40°C ... 70°C
Storage temperature	-40°C ... 70°C

4.4. Electrical Data


Supply voltage	18...30.2 V DC, in accordance with EN 61131-2
Ripple	< 1%
Input voltage at 24 V	130 mA

4 Technical data

4.5. PROFINET

PROFINET port	1 x 10Base/100Base Tx
Cable types in accordance with IEEE 802.3	Shielded, twisted pair min. STP CAT 5/ STP CAT 5e
Data transmission rate	10/100 Mbps
Max. cable length	100 m
Flow control	Half-duplex/full-duplex (IEEE 802.33x pause)

4.6. Function indicators

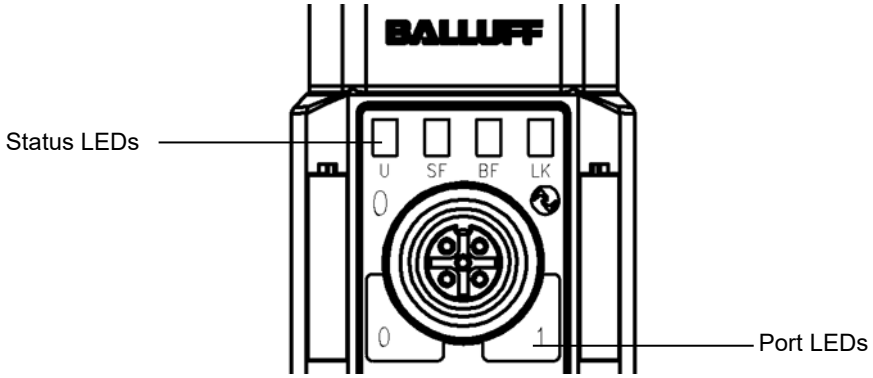

Module Status

LED	Indicator	Function
U	Green	Supply voltage OK
	Red	No actuator power supply
	Red, flashing	UA supply voltage low (< 18 V)
SF	Off	No error
	Red	Diagnostics message; system error
	Red, flashing	Service DCP signal activated via bus
BF	Off	No error
	Red	No connection or no configuration
	Red, flashing	No data exchange
LK	Green	Data transfer

4 Technical data

Port

Standard port

Status	Function
Off	Status of input or output pin is 0
Yellow	Status of input or output pin is 1

IO-Link port

Status	Function
Green	IO-Link – connection active
Green, flashing	No IO-Link – connection
Green, rapidly flashing	Preoperate
Red, flashing	Validation failed

Status	Port configuration		
	Diagnostics input	Input	Output
Red	Input inactive	Short-circuit Pin 1 and 3	Short circuit at output pin
Red, flashes briefly	-	-	Short circuit Pin 1 and 3

5 Integration

5.1. Configuration


When planning Profibus devices, a device is depicted as a modular system with a header module and several data modules. The screenshots shown here have been taken from the configuration software of the Siemens HW config.

GSDML file

The device data required for project planning is saved in GSDML files (**G**eneric **S**tation **D**escription **M**arkup **L**anguage). The GSDML files are available in two languages as an Internet download (www.balluff.com). The data modules of an IO-Link block are depicted in the project planning software according to the slot.
The GSDML file makes the possible data modules available (input or output of different data ranges). For configuration of the IO-Link blocks, the corresponding data modules are assigned to a slot.

Integration of the module

The device can be found by searching in the catalog and inserted in the Profinet section by drag & drop.

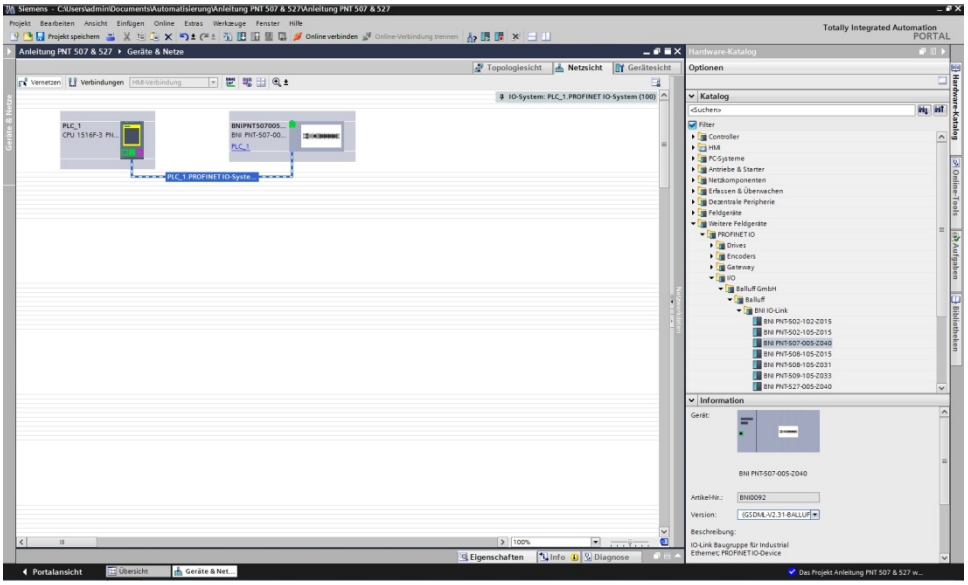


The BNIPNT507005Z040 / BNIPNT527005Z040 module with submodules PN-IO, port 1-M12, port 2-M12 are used for Profinet communication.
In X1 PN-IO, functions such as prioritized run-up or the domains for the ring topology can be selected.
Slot 0 can be used for defining the port function (input, output, diagnostics input) or diagnostics messages.
The remaining slots (2-5) preallocated in the default configuration are the placeholders for the IO-Link modules or standard I/O modules. Slot 2 is for the first IO-Link port / standard I/O port and Slot 5 for the last.
If IO-Link communication is planned for a given port, the standard I/O module must be deleted and replaced with an IO-Link module, e.g., IOL_E_2byte.

5 Integration

Configuration of the header module

Double-click on the header module to open its properties. Click on the "Parameter" tab to open a menu selection for defining the port functions and diagnostic functions.

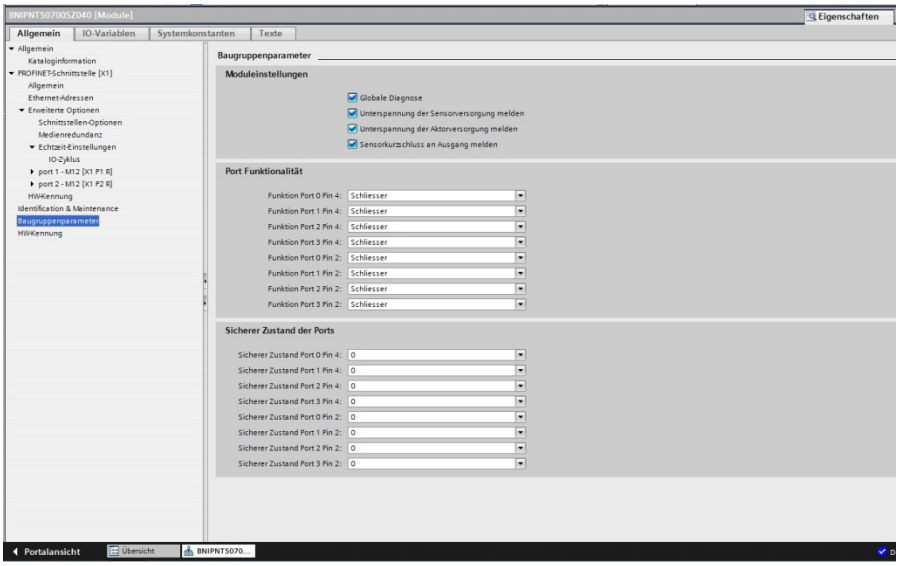

Note
IO-Link configuration:
If the connected IO-Link device makes outputs available, pin 2 must be configured to output on the corresponding port.
Standard input and output:
For each port, the function (N.C., N.O., diagnostic input (pin 2)) can be arbitrarily selected for each port at pin 2 and pin 4.

Hardware configuration

The IO-Link / standard I/O modules must now be configured appropriately for the configuration of the header module.
If necessary, these can be taken over into the configuration table from the hardware catalog by means of drag & drop.
By default, all ports are set to Standard I/O.
If the port is to be configured as an IO-Link port, the module must be deleted and replaced with an IO-Link module.

Slots 1..4 are reserved for the IO-Link ports / standard I/O ports.


Module addressing:
Double-click on the IO-Link modules and the remaining addressable modules to change the addressing in the "Addresses" window

Configuring the IO-Link module:
A suitable IO-Link module that corresponds to the process data length of the IO-Link device must be selected in the catalog and dragged to the appropriate slot by means of drag & drop.
The process data length required by the device in each case can be obtained from the manual of the IO-Link device.

Configuring a standard input / output:
If one of the possible port pins (pin 4) is to be configured with a standard function (input, output),
the "Standard I/O" placeholder module must be used for the corresponding slot.
To address the inputs and outputs, input pin 2 / 4 and output 2 /4 must be taken over from the catalog and used in the configuration according to the given modules.

For the SIO function, integrate the "IO-Link input with SIO mode" module.


With the remaining modules, the various functions are mapped into the process data areas.

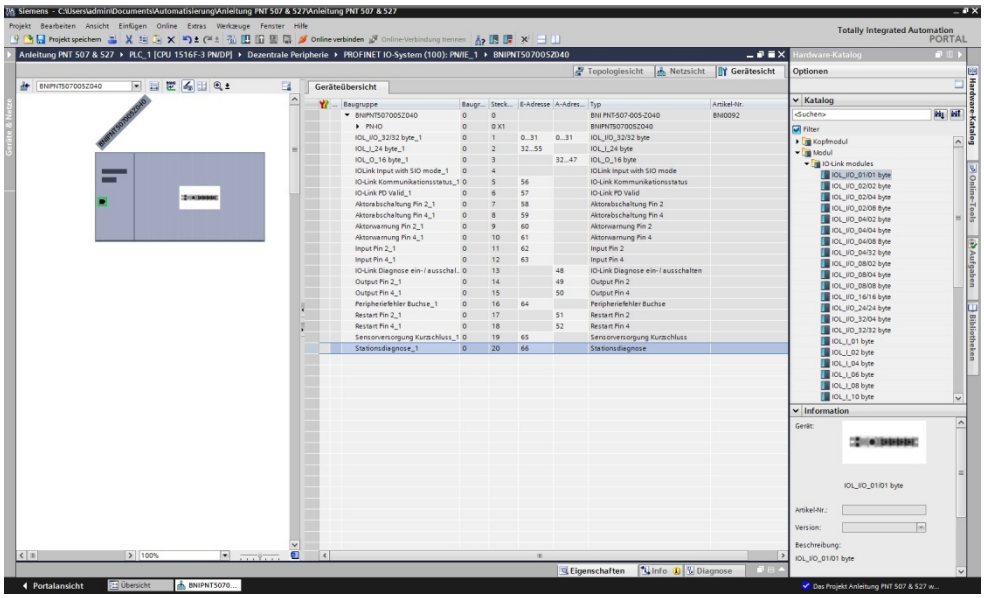

5 Integration

IO-Link configuration

In the IO-Link properties of the module you can change the IO-Link parameters of the respective port.

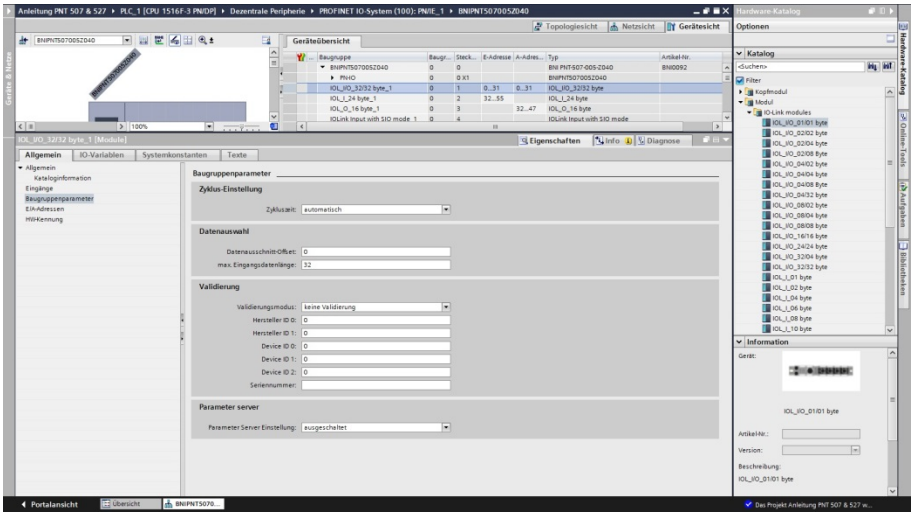

IO-Link functions

Explanation of the possible settings in the properties of the IO-Link port

Cycle Settings

This parameter can be used to reduce the IO-Link communication speed by increasing the IO-Link cycle time.
Use the scroll down menu to adjust the cycle time.

Data selection

The start byte of the process data can be defined with the data section offset. For the max. input data length, the actual process data length of the IO-Link device is entered. These settings are only for the input data.
The visible data window for the input data can now be adjusted via an IO-Link module with appropriate process data length.


Validation

No validation: validation deactivated, every device will be accepted
Compatibility: manufacturer ID and device ID are compared to the module data.
The IO-Link communication is only started if there is a match. Manufacturer ID and device ID are entered in decimal format.
Identity: manufacturer ID and device ID and serial number are compared to the module data. The IO-Link communication is only started if there is a match.
Manufacturer ID and device ID are entered in decimal format, the serial number is entered in ASCII code

Device name, Profinet address

Double-click on the module in the Profinet line to view the communication parameters of the module.


The device name and the Profinet address (IP) are configured here.

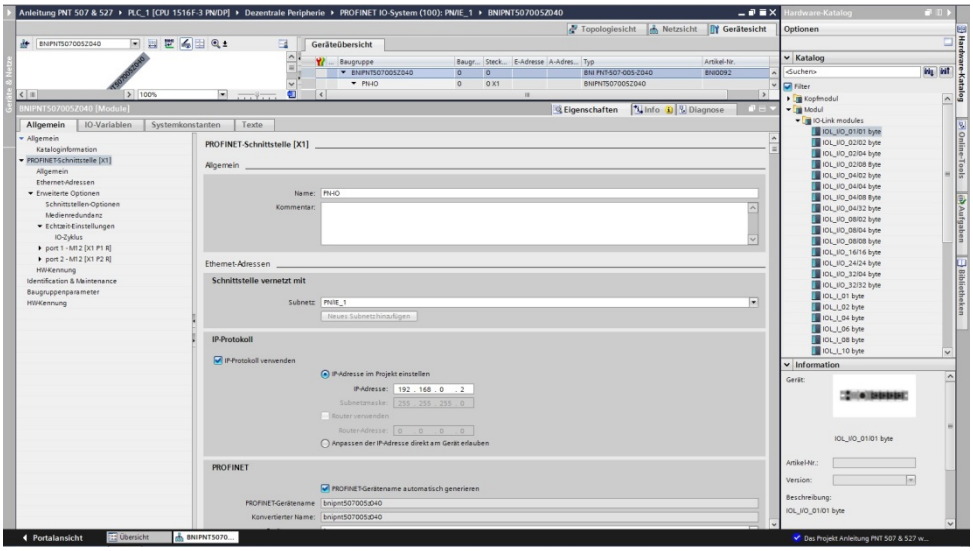

5 Integration

Establishing device relationship


"Device view" → right-click on module → "Assign device name".

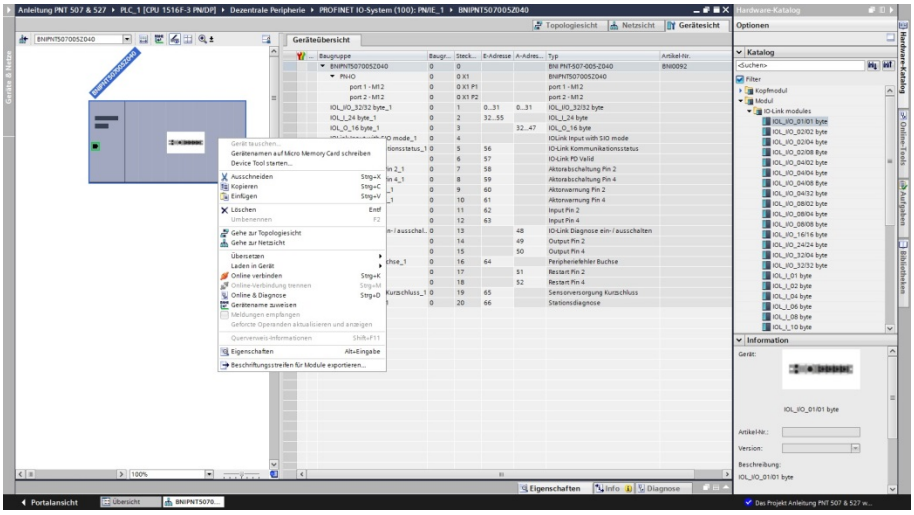

Assigning device name

Select the desired name and use "Assign name" to assign the marked device that you found.
The device name must be the same as that previously configured under device properties (see previous page)

Identification takes place via the MAC address (on the rear of the device)
or via the Blink Test.

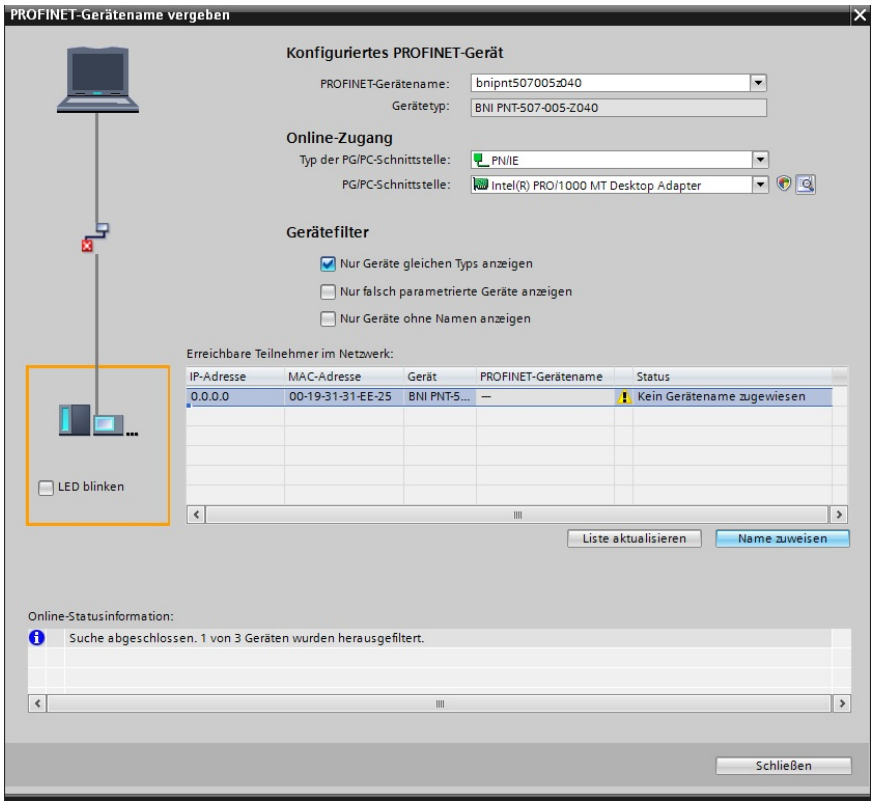

Concluding the configuration

Download the configuration into HW config.

At this point, the bus error on the module should disappear.
There could still be an active system error, particularly if an IO-Link is used.

Possible causes:

- Line break (no IO-Link device connected)
- IO-Link device fault (e.g., external voltage supply not connected)
- Validation failed

If the module still reports a bus error,
there could be a problem in one of the following areas:

- Device relationship not established.
  Scan the network and check whether the device is signaling under the correct device name and correct IP address.
  Adapt the Ethernet address or device name if necessary,
  reassign the device name and download the configuration.

5 Integration

5.2. Functions in module properties

Description of the functions in module properties

Module settings

Global diagnostics:
This function can be used to permit / suppress all diagnostics messages of the module. (optical diagnostics signals and diagnostics in configured diagnostics modules are not affected)

Sensor supply undervoltage:
This function can be used to permit / suppress the diagnostics message Sensor supply undervoltage. (optical diagnostics and diagnostics in configured diagnostics modules are not affected)

Actuator supply undervoltage:
This function can be used to permit / suppress the diagnostics message Actuator supply undervoltage. (optical diagnostics signals and diagnostics in configured diagnostics modules are not affected)

Port functions

The function for every individual port pin can be defined here:
Make contact = input as normally open contact
Break contact = input as normally closed contact
Output = output function
IO-Link Input with SIO mode = SIO Mode; an IO-Link device can be configured and then placed in an SIO mode in which the IO-Link port functions as a simple switching input. Pin function depends on configuration.

Safe state

This function is a supplement to an output configuration of the respective port pin. For each port pin, a safe status can be predefined which is to be assumed in the event of a loss of bus communication.

5.3. Bit mapping and function

Bit mapping and function of the configurable modules

Inputs pin 4
Inputs pin 2*
Outputs pin 4*
Outputs pin 2*

Signal from configured inputs or outputs are depicted in the modules inputs pin 4 / inputs pin 2 and outputs pin 4, outputs pin 2.

The "inputs pin 2" module also depicts the diagnostic inputs of the diagnostic input function. Depending on configuration..

IO–Link modules

The IO-Link modules always have the same structure:

IOL_I/O_x/xBytes
- Number of process data items used (should be equal to or greater than the process data length of the IO-Link device)
- I = Input data
- O = Output data
- I/O = Both input and output data

Actuator shutdown* pin 4 / pin 2

Depicts a short circuit between a set output to ground at the respective port pin.

Bit 3	Bit 2	Bit 1	Bit 0
Port 3	Port 2	Port 1	Port 0

Actuator warning* pin 4 / pin 2

Feedback if a voltage is being supplied at an output that is not set.

Bit 3	Bit 2	Bit 1	Bit 0
Port 3	Port 2	Port 1	Port 0

Restart* pin 4 / pin 2

If this function is configured, after an actuator short-circuit there is no automatic restart, but rather the port must be activated by inserting the corresponding bit.

Bit 3	Bit 2	Bit 1	Bit 0
Port 3	Port 2	Port 1	Port 0

*Only for BNI PNT-507-005-Z040
**Only for BNI PNT-527-005-Z040

5 Integration

Switching IO-Link diagnostics on / off

If this function is configured,
the IO-Link diagnostics is deactivated for all ports and
can be reactivated for the desired ports.

Bit 3	Bit 2	Bit 1	Bit 0
Port 3	Port 2	Port 1	Port 0

IO-Link communication

Bit status for each IO-Link port; feedback indicating whether communication is established.

Bit 3	Bit 2	Bit 1	Bit 0
Port 3	Port 2	Port 1	Port 0

Peripheral error, socket

Feedback indicating the port at which an error occurred.

Bit 3	Bit 2	Bit 1	Bit 0
Port 3	Port 2	Port 1	Port 0

Sensor supply Short-circuit

Feedback indicating the port at which there is a sensor supply short circuit.

Bit 3	Bit 2	Bit 1	Bit 0
Port 3	Port 2	Port 1	Port 0

Class B supply short circuit**

Feedback at which port a short-circuit of the Class B supply is present.

Bit 3	Bit 2	Bit 1	Bit 0
Port 3	Port 2	Port 1	Port 0

Station diagnostics

Feedback indicating which fault occurred.

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
IO-Link short circuit	Actuator Warning	Actuator Short-circuit	Sensor voltage Short-circuit	External error	no UA	US actuator	US sensor

IO-Link PD valid

Bit 3	Bit 2	Bit 1	Bit 0
Port 3	Port 2	Port 1	Port 0

*Only for BNI PNT-507-005-Z040
**Only for BNI PNT-527-005-Z040

Parameter server

Switched off:
Data management functions disabled, saved data are retained.

Delete:
Data management functions disabled, saved data is deleted.

Restore:
The parameter data are downloaded to the IO-Link device.
As soon as the saved parameter data in the parameter server of the port differ from the connected IO-Link device a download is performed.
Only exception: the parameter server is empty. Then another upload is carried out.

Save/Restore:
The parameter data are up- and downloaded to the IO-Link device.
As soon as the saved parameter data in the parameter server of the port differ from the connected IO-Link device and there are no upload requests from the IO-Link device, an upload is performed.
As soon as a device requests and upload (upload flag set) or when no data are stored in the master port (e.g. after deleting the data or before the first upload), the master starts an upload of the parameter data from the device.

Note
After the upload of the parameter data, the vendor ID and device ID of the connected IO-Link device are also still saved until the data records are deleted. When the connected IO-Link device is started, a validation takes place. Thus, only an IO-Link device of the same type can be used for the data management.

6 Monitoring & diagnostics

6.1. General

The fieldbus module provides several diagnostics interfaces which are described in the following:

- Device diagnostics through the Web interface
- Network diagnostics via SNMP
- Fieldbus-specific diagnostics through the PLC

The Web interface and the fieldbus-specific diagnostics interface are each described in a separate section.

Access to the Monitoring and Diagnostics interfaces of the device is via the IP-based Management interface using the Ethernet network. The necessary setting of IP access can be made not only using the procedure described in the "Integration" section, but also using other dedicated configuration tools using the DCP protocol of PROFINET. The following parameters must be set for this:

- IP Address (IP)
- Subnet mask (SN)
- Gateway address (GW)
- Device name

The configuration settings can be reset to the factory default settings via the Web interface.

Configuration settings are only possible if the module does not have an active connection to a controller.

6.2. SNMP MIBs

Monitoring and diagnostics of the network interfaces for the device can be performed using the SNMPv1 protocol. This can be accessed simply from a so-called SNMP browser using ordinary network management tools.

The following MIDs are supported:

- MIB-2 (RFC 1213)
- LLDP-MIB (IEEE 802.1AB)

The module-specific information for the MIB-2 are provided by the fieldbus module:

MIB-Variable	Description
sysDescr	A textual description of the entity. This value should include the full name and version identification of the system's hardware type, software operating-system, and networking software.
sysObjectID	{1.3.6.1.4.1.44233.1.2.1} For Balluff products with Product enterprise Number (PEN) = 44233, the product list is defined in **BALLUFF-PRODUCTS-MIB**
sysUpTime	The time (in hundredths of a second) since the network management portion of the system was last re-initialized.
sysContact	The textual identification of the contact person for this managed node, together with information on how to contact this person. (“BALLUFF”)
sysName	An administratively-assigned name for this managed node. By convention, this is the node's fully-qualified domain name. (“BNI PNT ….”)
sysLocation	The physical location of this node (e.g. “73765 Neuhausen a.d.F, Germany”)

The port-specific information for the MIB-2 contains diagnostics data about the network connections as well as the IO-Link ports:

MIB-Variable	Ethernet-Port	IO-Link-Port
ifIndex	A unique value, contiguously starting from 1.	
ifDescr	A textual string containing information about the interface, i.e. "Ethernet X"	"IO-Link X" / "IO-IN X" / "IO-OUT X"
ifType	IANAifType = 6 (ethernetCsmaCd) when Ethernet	IANAifType = 280 (sdci) when IO-Link-Port = 0 (other) when I/O-Port
ifMTU	length of Ethernet MTU	length of IO-Link process data (typically max. 32 Byte) or 1, when IO-port
ifSpeed	actual Ethernet speed	IO-Link speed (no device = 0 bit/s, Com1 Mode = 4800 bit/s, Com2 Mode 38400 bit/s, Com3 Mode = 230400 bit/s)
ifPhysAddress	MAC address assigned to this port	This object may contain an octet string of zero length, since IO-Link is a serial P2P protocol with no specific addressing.
ifAdminStatus	Up(1), Down(2), depending	Up(1), Down(2), depending if IO-Link capability is configured.
ifOperStatus	Up(1), Down(2), depending if an IO-Link device is connected and operable.	
ifLastChange	The value of sysUpTime at the time the interface entered its current operational state. If the current state was entered prior to the last re-initialization of the local network management subsystem, then this object contains a zero value.	n/a
ifInOctets	The total number of octets received on the interface, including framing characters.	
ifInErrors	n/a	Number of received frames that were rejected as invalid by the IO-Link-Master (Abort).
ifOutOctets	The total number of octets transmitted out of the interface, including framing characters.	
ifOutErrors	n/a	Number of retries by the IO-Link-Master, indicating unsuccessful packet transmissions.


7 Web Server

7.1. General information

The BNI fieldbus module contains an integrated web server for retrieving detailed device information and for configuring the device.

To use the web interface you must first ensure that the module has been correctly integrated into your network. In addition the IP subnet of the BNI module must be accessible from the PC on which the browser is running. Please use Internet Explorer 10 or newer as the browser; older versions may result in display problems.


For open a connection with the web server, enter the IP address of the module in the address line of the browser. The homepage then appears with the essential device information.

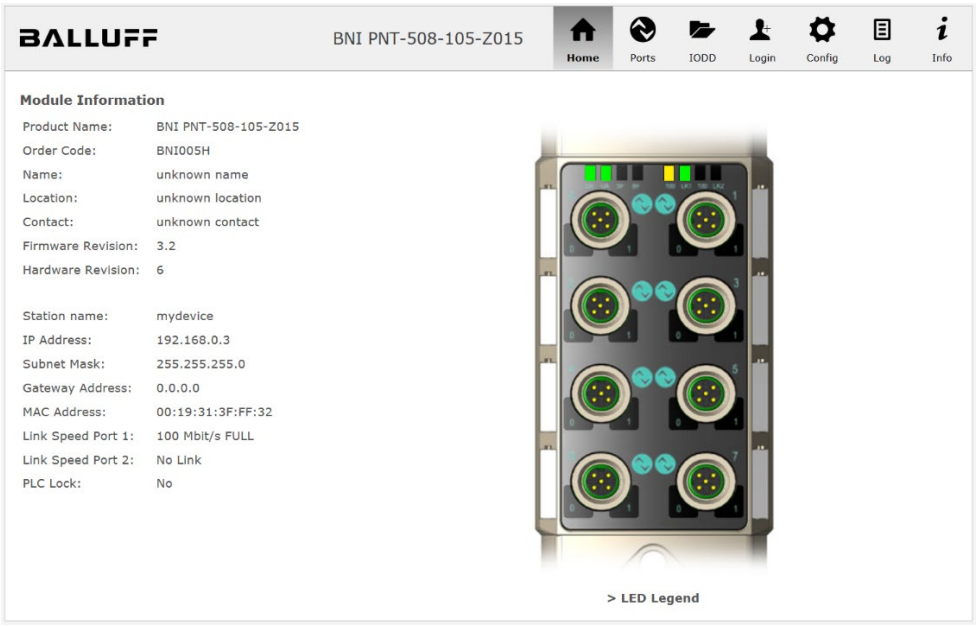

7.2. Navigation / Info

The navigation bar is located in the upper area of the window, which allows you to switch between the various dialogs of the web interface. To do this click on the corresponding icon.

When the "Info" tab is selected the following overview appears:

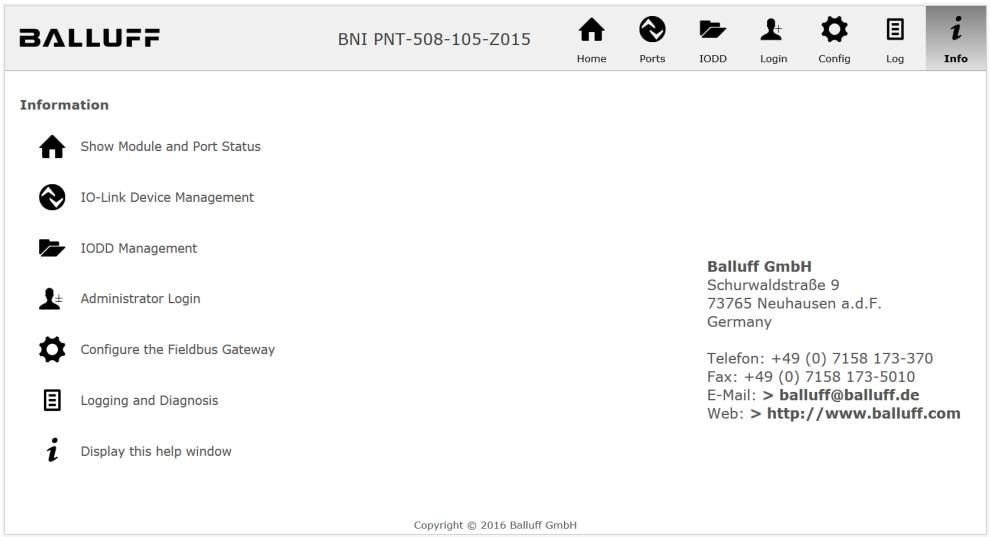

The "BALLUFF" logo at upper right links to the international Balluff homepage.

7 Web Server


7.3. Login/Logout

To make configuration settings on the fieldbus module using the web interface, you must first log in. Functionalities which cannot be used without logging in are indicated by the grayed out buttons.


The default password is:

BNI PNT-XXX-XXX-XXXX	"BNIPNT“
BNI EIP-XXX-XXX-XXXX	"BNIEIP“
BNI ECT-XXX-XXX-XXXX	"BNIECT“

The password cannot be changed!

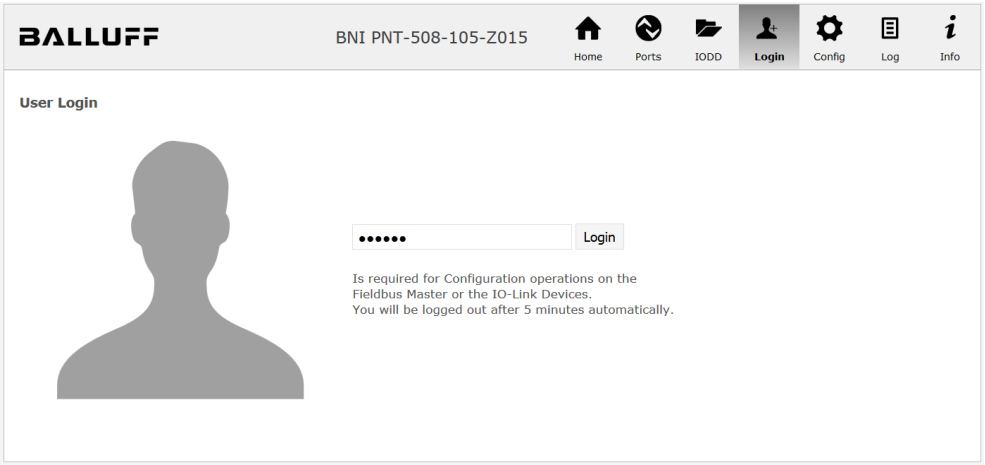

After successfully logging in the dialogs are shown as follows:

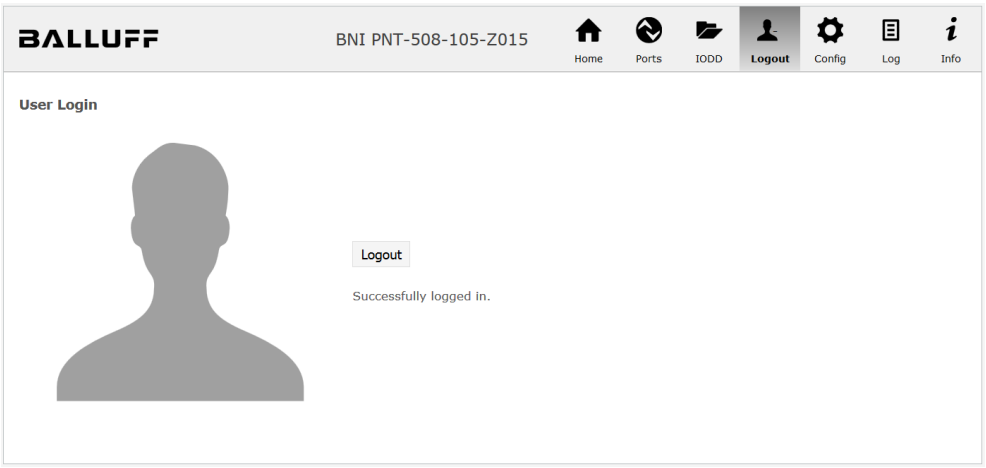

Use the "Logout" button to log out again. After 5 minutes of no interaction with the Webserver the user is automatically logged out.

Note
For security reasons the fieldbus module shows only one login at a time with configuration access. Reading (without logging in) is however possible from multiple PCs at the same time on the fieldbus module.

7.4. "Home" dialog

Under "Home" you are given the essential information about the fieldbus itself and its network activity. You are also shown whether the configuration block was enabled by the controller (PLC).


Information is also shown about the current process data and the status of the module via the corresponding LEDs. After selecting "LED Legend" a Help dialog appears which explains the meaning of the LEDs.

If an IO-Link device is connected to one of the configured IO-Link terminals, some of the device data will be displayed in addition to the module data in the form of a link. After selecting one of these links the corresponding device dialog is opened.



7 Web Server

PNT:

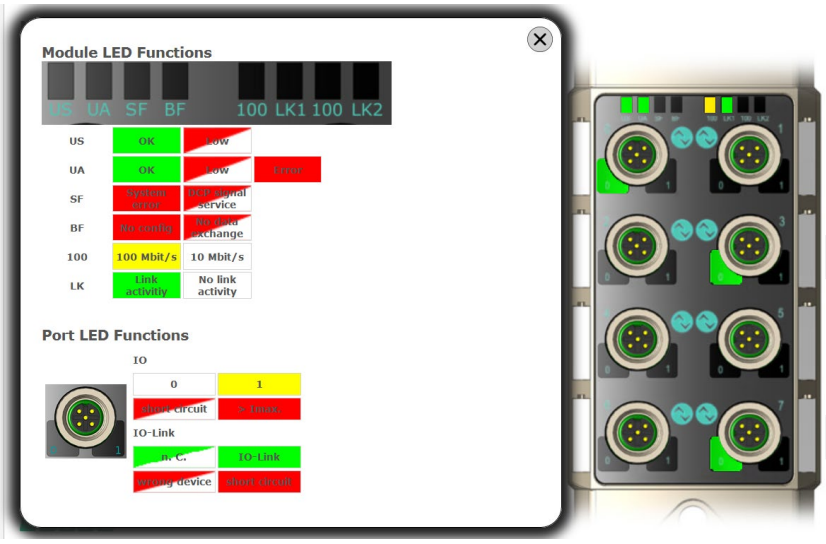

EIP:



7.5. "Ports" dialog

The "Ports" dialog displays information and process data for the connected IO-Link devices. Select the desired IO-Link Port in the image of the fieldbus module on the right side to see the device data.


Note
The IO-Link device data are only displayed if the port is also configured as an IO-Link port!

No appropriate IODD uploaded

It is possible to read and write the configuration parameters of the IO-Link device via the "Parameters" option. The parameter indexes and subindexes of the IO-Link device are described in the corresponding separate user's guide (and follow the IO-Link conventions).

Under "Events" you can see whether a diagnostic event from the IO-Link device exists.

Under "Parameter Server Content" you can view the content of the parameter server if parameter data is stored on the parameter server.

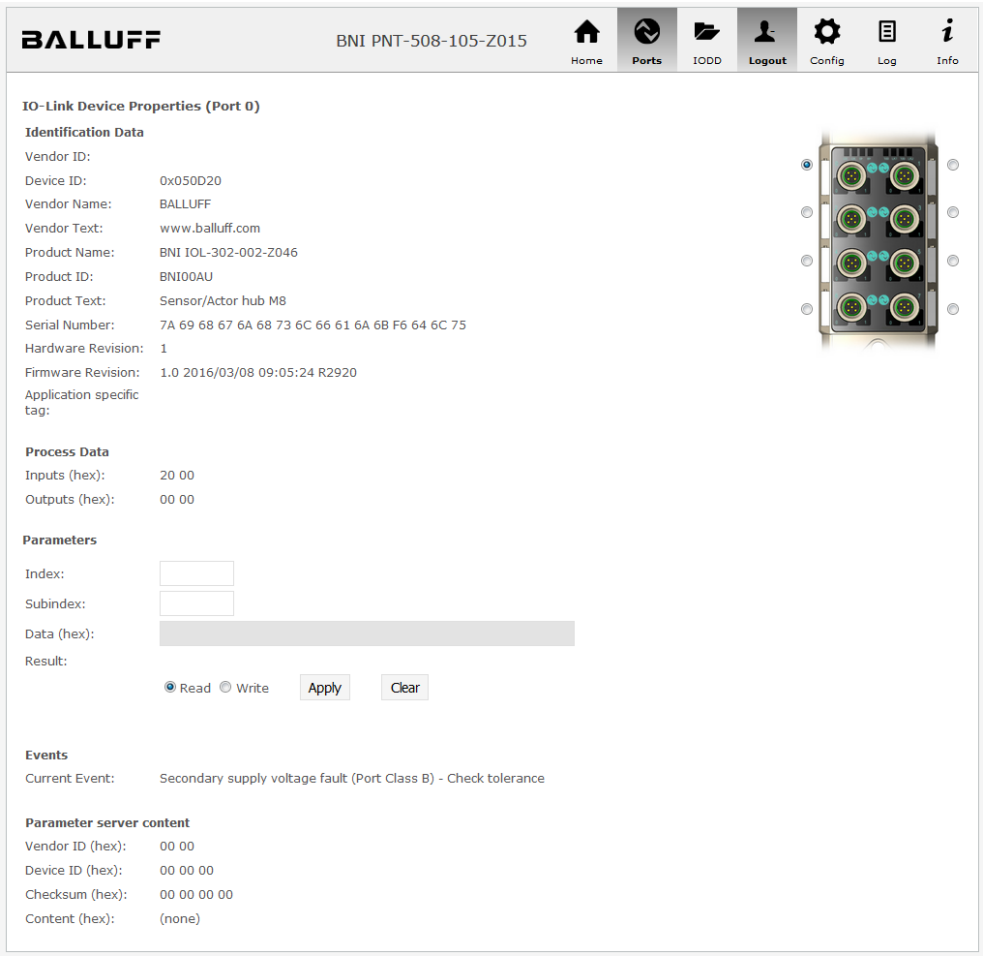


"Ports" dialog with direct parameter access

7 Web Server

Appropriate IODD uploaded

If an IODD appropriate to the IO-Link device connected to the currently selected port has been uploaded (see "Dialog "IODD"), the normal dialog for "Process Data" and "Parameters" is not displayed, but rather an expanded dialog.
Information from the IODD of the device is used so that the data can be better understood.

Thus in the following screenshot not only are the input data of the distance sensor displayed as a hex number, but also interpreted and labeled under "Input".
Since the sensor has no parameters, none are displayed.

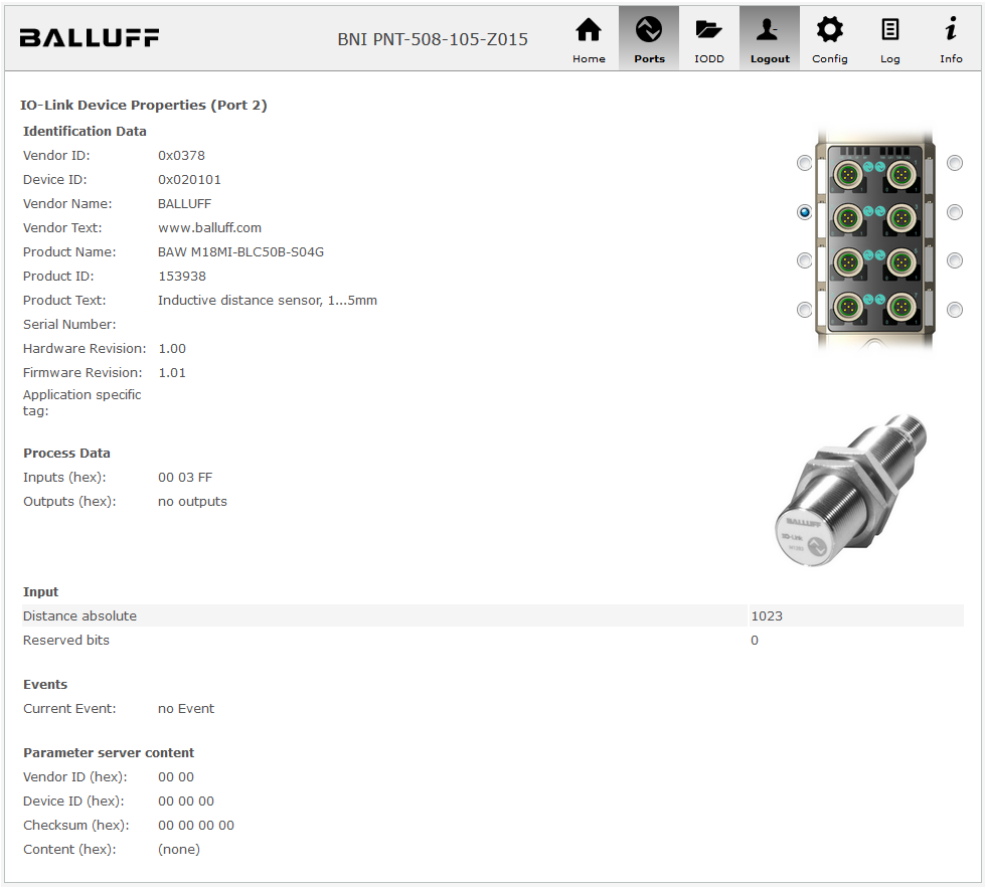


Dialog "Ports“: IODD interpretation and device image

If the IODD of the IO-Link device on the currently selected port has parameters, these are shown in table format (see following screenshot). In this example the parameters for the Balluff Smart Light are shown.
The Smart Light is a signal light which can be used in three different modes. These modes can be set using an IO-Link parameter. The parameter values and associated texts are stored in the IODD.
This means "Operation Mode" can be read out and displayed ("Read" and "Read All" buttons) or written to the device ("Write" button).

If subindexes have no buttons they cannot be individually processed but rather only the entire index at once.

Note
Each changed value must be individually written by clicking on the "Write" button!

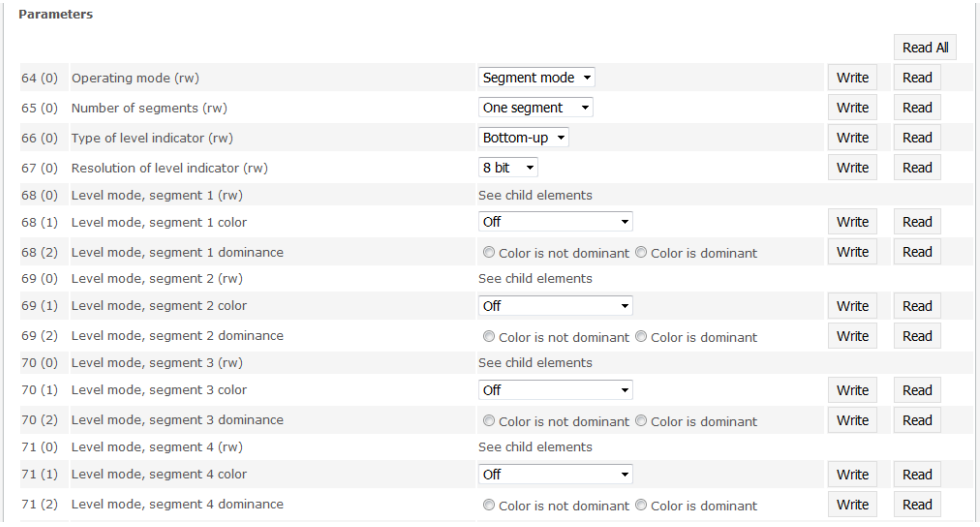

"Ports" dialog: Parameter list of an IO-Link device with uploaded IODD

7 Web Server


7.6. "IODD" dialog

Using this dialog you can transfer IODDs (device description files for IO-Link devices) and the associated device images to the fieldbus module, so that a detailed representation of the connected IO-Link devices in the "Ports" dialog is possible.

When IO-Link devices are connected and IO-Link ports are activated, the dialog shows a table with information about the IO-Link devices.

The fieldbus module file system supports only device names in "8+3" format, i.e. with a restricted name length. Since IODD files are generally published with a long file name, these must be renamed and given a shorter naming scheme on the PC before uploading to the fieldbus module.
For this a help setting is provided in the dialog, with the associated required IODD file name for the currently connected IO-Link devices shown in the bottom section of the list (column IODD Filename).

Image files without IODD can also be uploaded; the images are still displayed in the "Ports" dialog.

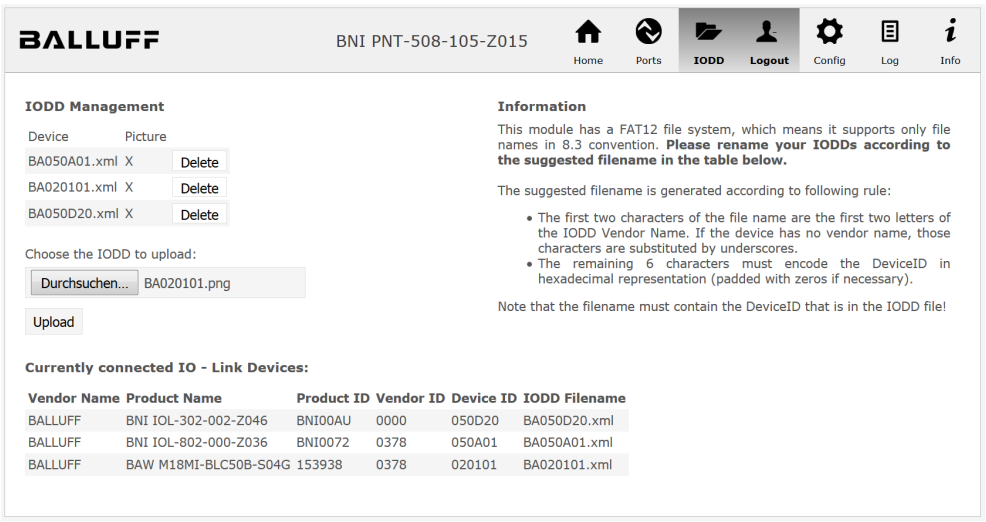


Using the "Delete" button you can delete IODDs and device images from the fieldbus when needed.

Note
Before selecting the IODD it must be renamed on the PC to the file name which is shown in the table in the "IODD Filename" column!

7.7. "Config" dialog


The configuration page enables configuration of the module. You can change both the module information texts and the port configuration.
The "Set Ports" action is not permanently stored in the device and is lost after the next reboot or reset.

PNT / ECT:

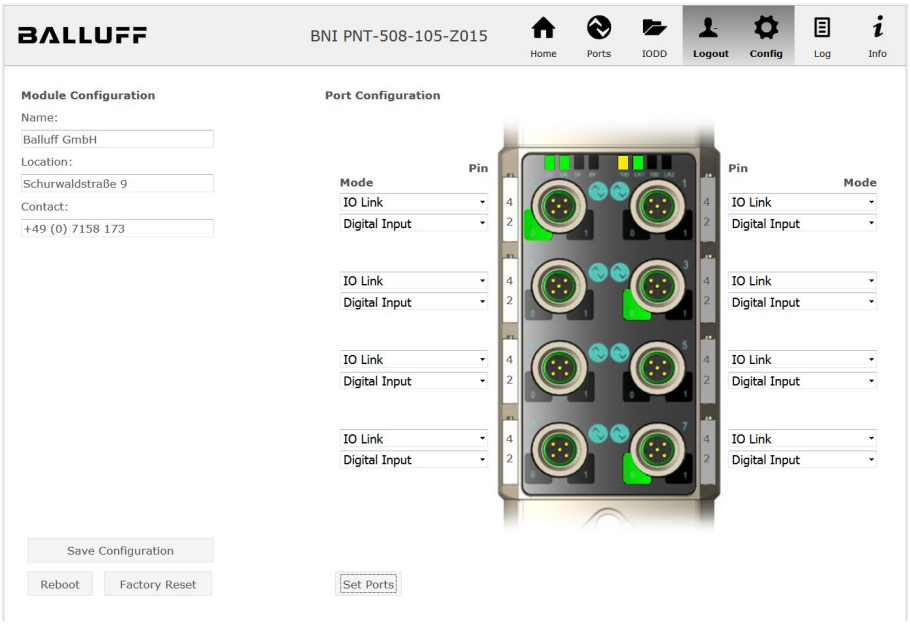

7 Web Server

EIP:

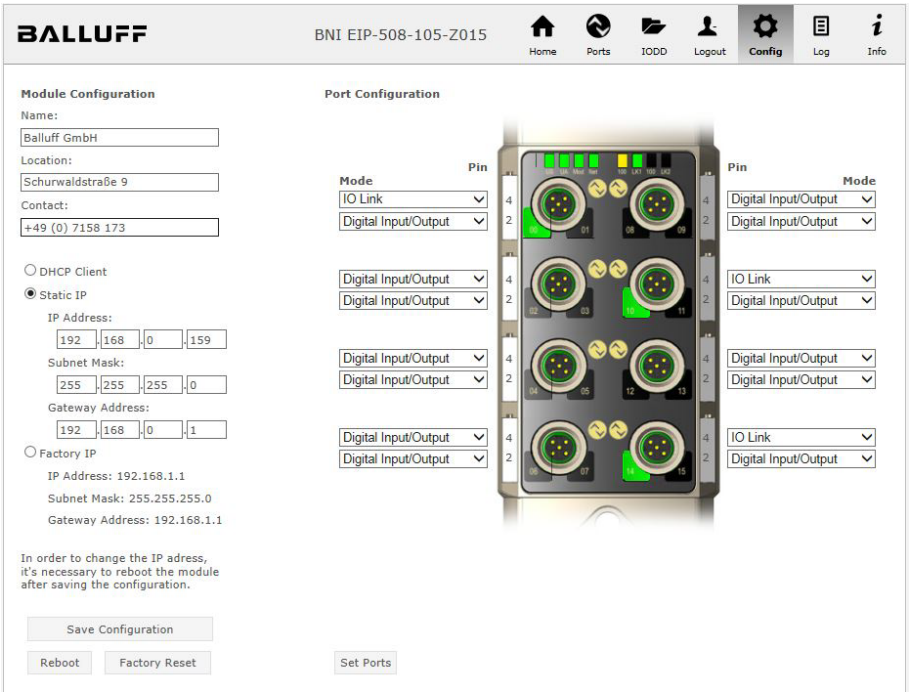

The parameter set “Module Configuration” on the left side is used by clicking "Save Configuration" and permanently stored in the device.
The "Reboot" button reboots the device as if the power to the module had been turned off and on again.
Clicking on "Factory Reset" deletes the configuration and log files saved in the device and then performs a reboot, so that the device is restored to the default factory configuration as on delivery.


7.8. "Log" dialog

This dialog provides general service information about the device as well as a logging function.

The upper table (see screenshot below) contains important information for all service inquiries.

Note
If you have a detailed question about a specific situation, send us a screenshot of this Web site or print the site as a PDF.

Logging shows events which have occurred in chronological order. This provides a tool for detailed troubleshooting in equipment.

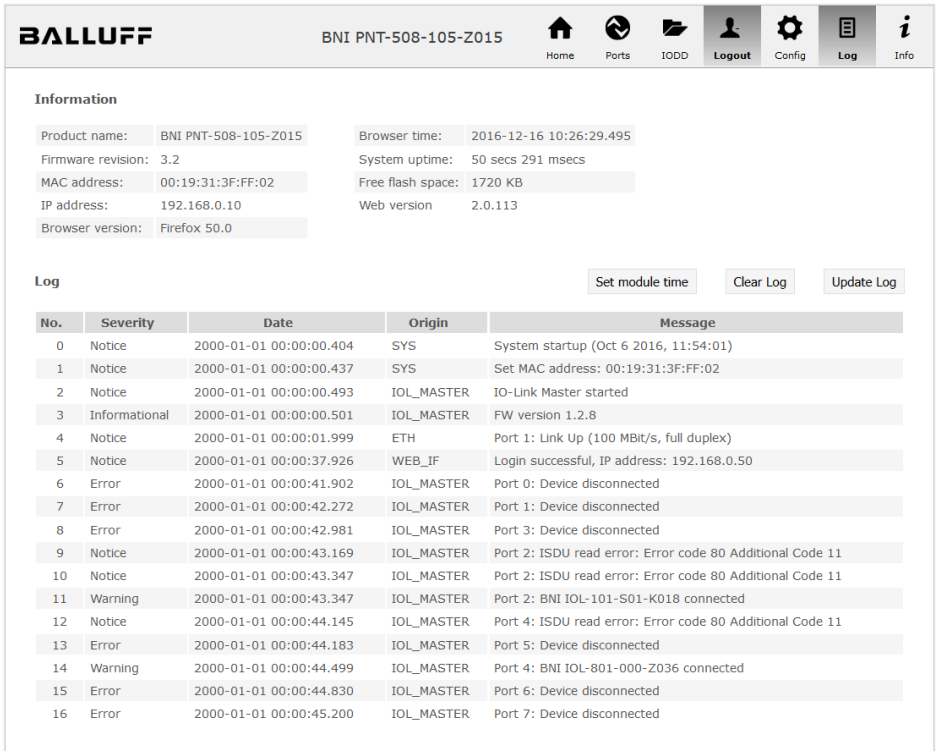

No.	Severity	Date	Origin	Message
0	Notice	2000-01-01 00:00:00.404	SYS	System startup (Oct 6 2016, 11:54:01)
1	Notice	2000-01-01 00:00:00.437	SYS	Set MAC address: 00:19:31:3F:FF:02
2	Notice	2000-01-01 00:00:00.493	IOL_MASTER	IO-Link Master started
3	Informational	2000-01-01 00:00:00.501	IOL_MASTER	FW version 1.2.8
4	Notice	2000-01-01 00:00:01.999	ETH	Port 1: Link Up (100 MBit/s, full duplex)
5	Notice	2000-01-01 00:00:37.926	WEB_IF	Login successful, IP address: 192.168.0.50
6	Error	2000-01-01 00:00:41.902	IOL_MASTER	Port 0: Device disconnected
7	Error	2000-01-01 00:00:42.272	IOL_MASTER	Port 1: Device disconnected
8	Error	2000-01-01 00:00:42.981	IOL_MASTER	Port 3: Device disconnected
9	Notice	2000-01-01 00:00:43.169	IOL_MASTER	Port 2: ISDU read error: Error code 80 Additional Code 11
10	Notice	2000-01-01 00:00:43.347	IOL_MASTER	Port 2: ISDU read error: Error code 80 Additional Code 11
11	Warning	2000-01-01 00:00:43.347	IOL_MASTER	Port 2: BNI IOL-101-S01-K018 connected
12	Notice	2000-01-01 00:00:44.145	IOL_MASTER	Port 4: ISDU read error: Error code 80 Additional Code 11
13	Error	2000-01-01 00:00:44.183	IOL_MASTER	Port 5: Device disconnected
14	Warning	2000-01-01 00:00:44.499	IOL_MASTER	Port 4: BNI IOL-801-000-Z036 connected
15	Error	2000-01-01 00:00:44.830	IOL_MASTER	Port 6: Device disconnected
16	Error	2000-01-01 00:00:45.200	IOL_MASTER	Port 7: Device disconnected

7 Web Server

Events are classified using the "**Severity**“ column:

Internal Error (Emergency, Alert, Critical)
→ The fieldbus module has detected a fault in itself (hardware or software) which should not occur during normal operation. If this happens, the module must be serviced or replaced.

External Error (Error, Warning)
→ The fieldbus module has detected what may be a non-permissible event which is affecting the module from the outside. The system may require troubleshooting.

Event (Informational, Notice)
The fieldbus module has detected an important normal operating event and reports it. These may include for example configuration actions over the web interface and other configuration interfaces which are also recorded.

Clicking on "Set Module Time” sends the current browser time to the fieldbus module but does not permanently store it. After a reset, reboot or loss of power the time begins to run again from the year 2000.

Clicking on "Update Log” refreshes the display, and "Clear Log” deletes all entries. The log entries are stored in a ring buffer.

8 Diagnostics

8.1. Diagnostics messages

The diagnostics messages that are generated by the module in the event of an error are usually read out by the PLC and processed. It is also possible to read out the diagnosis from the module by means of function modules and evaluate it.

The diagnostics message is 34 bytes long and divided into 3 blocks:
Block Header, Alarm Specifier, Channel Properties

Byte	Value	Meaning	Block
0	00	Block Type	BlockHeader
1	02		
2	00	Block Length	
3	1E		
4	01	Block Version High	
5	00	Block Version Low	
6	00	Alarmtype	
7	01		
8	00	API	
9	00		
10	00		
11	00		
12	00	Slotnumber	
13	01		
14	00	Subslotnumber	
15	01		
16	00	Module Ident	
17	00		
18	00		
19	17		
20	00	Submodule Ident	
21	00		
22	00		
23	01		
24	XX	AlarmSpecifier	AlarmSpecifier
25	36		
26	80	User Structure Ident	
27	00		
28	XX	Channelnumber	
29	XX		
30	08	ChannelProperties	ChannelProperties
31	00		
32	00	ChannelErrorType	
33	1A		

8 Diagnostics

8.2. Block Header

The first part of the diagnosis is the so-called Block Header, which is 24 bytes long.

Block Type

The first 2 bytes of the Block Header are described by the Block Type to define the data type.

Possible values	Meaning
0x0002	Alarm Notification Low

Block Length

2 bytes of data that define the length of the following diagnostics message.
(for the complete diagnostics message, the 2 bytes from the Block Type and the 2 bytes from the Block Length must be added).

Block Version

Low Byte fixed at 0x01, High Byte fixed at 0x00

Alarm Type

2 bytes; the information on the type of alarm is provided here

Possible values	Meaning
0x0001	Diagnostics

API

4 bytes, default is 0.

Possible values	Meaning
0x00000000	Default value

Slot

2 bytes of data that describe which slot of the module reports an error

BNI PNT-507-005-Z040

Possible values	Meaning
0x0001	Slot 0 (Header module)
0x0002	Slot 1 - 4 (IO-Link Ports 0 - 3)
0x0003	Slot 1 - 4 (IO-Link Ports 0 - 3)
0x0004	Slot 1 - 4 (IO-Link Ports 0 - 3)
0x0005	Slot 1 - 4 (IO-Link Ports 0 - 3)
0x0006	Slot 5 - 20 (Standard IO-Modules)
0x0007	Slot 5 - 20 (Standard IO-Modules)
0x0008	Slot 5 - 20 (Standard IO-Modules)
0x0009	Slot 5 - 20 (Standard IO-Modules)
0x0010	Slot 5 - 20 (Standard IO-Modules)
0x0011	Slot 5 - 20 (Standard IO-Modules)
0x0012	Slot 5 - 20 (Standard IO-Modules)
0x0013	Slot 5 - 20 (Standard IO-Modules)
0x0014	Slot 5 - 20 (Standard IO-Modules)
0x0015	Slot 5 - 20 (Standard IO-Modules)

Subslot

2 bytes of data that describe which subslot of the slot reports an error

Possible values	Meaning
0x0001	Subslot 1

Module ID

4 bytes of data that describe which module is inserted in the respective slot.
(The module ID is saved in the GSDML)

Possible values	Meaning
0x00000017	BNI PNT-xxx-xxx-xxxx
0x00000025	IOL IN 1 OUT 0
0x00000026	IOL IN 2 OUT 0
0x0000003A	IOL IN 4 OUT 0
0x0000003B	IOL IN 6 OUT 0
0x00000027	IOL IN 8 OUT 0
0x00000035	IOL IN 10 OUT 0
0x00000037	IOL IN 16 OUT 0
0x0000003C	IOL IN 24 OUT 0
0x00000028	IOL IN 32 OUT 0
0x00000029	IOL IN 0 OUT 1
0x0000002A	IOL IN 0 OUT 2
0x0000003D	IOL IN 0 OUT 4
0x0000003E	IOL IN 0 OUT 6
0x0000002B	IOL IN 0 OUT 8
0x00000036	IOL IN 0 OUT 10
0x00000038	IOL IN 0 OUT 16
0x0000003F	IOL IN 0 OUT 24
0x0000002C	IOL IN 0 OUT 32
0x0000002D	IOL IN 1 OUT 1
0x0000002E	IOL IN 2 OUT 2
0x00000040	IOL IN 2 OUT 4
0x00000041	IOL IN 4 OUT 2
0x00000042	IOL IN 4 OUT 4
0x0000002F	IOL IN 2 OUT 8
0x00000043	IOL IN 4 OUT 8
0x00000030	IOL IN 8 OUT 2
0x00000044	IOL IN 8 OUT 4
0x00000045	IOL IN 8 OUT 8
0x00000031	IOL IN 4 OUT 32
0x00000032	IOL IN 32 OUT 4
0x00000039	IOL IN 16 OUT 16
0x00000046	IOL IN 24 OUT 24
0x00000033	IOL IN 32 OUT 32
0x00000059	Output pin 4
0x0000005A	Output pin 2
0x0000005B	Input pin 4
0x0000005C	Input pin 2

Submodule ID

4 bytes of data that describe which submodule is used with the respective module.
(The submodule ID is saved in the GSDML)

Possible values	Meaning
0x00000001	BNI PNT-xxx-xxx-xxxx

8 Diagnostics

8.3. AlarmSpecifier 2 bytes, subdivided as follows:

Sequence Number Bit 0-10, this counter is incremented with every new diagnostic message.

Channel Diagnostic Bit 11

Possible values	Meaning
0x00	No diagnosis related to channel is pending
0x01	Diagnosis related to channel is pending

Manufacturer-Specific Diagnosis Bit 12

Possible values	Meaning
0x00	No diagnosis related to manufacturer is pending
0x01	Diagnosis related to channel is pending

Submodules Diagnostic State Bit 13

Possible values	Meaning
0x00	No further diagnosis of submodule present
0x01	At least one further diagnosis of the submodule present

Bit 14 reserved

ARDiagnosis State Bit 15

Possible values	Meaning
0x00	No further diagnosis of module is present
0x01	At least one further diagnosis of the module is present

User Structure ID 2 bytes, describes the type of diagnosis

Possible values	Meaning
0x8000	Channel-related diagnosis

8.4. Channel Number

Configuration as standard I/O

Error Type	Channel Number
Undervoltage US	8000
Undervoltage UA	8000
No UA	8000
Sensor Short circuit Pin 1 - 3	0…..n
Actor Short circuit Pin 2 - 3	0…..n
Actor Short circuit Pin 4 - 3	0…..n

n = number of IOL ports

Configuration as IO-Link

Error Type	Channel Number
Line break	0
Short circuit IOL Pin 4 - 3	0
Sensor short circuit Pin 1 - 3	0
IOL Device wrong configuration	0

Diagnostics for IO-Link devices

Error Type	Channel Number
Short circuit	1
Undervoltage	1
Upper threshold exceeded	1
Lower threshold undershot	1

8 Diagnostics

8.5. Channel Properties

2 bytes, subdivided as follows:

Type

Possible values	Meaning
0x00	Used if the channel number is 0x8000 or none of the types defined below is relevant.
0x01	1 bit
0x02	2 bits
0x03	4 bits
0x04	8 bits
0x05	16 bits
0x06	32 bits
0x07	64 bits
0x08 – 0xFF	Reserved

Bit 0-7

Accumulative

Bit 8 not used, always 0.

Maintenance

Possible values		Meaning
Bit 9	Bit 10	
0x00	0x00	Diagnostics

Bit 9-10

Specifier

Possible values	Meaning
0x00	Not used
0x01	Diagnosis appeared
0x02	Diagnosis left
0x03	Diagnosis left, but another is still active

Bit 11-12

Direction

Possible values	Meaning
0x00	Manufacturer-specific
0x01	Channel used as input
0x02	Channel used as output
0x03	Channel used as input and output

Bit 13-15

8.6. Channel Error Type

Error code in hex	Description
0x0000	Unknown error
0x0001	Short-circuit
0x0002	Undervoltage
0x0003	Overvoltage
0x0004	Overload
0x0005	Temperature limit exceeded
0x0006	Cable break
0x0007	Upper threshold exceeded
0x0008	Lower threshold undershot
0x0009	Error
0x001A	External error
0x001B	Sensor has incorrect configuration (IO-Link device)
0x0101	Actuator warning
0x0105	Actuator supply undervoltage
0x0104	No actuator power supply

9 Configuration of IO-Link devices

Options

IO-Link devices can be configured via the web server, function modules and the IO-Link device tool.

When using the device tool and the web server, most of the parameters that are required are taken over by the software.

The sample project with the IO_Call function module from Siemens AG can be downloaded on the Balluff homepage.

The web server and the IO-Link device tool access the module directly, the function module is used to compile a telegram which is sent via DPV1 functions to the master.

Telegram structure

Area	Size in bytes	Value (dec)	Definition
Call header	1	08h	08h for "CALL", fixed
	1	0 1…63 64…255	IOL master Port number Reserved
	2	65098	FI_Index, IO-Link header is following
IO-Link header	1	0…255	Task 2 = write 3 = read
	2	0…32767 65535	IO-Link index Port function
	1	0…255	IO-Link subindex
Data range	232		Range of the data to be written or read

Read

To read out data, the master must be given a reading task for the corresponding slot/index/subindex.

The telegram must be adapted accordingly for this purpose (slot, index), and 0x03 for reading must be entered under "Task".
The telegram can then be sent by write instruction to the corresponding module.

The module reads the data from the IO-Link device.
The data can be retrieved by reading with the same telegram.

Write

To write data, the master must be given a writing task for the corresponding slot/index/subindex.

The telegram must be adapted accordingly for this purpose (slot, index), and 0x02 for writing must be entered under "Task".
The telegram can then be sent by write instruction to the corresponding module.


10 Appendix

10.1. Included in the Scope of Delivery

The BNI PNT comprises the following elements:

- IO-Link block
- 4x M12 dummy plugs
- Ground strap
- M4x6 screw
- 20 informational signs

10.2. Order number

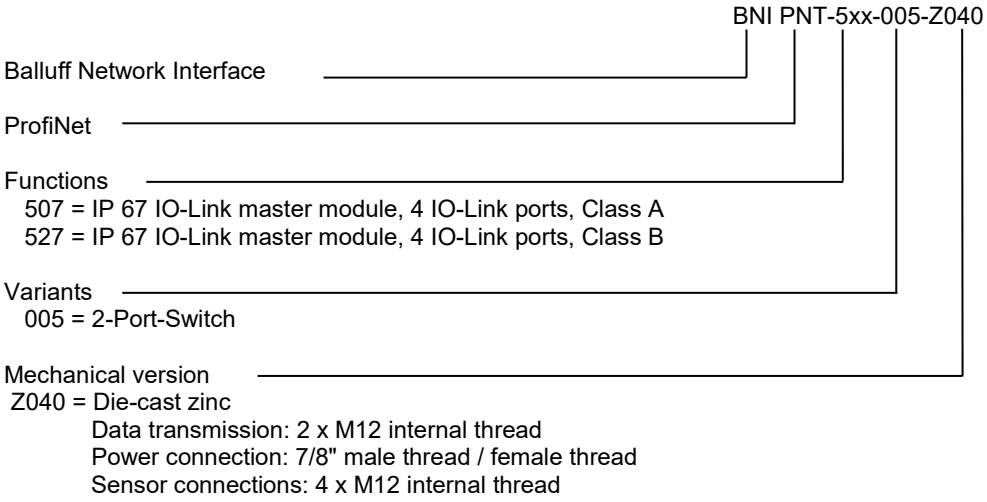

10.3. Ordering information

Product order code	Order code
BNI PNT-507-005-Z040	BNI0092
BNI PNT-527-005-Z040	BNI00A9

www.balluff.com

Balluff GmbH
Schurwaldstrasse 9
73765 Neuhausen a.d.F.
Germany
Tel. +49 7158 173-0
Fax +49 7158 5010
balluff@balluff.de

BALLUFF

No. 931209-726 E •03.128097 •Edition C19 •Replaces Edition H17 •Subject to modification.