

Installation Guide for BNI Isolation Kit

Electrically isolating metal BNI blocks from their mounting surface.

- 1 Identify the device requiring isolation and the proper isolation kit for the device by length.



- 2 Disconnect power from the device. Keep all other devices connected where possible to avoid confusion.



- 3 Remove M6 mounting screws and remove the block from the mounting location.



- 4 Using the existing mounting holes, insert the isolation pad between the block and the mounting surface.




- 5** Be sure that the slotted hole on the pad is oriented to the top.



- 6** Add the screw isolators and washers to both of the M6 screws as shown.



- 7** Tighten the M6 screws to the block and mounting location, making sure that the screw does not touch the housing. Max torque is 4 N-m(3 lb-ft).

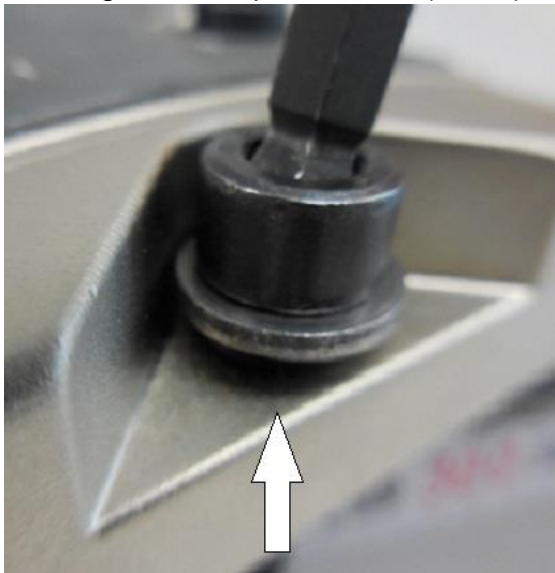

- 8** Be sure to REMOVE any grounding strap connections from the device.

