

Mounting Instructions

**1 Installation**



The BAM MD-VS-002-0002 is a plastic holder for the BVS HS-P families of barcode readers, designed to be mounted on a wall or fixed to a desk.

The mounting kit supplied with the holder contains the following components:


- 1 BAM MD-VS-002-0002
- 1 spacer
- 2 self-tapping screws
- 2 threaded dowels
- 2 adhesive strips

**1.1 Desktop Use**

To fix the BAM MD-VS-002-0002 to a desktop, use the double-sided adhesive strips following the steps below:

- 1 Carefully clean the surfaces of the desk and of the bottom of the BAM MD-VS-002-0002 with alcohol to remove any impurities that could reduce the adhesion.
- 2 Remove the protective plastic from one side of the adhesive strips and stick them on the BAM MD-VS-002-0002 bottom as shown in Figure 1.

Figure 1:

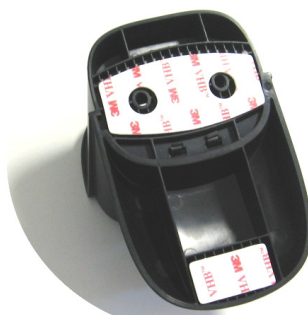


- 3 Remove the plastic from the other side of the strips and affix the BAM MD-VS-002-0002 to the desk.

**1.2 Wall-Mount Use**

Wall mounting is accomplished using the two threaded dowels and the self-tapping screws, which will be inserted into the two holder mounting holes.

Figure 2:

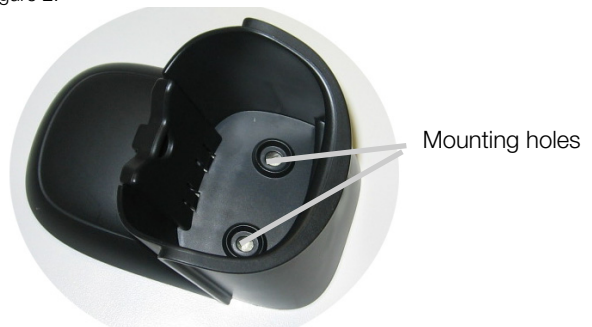

- 1 Using the holder mounting holes as a pattern, mark the wall where you desire to mount the BAM MD-VS-002-0002.
- 2 Drill two appropriate-size holes.
- 3 Insert the threaded dowels into the holes.
- 4 Position the holder on the wall with the opening inclined upwards and affix it by means of the two screws.



[www.balluff.com](http://www.balluff.com)

**World Headquarters  
Germany**  
Balluff GmbH  
Schurwaldstraße 9  
73765 Neuhausen a.d.F.  
Deutschland  
Tel. +49 7158 173-0  
Fax +49 7158 5010  
balluff@balluff.de

[www.balluff.com](http://www.balluff.com)

**Subsidiaries  
USA**  
Balluff Inc.  
8125 Holton Drive  
Florence,  
Kentucky 41042-0937  
Phone (859) 727-2200,  
1-800-543-8390  
applications@balluff.com