


Technical Description, User's Guide

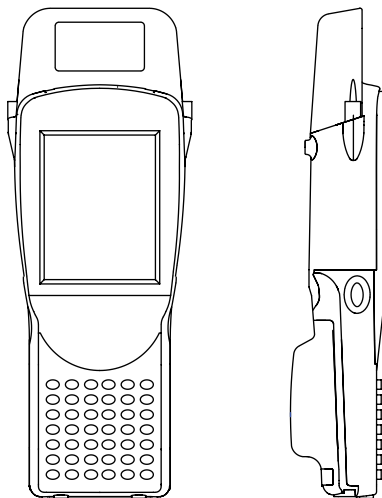

www.balluff.com

1	User Instructions	4
1.1	CE Declaration of Conformity and user safety	4
1.2	Scope of Delivery	4
1.3	About this manual	4
1.4	Manual organization	4
1.5	Conventions	5
1.6	Symbols	5
1.7	Abbreviations	5
2	Safety	6
2.1	Intended use	6
2.2	General safety notes	6
2.3	Important notes about rechargeable batteries	6
2.4	Meaning of the warning notes	6
3	Getting Started	7
3.1	Battery operation	7
3.2	Overview of WORKABOUT PRO C	8
3.3	COLD RESET or battery replacement	10
3.4	Turning the Handheld Programmer on/off	10
3.5	Keyboard, display and operating concept	10
3.6	Creating your own operating interface	10
3.7	Starting the RFID application	11
3.8	Operating menu overview	11
4	Basic knowledge	17
4.1	Function principle of Identification Systems	17
4.2	Product description	17
4.3	Control function	17
4.4	Data integrity	18
4.5	Files	18
4.6	Data carrier types	19
4.7	CRC check	19
5	Operation	20
5.1	Keyboard, display and operating concept	20
5.2	Reading data carriers	21
5.3	Writing to data carriers	22
5.4	Editing data	23
5.5	Initializing data carriers	24
5.6	Transforming data carriers	25
5.7	Working with files	27
5.8	Connecting the Handheld Programmer to a PC/Laptop	28
6	Technical Data	29
	Appendix	31
	Index	34

1 User Instructions

1.1 CE Declaration of Conformity and user safety



Declaration of Conformity

This product was developed and produced in compliance with applicable European standards and directives.



Note

You can request a Declaration of Conformity separately.
For additional safety instructions, refer to the "[Safety](#)" section on page 6

1.2 Scope of Delivery

Included in the scope of delivery:

- Handheld Programmer BIS L-87_
- BIS Software CD
- Power supply
- Printed Manual

1.3 About this manual

This manual describes the operation of the BIS L-87_ Identification System together with the "Workabout Pro" handheld computer made by "PSION Teklogix GmbH.

The present manual does not describe:

- Startup, operation and care of the "Workabout Pro" handheld computer,
- Installation and operation of accessories and expansion devices,
- Docking station and device interfaces.

This information is found in the manuals from PSION Teklogix GmbH [on the enclosed CD](#).

The most current documentation can be found [on the Internet at "www.psionteklogix.com"](http://www.psionteklogix.com).

1.4 Manual organization

The manual is organized so that the sections build on each other.

Section 2: Basic safety information.

Section 3: First steps (starting the software).

Section 4: Processing data carriers and using files.

Section 5: Connecting the Handheld Programmer to the PC.

Section 6: Technical data for the identification system.

1 User Instructions

1.5 Conventions The following conventions are used in this manual.

Enumerations Enumerations are shown as a list with en-dash.

- Entry 1,
- entry 2.

Actions Action instructions are indicated by a preceding triangle. The result of an action is indicated by an arrow.

- ▶ Action instruction 1.
⇒ Action result.
- ▶ Action instruction 2.

Cross-references Cross-references indicate where additional information on the topic can be found (e. g.: "[see Technical Data on page 29](#)").

Buttons Buttons are set in brackets, e. g. **[Write]**.

Menu commands Menu commands are joined with a greater than symbol, e. g. "**Start > Programs**" stands for the menu command <Programs> from the start menu.

Buttons Keys are set in angle brackets, e. g. confirm by pressing **<Enter>** .

1.6 Symbols



Attention!

This symbol indicates a safety instruction that must be followed.



Note, tip

This symbol indicates general notes.

1.7 Abbreviations

BIS	Balluff Identification System
CRC	Cyclic Redundancy Check
EEPROM	Electrically Erasable Programmable Read Only Memory
EMC	Electromagnetic Compatibility
PC	Personal Computer
RFID	Radio Frequency Identification
PLC	Programmable Logic Controller

2 Safety

2.1 Intended use

The BIS L-87_ Handheld Programmer is a component of the BIS L identification system. Within the identification system it is used for checking, correcting or initializing data carriers. The Handheld Programmer may be used only for this purpose in an industrial environment corresponding to Class A of the EMC Law. This description is valid for processors in series BIS L-87_-1-008-....

2.2 General safety notes

Startup

Startup is to be performed only by trained specialists. Any damage resulting from unauthorized manipulation or improper use voids the manufacturer's guarantee and warranty. When starting up, observe the instructions in the manuals from PSION Teklogix GmbH. The Handheld Programmer is to be operated only using the power supply approved for the device (see [Technical Data on page 30](#)).

Operation and testing

The operator is responsible for ensuring that local prevailing safety regulations are observed. When defects and non-clearable faults in the Identification System occur, take the system out of service and secure it against unauthorized use.

2.3 Important notes about rechargeable batteries



Attention!

Improper use, charging, disposal or replacement of the rechargeable battery may result in an explosion! Replace the rechargeable batteries only with the same or a type recommended by the manufacturer.



Note

Batteries and rechargeable batteries may not be disposed of with regular waste. As an end user you are legally required to recycle used batteries or rechargeable batteries. You can return batteries or rechargeable batteries after use at community collection points at no cost. You may also return batteries or rechargeable batteries to us by mail with sufficient postage:
Balluff GmbH, Schurwaldstraße 9, 73765 Neuhausen a.d.F., Deutschland



Attention!

Use only Balluff approved power supplies.

2.4 Meaning of the warning notes



Attention!

The pictogram used with the word "Caution" warns of a possible hazardous situation affecting the health of persons or equipment damage. Disregard of these warning notes may result in injury or damage to equipment.

- Always take the described measures to prevent hazardous situations.

3 Getting Started

3.1 Battery operation



Note

The system components of the Handheld Programmer are powered by a 3.7V rechargeable battery pack (Li-Ion).

- Rechargeable batteries provided by Balluff are not charged and have to be charged prior to first use.

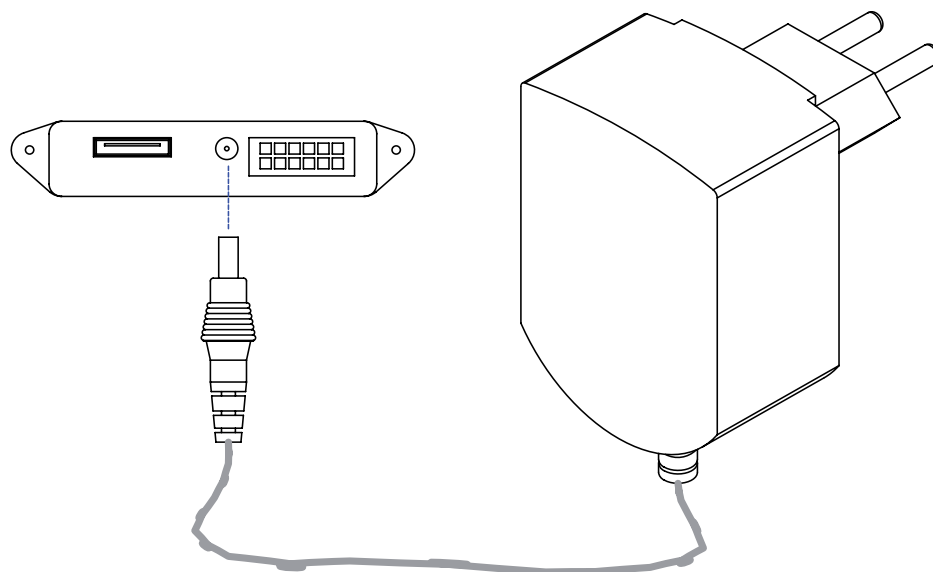


Fig. 3: Connecting the power supply – Charging the battery pack

Operating life and replacement of rechargeable batteries

A rechargeable battery with high capacity has a battery life of up to 48 hours after a full charge. Presumption: 200 readings, instrument switches to suspend mode after three minutes when not in use.

Data in the Handheld Programmer are retained for at least 10 to 15 minutes while the battery is being replaced.



Note

User data are by default saved in a RAM-based folder. The data in this RAM folder are lost if the main battery pack and backup battery pack are completely drained or if the device is cold started (see also "Cold Reset", Section 3.3 on page 10). The safest place to store the data is an SD or MMC memory card (Flash Disk).

Charging rechargeable batteries



Attention!

Components can be damaged by using an incorrect charging current.

- Use the docking station or the Balluff recommended charger/power supply for charging the battery pack.

- Insert unit in the docking station OR connect the power supply



Note

When using a docking station, an uncharged battery pack may be used. Then simply dock the unit and turn it on.

3 Getting Started

3.2 Overview of WORKABOUT PRO C

**BIS L-870-1-
008-X-000**

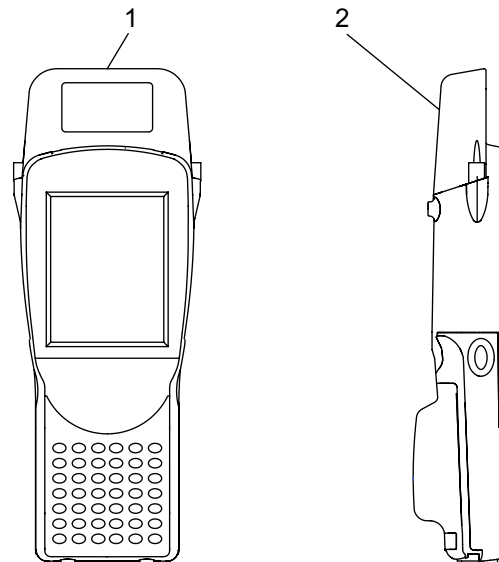


Fig. 4: Handheld Programmer BIS L-870-1-008-X-000

- 1 Read/write head for BIS L data carriers with round coil $\varnothing > 20$ mm
- 2 Active surface (underside)

**BIS L-871-1-
008-X-000**

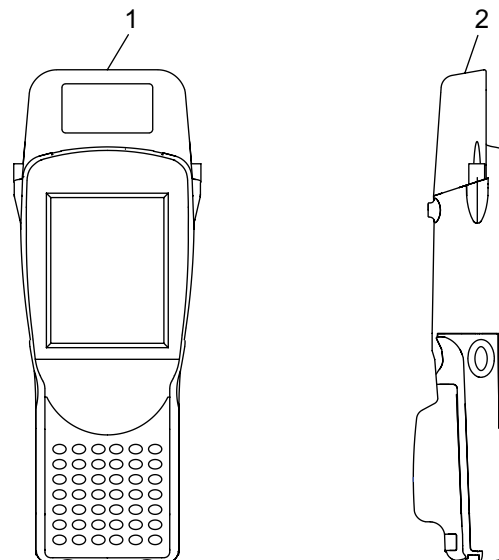


Fig. 5: Handheld Programmer BIS L-871-1-008-X-000

- 1 Read/write head for BIS L-15_-XX data carriers
- 2 Active surface (frontside)

3 Getting Started

**BIS L-873-1-
008-X-000**

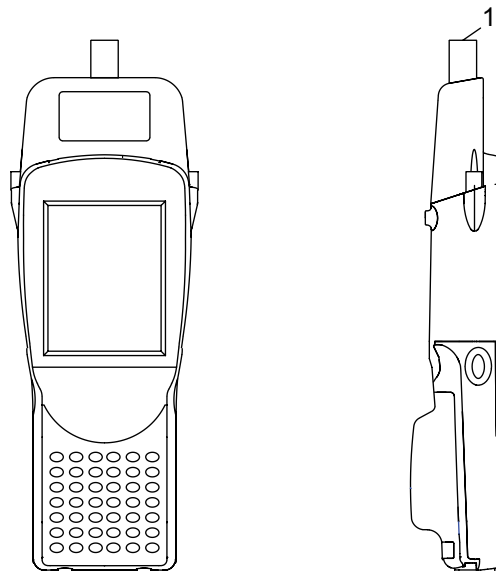


Fig. 6: Handheld Programmer BIS L-873-1-008-X-000

- 1 Read/write head for BIS L data carriers with round coil $\varnothing < 20$ mm
Active surface (frontside)

**BIS L-870-1-
008-X-002**

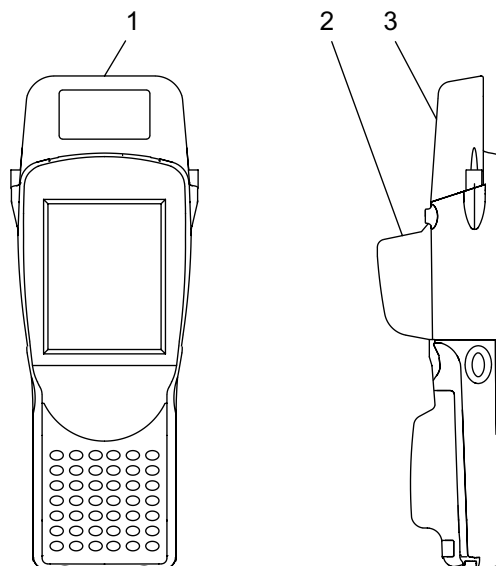


Fig. 7: Handheld Programmer BIS L-870-1-008-X-002

- 1 Read/write head for BIS L data carriers with round coil $\varnothing > 20$ mm
- 2 Barcode scanner
- 3 Active surface (underside)

3 Getting Started

3.3 COLD RESET or battery replacement



Note

Removing the battery pack or performing a cold reset will delete data, drivers and settings from the RAM of the unit!

The program **"Total Recall"** can be used to save the personal profile so that it is automatically loaded after a cold reset.

The program **"Total Recall"** is located in the **"Control Panel"** of the Workabout Pro.

Saving your own profile with "Total Recall"

- To open the Control Panel: <Windows Start> - <Settings> - <Control Panel>.
- Double-click on the program <Total Recall> (or select it and in the upper left corner select <File> and <open>),
- A new window opens; click on <Next> ; the following window is opened,
- Change <Profile Name> to <BISM>,
- Change <Profile Type> to <AutoRestore for this device only>,
- Keep <Profile Location> (should be set to <Flash Disk>),
- Click on <Next>,
- <All Files> window opens. Do not change anything. Click on <Next>,
- <View Selections> window opens. Do not change anything. Click on <Next>,
- Click on <Backup>,
- In the <Perform the Operation> window click on <Finish1> .

3.4 Turning the Handheld Programmer on/off

Requirements:

- Supply voltage is present (battery pack used and charged, device is in the docking station of power supply is connected).



Attention!

This is a Class A product. When using this product indoors, the device may cause RF interference, requiring the user to take appropriate measures.

Turning on

- Hold down <Enter> for at least 1 second.
As soon as the green LED flashes, release the <ENTER> key.
⇒ The start screen <(Today)> will be displayed.



Note

If the device was used previously, it can happen that it is in Suspend mode; pressing <ENTER> reactivates the unit. The screen you were working in before the computer switched to Suspend mode is displayed again.

Turning off

- **Suspend -**
- Press <FN> (blue) and then <ENTER> to shut off the WORKABOUT PRO or
- From the start menu select **"Shutdown > Suspend"** .

3.5 Keyboard, display and operating concept

Familiarize yourself with the operating concept and characteristics of the WORKABOUT PRO. The operating manual can be found [on the included CD](#).
The most recent documents are available in the Internet at: <http://www.pSION-teklogix.com/>.

3.6 Creating your own operating interface



Note

The BALLUFF.dll was developed as an independent software for creating a custom tailored operating interface, for the Handheld Programmer. The ordering code for this application is available on demand.

Getting Started

3.7 Starting the RFID application

- ▶ On the desktop press on **"Start > Programs > BALLUFF RFID > BIS L RFID"** (depending on the WindowsCE® version only the Windows®-Logo may appear (as shown in Fig. 8), instead of a "Start" button).
- ▶ **As an alternative start option** doubleclick the link **"BIS L RFID"** on the desktop.
 - ⇒ The application **"BIS L RFID"** is started.
 - ⇒ The start screen is displayed.

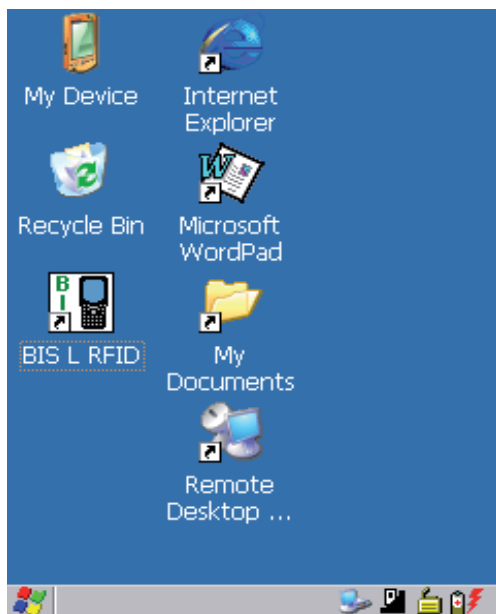


Fig. 8: Windows CE Desktop



Fig. 9: Balluff application start screen

3.8 Operating menu overview

After the start screen the tab **"Settings"** is displayed.

"Settings" tab

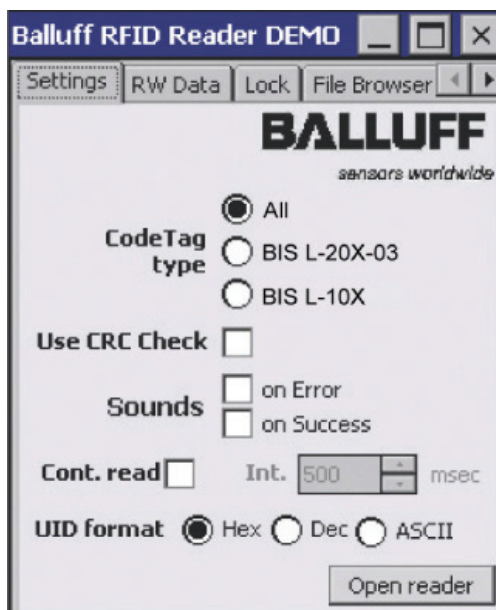


Fig. 10: "Settings" tab

3 Getting Started

The "Settings" tab cont.

The following settings can be made:

CodeTag Type

Selection of the data carrier type. All or one particular data carrier type may be selected.

All	All Balluff supported data carrier types are processed (factory default setting).
BIS L-1xx	Only BIS L-1xx data carrier types are processed
BIS L-2xx	Only BIS L-2xx data carrier types are processed

Use CRC Check

Uses the CRC checksum. If the CRC data check is activated, the validity of the data is ensured using a CRC checksum (see also "Data integrity" in Section 4 "BasicKnowledge", starting on page 18).

If the CRC data check is not activated, the validity of the data is checked using a double read.

Sounds

Setting an audio signal for a read error ("on Error") or successful reading ("on Success").

UID Format

Setting the display format of the serial number.

The serial number can be displayed in "Hex" (hexadecimal), "Dec" (decimal) or "ASCII" format.

Continuous Read

Continuous Read.

If this option is enabled, read requests are carried out automatically at the set interval.

[Open Reader]

Activating the read/write head.

The read/write head is activated with the settings made and the options are grayed out. The label on the button changes to "Close Reader".

Go to the "RW Data" tab to perform read or write operations.

[Close Reader]

Deactivate the read/write head. The settings are enabled for editing.

Supported data carrier types

Following data carrier types can be processed with the BIS L-870:		
BIS L-100-01/L	BIS L-103-05/L	BIS L-202-03/L
BIS L-101-01/L	BIS L-200-03/L	BIS L-203-03/L
BIS L-102-01/L	BIS L-201-03/L	

A BIS L-871 is required to process the following data carriers:	
BIS L-150-05/A	BIS L-151-05/A

A BIS L-873 is required to process the following data carriers:	
BIS L-222-03/L	BIS L-245-03/L
BIS L-244-03/L	

You can obtain more detailed information upon request.

Getting Started

"RW Data" tab

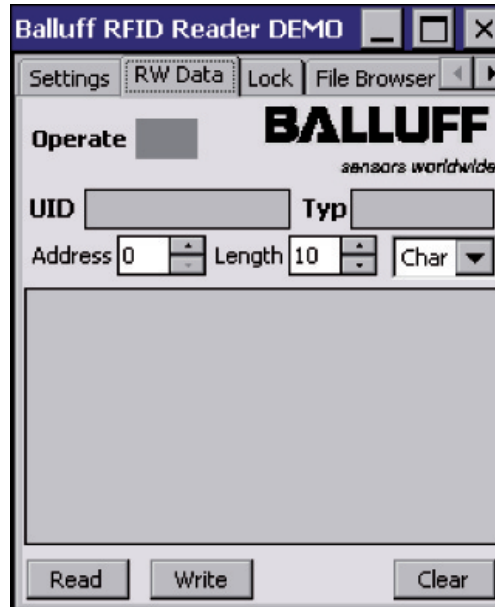


Fig. 11: "RW Data" Tab

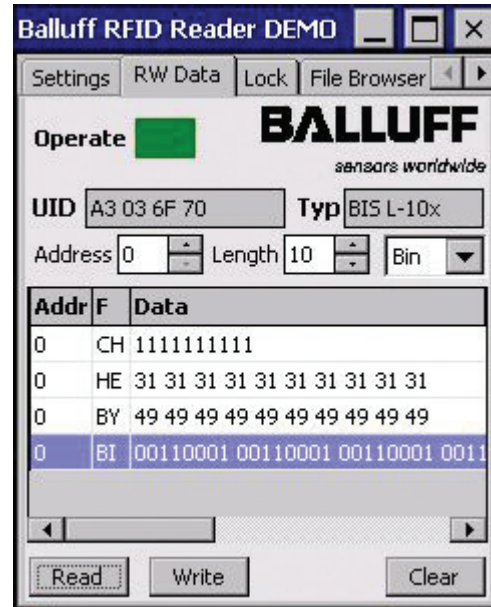


Fig. 12: "RW Data", Operation successful

Operate

Status indicator:

Yellow flashing: Read/Write head activated, waiting for data carrier.

Green: Read/write operation successfully finished.

Red: Read/write error occurred.

UID

Display data carrier serial number. The serial number is displayed in the format selected under "Settings" (Hex, Dec, ASCII).

Type

Display of the data carrier type.

Address

Start address for reading or writing.

The start address can be entered or set using the spin box.

Length

Number of bytes you want to read or write.

The number of bytes can be entered or set using the spin box.

Format (Char, Byte, Hex, Bin)

Selecting the display format for data.

The data which were read are displayed according to the selection made in the selection field.

[Read]

Starts a read operation, the status indicator flashes yellow and the button label changes to "Stop" (cancel read operation).

[Write]

Starts a write operation, the status indicator flashes yellow and the button label changes to "Stop" (cancel write operation).

3 Getting Started

[CRC Init]


Initializes a data carrier for using the CRC checksum.

The button is only shown if on the **"Settings"** tab the option **"Use CRC Check"** is activated.

[Clear]

Clears the data read so far from the display window.

Editing data

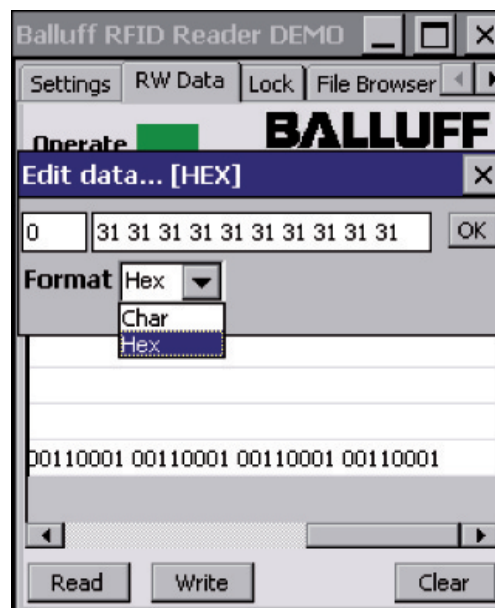

- ▶ Tap on a data line in the display window.
 - ⇒ The entry field **"Edit data..."** opens.
 - ⇒ The data can be changed using the keyboard.
- ▶ Confirm the change with **[OK]**.
 - ⇒ The entry field is closed, the changed data are displayed on the **"RW Data"** tab.

Fig. 13: Example - Editing data

Getting Started

"File Browser" tab

"File Browser" can be used to load or save files.



Fig. 14: "File Browser" tab

[Open]

Opens the dialog "Open file...".
A saved file can be selected and opened.
The data are displayed on the "RW Data" tab.

[Save]

Opens the dialog "Save file as...".
The data (from the display field on the tab "RW Data") can be saved in a file.

3 Getting Started

"About" tab

Display of the software version and manufacturer information.



Fig. 15: "About" tab

4 Basic knowledge

4.1 Function principle of Identification Systems

The BIS L portable Identification System is classified as a non-contacting system with read and write function. This allows it to not only transport information which is fixed programmed in the data carrier, but also to collect and pass on current information.

The main components of the portable BIS L Identification System are:

- Handheld Programmer,
- Data carriers.

The main areas of application are:

- In production for controlling material flow (e. g. in model-specific processes), in workpiece transport with conveying systems, for acquiring safety-relevant data,
- In tool coding and monitoring,
- In process equipment organization,
- In warehousing for monitoring stock movement and levels,
- In transporting and conveying,
- In waste disposal for quantity-based fee assessment.

4.2 Product description

Handheld Programmer BIS L-87_:

- Plastic housing,
- Reading/writing using built-in antenna,
- Power for system components provided by 3.7V lithium-ion battery pack,
- Editor function for editing data to be read or written,
- Saving/loading files.

Creating your own operating interface



Note

The BALLUFF.dll software is available for creating a custom tailored operating interface. This application can be ordered separately. The ordering code is available on demand.

4.3 Control function

The Handheld Programmer is the link between data carrier and controlling system. The Handheld Programmer can be used to check, correct or initialize data carriers. The data read on the equipment can be stored in the Handheld Programmer and sent at a later time to the host system.

Host systems may be the following:

- A control computer (e. g. industrial PC),
- a PLC.

4 Basic knowledge

4.4 Data integrity

In order to ensure data integrity, data transfer between the data carrier and processor must be monitored using a check procedure.
The factory default setting in the Handheld Programmer is for double reading with comparison. Alternately the CRC_16 data check can be selected.
Here a check code is written to the data carrier which always allows the data to be checked for integrity.

Which procedure should be used depends on how the identification system is used.



Note

Mixed operation of both check procedures is not possible!

Data check

The following table provides an overview of the advantages of the respective check procedure.

CRC_16 data check	Double reading
Data integrity even during the non-active phase (data carrier outside the read/write head zone).	No user bytes are sacrificed for storing a check code.
Shorter read time – page is read once.	Shorter write time – no check code is written.

4.5 Files

Data read from a data carrier can be saved under a file name or saved files can be loaded.



Note

User data are by default saved in a RAM-based folder. The data in this RAM folder are lost if the main battery pack and backup battery pack are fully drained or if the device is cold started. The safest place to store the data is an SD or MMC memory card (Flash Disk).

File format

Start address of the data on the data carrier	No. of bytes	Data carrier data
4 bytes	4 bytes	max. 184 bytes

Example: Data carrier file starting at Address 75 with 16 bytes of data in ASCII format.
Data: ABCDEFGHIJKLMNOP

Contents of data carrier file: 00750016ABCDEFGHIJKLMNOP

4 Basic knowledge

4.6 Data carrier types

The following data carrier types are available for the BIS L-87_ Handheld Programmer. Depending on the instrument settings, can either 'ALL' or only one special data carrier 'TYPE' be processed.

Datenträger-Typ	Daten
BIS L-10_-01/L	192 Byte user data (read-/writable) + 4 Byte unique serial number (read only).
BIS L-10_-05/L	192 Byte user data (read-/writable) + 4 Byte unique serial number (read only). OR by data carrier management: 5 Byte unique serial number (read only) matches the user data.
BIS L-20_-03/L	192 Byte user data (read-/writable) + 5 Byte unique serial number (read only).

i Note

- BIS L-10_-01/L data carrier types will be delivered in FF_{hex}37_{hex} configuration. Only data carrier types in this configuration will be processed.
- The data carrier type BIS L-10_-01/L contains additional memory areas for configuration and protected data. These areas cannot be processed with the Handy-Programmer BIS L-87_.
- For data carrier type BIS L-10_-05/L the data division can be changed once only, with the Handy-Programmer BIS L-87_ (data carrier transformation).

4.7 CRC check

The CRC check is a procedure for determining a check value for data in order to be able to recognize transmission errors. If the CRC check is activated, an error message is sent when a CRC error is detected.

Initializing

To use the CRC check, the data carriers must be initialized (see "Initializing data carriers" starting on page 24).

If the data carrier does not contain the correct CRC when reading or writing, the Handheld Programmer sends the error message 'CRC-Error'.

Data carriers as shipped from the factory can be written immediately with a checksum, since all data are set to 0.

Error message

- If an error message is the result of a failed write job, the data carrier must be reinitialized to make it usable again.
- If an error message is not the result of a failed write job, the one or more memory cells in the data carrier is likely defective. The data carrier must be replaced.

Checksum

The checksum is written to the data carrier as 2 bytes of information. 2 bytes per block are sacrificed. This leaves 14 bytes per block available. The usable number of bytes can be found in the following table.

Data carrier type	Memory capacity (bytes)	Usable bytes for CRC_16
BIS L-10_-01/L	192 Byte	168 Byte
BIS L-10_-05/L	192 Byte or 5 Byte	168 Byte or 3 Byte
BIS L-20_-03/L	5 Byte	CRC_16 is not supported

5 Operation

5.1 Keyboard, display and operating concept

Familiarize yourself with the operating concept and characteristics of the WORKABOUT PRO. The operating manual can be found [on the included CD](#). The most recent documents are available in the Internet at: <http://www.pSION-teklogix.com/>.

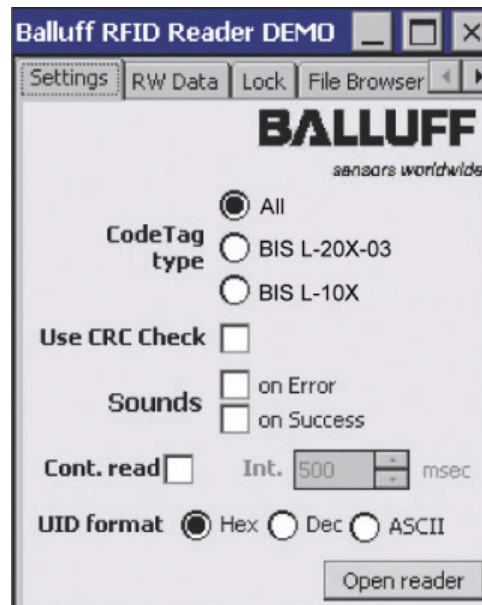


Fig. 16: "Settings" tab

- ▶ Start Balluff RFID Reader.
- ▶ Make desired settings.
- ▶ Activate read/write head by tapping **[Open reader]**.
⇒ The settings are grayed out and the button changes to **[Close reader]**.

5 Operation

5.2 Reading data carriers

- Change to "RW Data" tab.

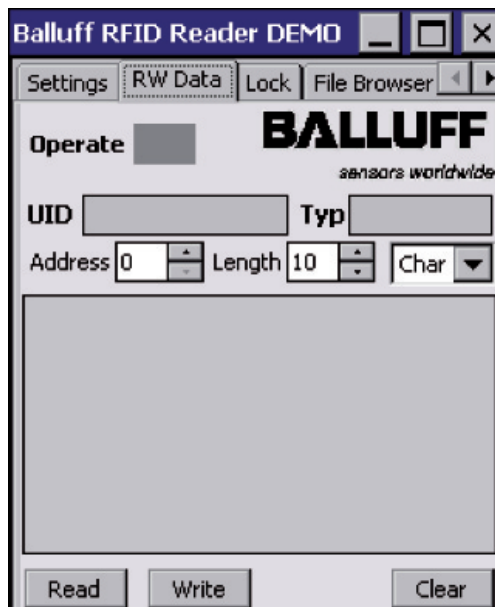


Fig. 17: "RW Data" tab

- Select start address, number of bytes to read, and data format.
- Tap on **[Read]**.
⇒ The "Operate" field begins to flash yellow.

- Hold the active surface to the data carrier you wish to read.
⇒ The data are read and displayed. The field "Operate" lights up green.
⇒ If there is a read error "UID" and "Type" are not displayed, the field "Operate" lights up red.

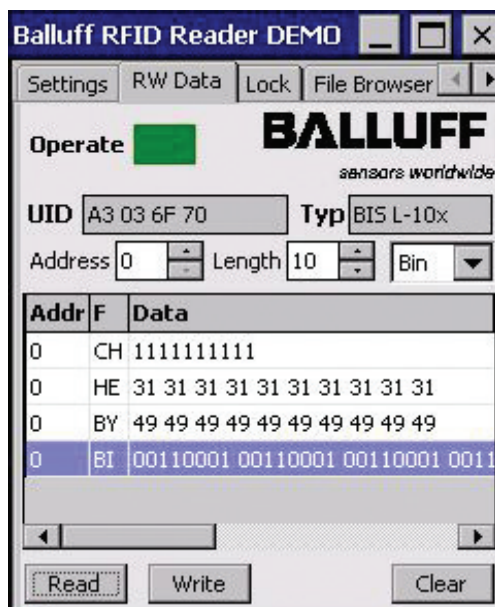


Fig. 18: Read operation successful


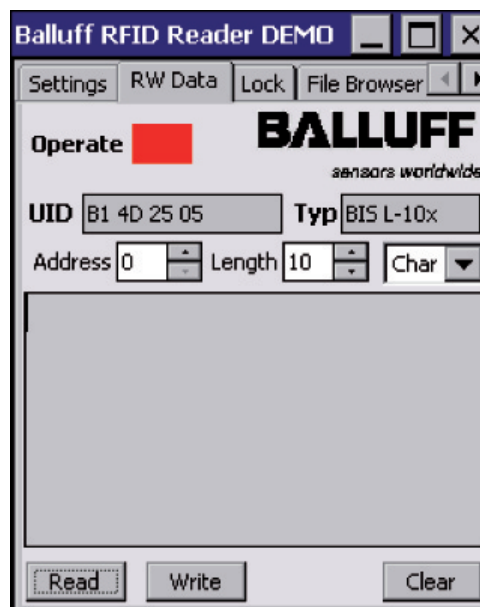


Fig. 19: Read error

5 Operation

5.3 Writing to data carriers

- ▶ Start Balluff RFID Reader.
- ▶ Change to **"RW Data"** tab.

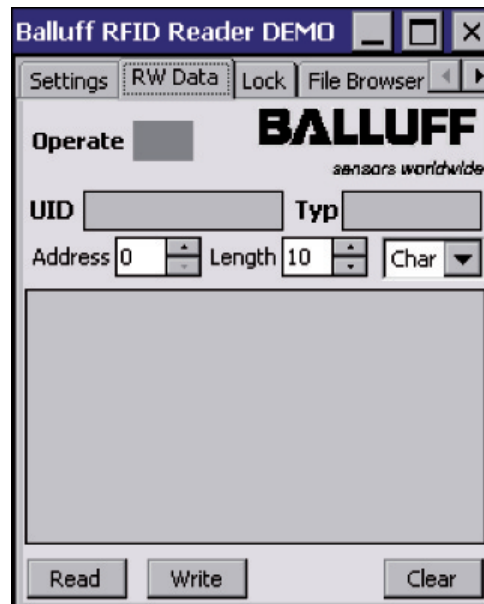

- ▶ Select start address, number of bytes to write, and data format.
- ▶ Select the data record you want to write.
- ▶ Tap on **[Write]**.
⇒ The **"Operate"** field begins to flash yellow.

Fig. 20: Writing to data carrier

- ▶ Hold the active surface to the data carrier you wish to write to.
⇒ The data are written, if successful the **"Operate"** field lights up green.
⇒ If there is a write error, the **"Operate"** field lights up red.

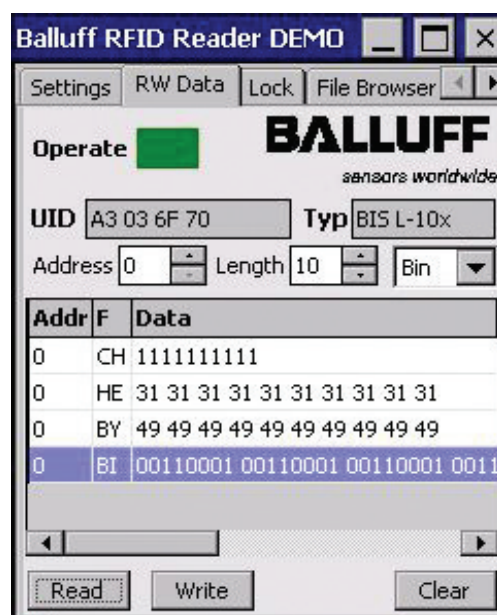


Fig. 21: Write operation successful

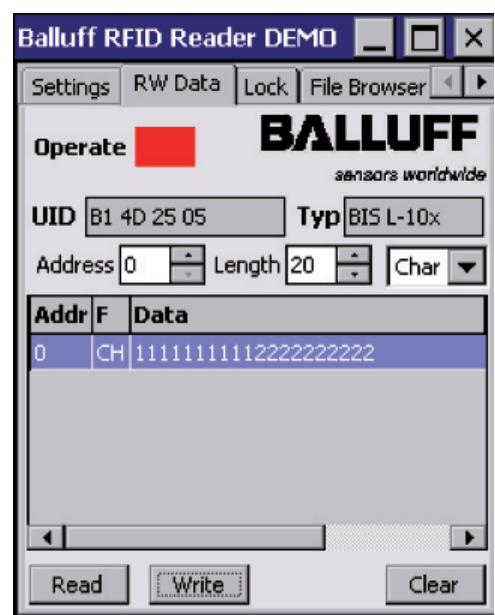


Fig. 22: Write error

5 Operation

5.4 Editing data

- Change to "RW Data" tab.

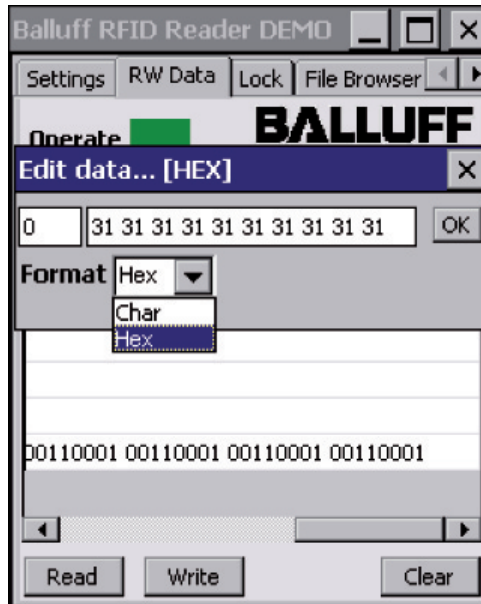


Fig 23: Editing data carrier

On the "RW Data" tab you can edit data, read from the data carrier or data from an opened file.

- Tap on a data line in the display window.
⇒ The Editor opens.
- Edit data using the keyboard and confirm with **[OK]**.
⇒ The editor is closed and the changed data are displayed.

5 Operation

5.5 Initializing data carriers

- Change to **"Settings"** tab.



Fig. 24: Initializing data carrier – 1st Step

The data carrier is programmed with 00_{hex} and thereby prepared for operation with CRC data check.

- Balluff RFID Reader starten.
- **"Use CRC Check"** aktivieren.
- Schreib-/Lesekopf durch Tippen auf **[Open reader]** aktivieren.
⇒ Die Einstellungen werden ausgegraut und die Schaltfläche wechselt zu **[Close reader]**.

- Change to **"RW Data"** tab.
⇒ Here you can edit data, read from the data carrier or data from opened file.

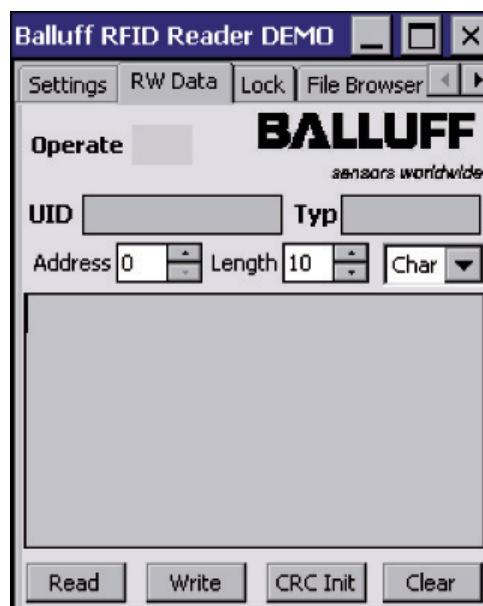


Fig. 25: Initializing data carrier – 2nd Step

- Select start address, number of bytes and data format.
- Tap on **[CRC Init]**
⇒ The **"Operate"** field begins to flash yellow.
- Hold the active surface to the data carrier you wish to initialize.
⇒ The data carrier is initialized, and if successful the **"Operate"** field becomes green.
⇒ If there is a write error, the **"Operate"** field lights up red.

5 Operation

5.6 Transforming data carriers

Tapping on **"Lock"** tab opens a password request:
► Assure that a data carrier is within the read area.

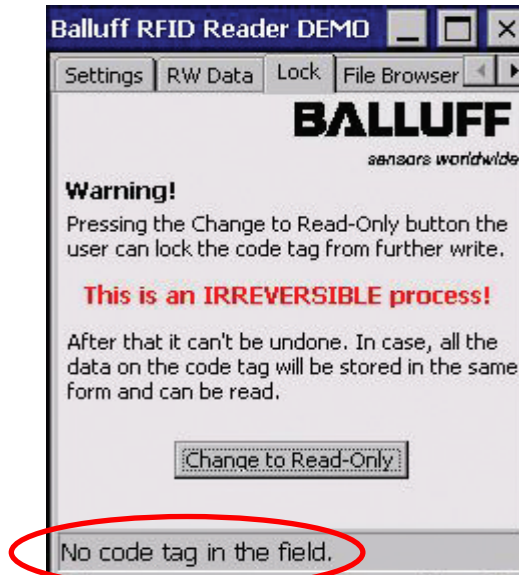


Fig. 26: "No_CT present" status



Fig. 27: "Lock" password request

ID Assignment

► Login with password **"BISLOCKER"**.
⇒ After a successful login a new ID can be assigned to the data carrier.

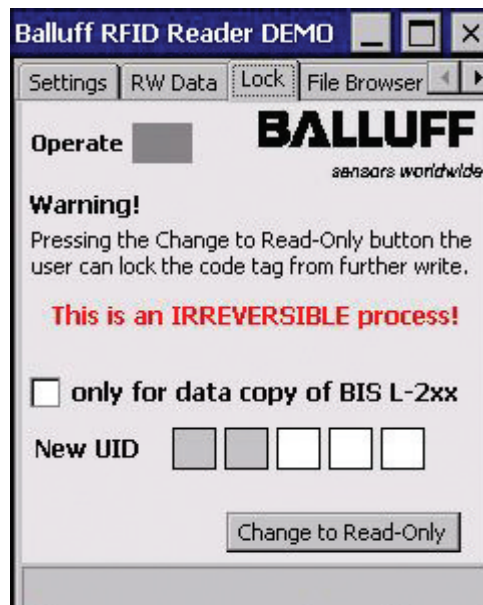


Fig. 28: Data carrier ID assignment

5 Operation

Transforming data carriers, cont.

A data carrier can only once be transformed from an **"RW type"** into a **"Read-Only type"**. This procedure is irreversible.



Fig. 29: Data carrier transformation (security query)

- ▶ To transform tap on button **[Change to Read-Only]**.
⇒ A last security query will appear.
- ▶ Button **[No]** is pressed:
⇒ Procedure is being canceled.

Transformation

Operation is executed.

Possible results



Fig. 30: Data carrier transformation (error)

- ▶ Button **[Yes]** is pressed:
⇒ The transformation of the data carrier into a **"Read-Only type"** will be done.
⇒ If the fieldcolor **"Operate"** changes to green, the transformation was successful.
⇒ If the fieldcolor changes to yellow, a write error occurred.

The figure shows, an attempt of an impossible, repeated data carrier transformation.

5 Operation

5.7 Working with files



Note

Data read from a data carrier can be saved under a file name. Already saved data can be opened and further processed.

- Change to **"File Browser"** tab.

Saving files



- Tap on **[Save]**.
⇒ The Dialog **"Save as..."** opens.
- Choose location and name of the file and confirm with **[OK]**.
⇒ The read data are stored as a file.

Fig. 31: Saving files



Note

All data records on the **"RW Data"** tab are saved in the file with start address and number of bytes (see also ["Files" on page 18](#)).

User data are by default saved in a RAM-based folder. The data in this RAM folder are lost if the main battery pack and backup battery pack are completely drained or if the device is cold started (see also ["Cold Reset", Section 3.3 on page 10](#)). The safest place to store the data is an SD or MMC memory card (Flash Disk).

5 Operation

Loading files

- Change to **"RW Data"** tab.

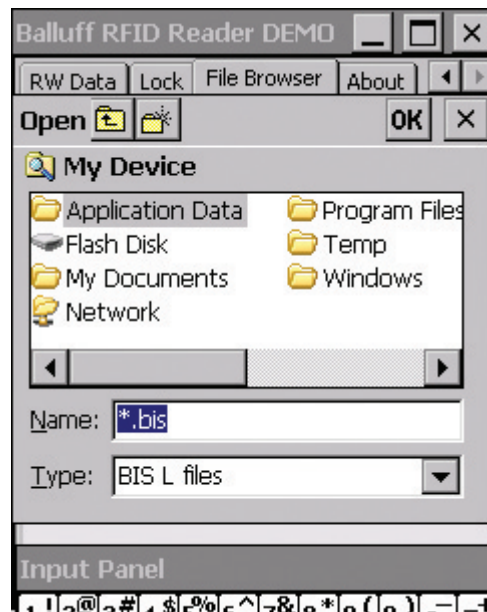


Fig. 32: Load data

- Switch to **"File Browser"** tab.
- Tap on **[Open]**.
⇒ The dialog **"Open"** opens.
- Select file and confirm with **[OK]**.
⇒ The saved data are read and displayed on the **"RW Data"** tab.

5.8 Connecting the Handheld Programmer to a PC/Laptop

The Handheld Programmer can optionally be connected to a PC/laptop using Bluetooth, WLAN or USB (docking station).

Files can be sent between the Handheld Programmer and PC/laptop using the **"ActiveSync"** software.



Note

Depending on the installed option, refer to the WORKABOUT PRO operating manual for the exact procedure for connecting the Handheld Programmer to the PC. Operation of the **"ActiveSync"** software is described in its online help.

Data transmission

- Connect Handheld Programmer to PC.
- In **"ActiveSync"** (PC) select the menu option **"Search device"**.
or
- In Windows Explorer (PC) navigate to the entry **"Mobile device"**.
- From Explorer you can exchange files between the PC and WORKABOUT PRO.

Charge life



Note

A rechargeable battery with high capacity has a battery life of up to 48 hours after a full charge. Prerequisite: 200 read/write operations, after 3 min. without being used, the device enters Suspend Mode. Data in the Handheld Programmer are retained for at least 10 to 15 minutes while the battery is being replaced.

6 Technical Data

Dimensions

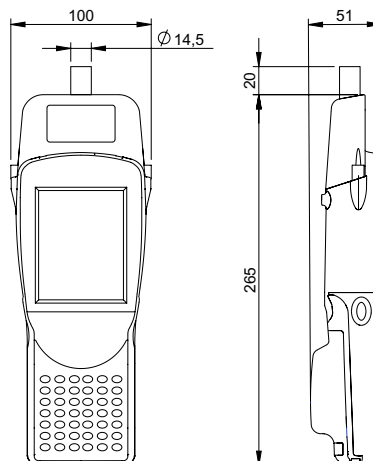


Fig. 33: BIS L-870-1-008-X-000 dimensions (in mm)

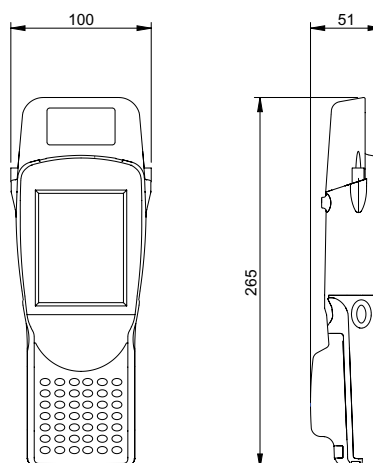


Fig. 34: BIS L-871-1-008-X-000 dimensions (in mm)

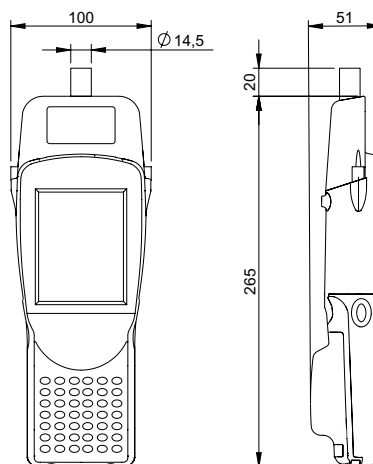


Fig. 35: BIS L-873-1-008-X-000 dimensions (in mm)

6 Technical Data

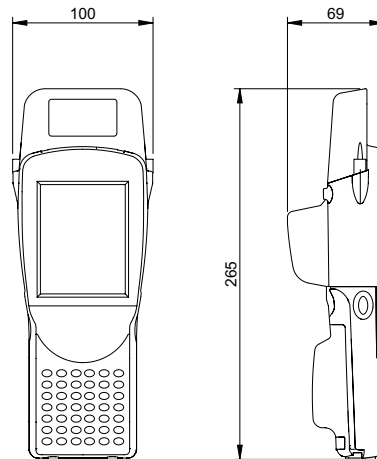


Fig. 36: BIS L-870-1-008-X-002 dimensions (in mm)

Housing

Weight (including battery pack)	585 grams
Keyboard	46 buttons, alphanumeric
Display	Touchscreen TFT 3.6"
Enclosure rating	IP 65

Connections

Read head connection	Built-in antenna
Charging socket	2.5 mm jack socket

Electrical Data

Operating voltage VS		3.7 V
Current consumption	Normal operation	approx. 300 mA
	Reading/writing	approx. 450 mA
Voltage and current supply	Type	3.7 V, Lithium Ion rechargeable
	Capacity	4000 mAh
	max. charging voltage	5 V
	Charging current	0.9 A
	Charging time	5 h
Battery lifes	see page 7	48 h

Operating Conditions

Ambient temperature range	-10 °C ... +50 °C
EMC	
– EN 61000-4-2/3/4/5/6	– Severity Level 3A/3A/-/-/-
– EN 55011	– Gr. 1, Cl. A
Vibration/shock	EN 60068 Part 2-6/27/29/64/32

Appendix

Type designation code

	BIS	L	- 87	- 1	- 008	- X	- 000
Balluff Identification System							
Series L Read/Write System							
Hardware type							
870 = Portable reader with integrated read/write head for data carriers with Ø > 20 mm							
871 = Portable reader with integrated read/write head for data carriers BIS L-15_-XX							
873 = Portable reader with integrated read/write head for data carriers with Ø < 20 mm							
Interface							
1 = Bluetooth							
Software type							
008 = Balluff Software for BIS _-87x-...							
Language							
X = Multilingual							
Additional features							
000 = Standard							
001 = With WLAN							
002 = With 1D barcode scanner							
003 = With 2D barcode/matrix scanner							
004 = With WLAN and 1D barcode scanner							
005 = With WLAN and 2D barcode/matrix scanner							

Accessory (scope of delivery)

Type	Ordering code
Power supply	11023835

Accessories (optional, not included in scope of delivery)

Type	Ordering code
Replacement stylus (package of 5)	11023833
Docking Station	11023834
Handle	11023836

Appendix

**Accessory
Charger
Handheld
Programmer**

Features

- Consisting of charger/power supply with 2.5mm jack plug,
- primary connector EURO, UK, US interchangeable (included),
- CE, UL approvals.

Technical Data

Primary voltage U_{primary}	100-240 V _{AC}
Secondary voltage U_{sec}	6 V _{DC} ± 5 %
Input frequency F_{primary}	50-60 Hz
Secondary current I_{sec}	2,1 A
Ambient temperature range T_a	–40 °C ... +70 °C
Material	PPE-V1-125 °C
Color	black
Material number	11023835
Color	black

**Accessory
Docking Station**

Features

- Consisting of charger/power supply with charge status indicator and charging cradle,
- primary connector EURO, UK, US interchangeable (included),
- CE, UL approvals.

Charge status indicator

LED red Battery charged
LED red flashing Battery charging

Technical Data

Primary voltage U_{primary}	100-240 V _{AC}
Secondary voltage U_{sec}	6 V _{DC} ± 5 %
Input frequency F_{primary}	50-60 Hz
Secondary current I_{sec}	800 mA
Ambient temperature range T_a	–40 °C ... +70 °C
Material	PPE-V1-125 °C
Color	black
Material number	11023834
Color	black

Appendix

ASCII table

Decimal	Hex	Control Code	ASCII	Decimal	Hex	ASCII	Decimal	Hex	ASCII
0	00	Ctrl @	NUL	43	2B	+	86	56	V
1	01	Ctrl A	SOH	44	2C	,	87	57	W
2	02	Ctrl B	STX	45	2D	-	88	58	X
3	03	Ctrl C	ETX	46	2E	.	89	59	Y
4	04	Ctrl D	EOT	47	2F	/	90	5A	Z
5	05	Ctrl E	ENQ	48	30	0	91	5B	[
6	06	Ctrl F	ACK	49	31	1	92	5C	\
7	07	Ctrl G	BEL	50	32	2	93	5D]
8	08	Ctrl H	BS	51	33	3	94	5E	^
9	09	Ctrl I	HT	52	34	4	95	5F	_
10	0A	Ctrl J	LF	53	35	5	96	60	`
11	0B	Ctrl K	VT	54	36	6	97	61	A
12	0C	Ctrl L	FF	55	37	7	98	62	B
13	0D	Ctrl M	CR	56	38	8	99	63	c
14	0E	Ctrl N	SO	57	39	9	100	64	d
15	0F	Ctrl O	SI	58	3A	:	101	65	e
16	10	Ctrl P	DLE	59	3B	;	102	66	f
17	11	Ctrl Q	DC1	60	3C	<	103	67	g
18	12	Ctrl R	DC2	61	3D	=	104	68	h
19	13	Ctrl S	DC3	62	3E	>	105	69	i
20	14	Ctrl T	DC4	63	3F	?	106	6A	j
21	15	Ctrl U	NAK	64	40	@	107	6B	k
22	16	Ctrl V	SYN	65	41	A	108	6C	L
23	17	Ctrl W	ETB	66	42	B	109	6D	m
24	18	Ctrl X	CAN	67	43	C	110	6E	n
25	19	Ctrl Y	EM	68	44	D	111	6F	o
26	1A	Ctrl Z	SUB	69	45	E	112	70	p
27	1B	Ctrl [ESC	70	46	F	113	71	q
28	1C	Ctrl \	FS	71	47	G	114	72	r
29	1D	Ctrl]	GS	72	48	H	115	73	s
30	1E	Ctrl ^	RS	73	49	I	116	74	t
31	1F	Ctrl _	US	74	4A	J	117	75	u
32	20		SP	75	4B	K	118	76	v
33	21		!	76	4C	L	119	77	W
34	22		"	77	4D	M	120	78	X
35	23		#	78	4E	N	121	79	Y
36	24		\$	79	4F	O	122	7A	Z
37	25		%	80	50	P	123	7B	{
38	26		&	81	51	Q	124	7C	
39	27		'	82	52	R	125	7D	}
40	28		(83	53	S	126	7E	~
41	29)	84	54	T	127	7F	DEL
42	2A		*	85	55	U			

Index

A

Abbreviations 5
Accessories 30
ASCII table 32

B

BALLUFF.dll 4

C

Charger 31
Charging 7
 rechargeable batteries 7
Check procedure 17
Checksum 19
Connecting 28
Connections 29
Control function 16
Conventions 4
CRC check 19

D

Data Carrier
 Editing 23
 ID Assignment 25
 Initializing 24
 Reading 21
 R/W Distance 18
 Transformation 26
 Transforming 25
 Types 18
 Writing 22
Data integrity 17
Data transmission 28
Dimensions 29
Docking Station 31

E

Electrical Data 29
Error message 19

F

Files 17
 File format 17
 Loading 28
 Saving 27

H

Handheld Programmer
 Product description 16
Housing 29

I

Initializing
 Data Carriers 19
Intended use 6

M

Main areas of application 16
Main components 16
Meaning
 Warning notes 6

O

Operating Conditions 29

P

Parameters
 CRC_16 data check 11
Product description 16

R

Rechargeable Batteries 7

S

Safety
 Operation 6
 Startup 6
Symbols
 Representation 5

T

Technical Data
 Dimensions 29
Type designation code 30

U

Usage
 Appropriate 6
 Improper 6

 **www.balluff.com**

Balluff GmbH
Schurwaldstraße 9
73765 Neuhausen a.d.F.
Germany
Tel. +49 7158 173-0
Fax +49 7158 5010
balluff@balluff.de
 www.balluff.com