

# BALLUFF

## BIS M-622-070-A01-03-ST33

High Frequency Passive Radio Frequency, Identification Processor

### INSTALLATION GUIDE

This document provides instructions and information designed to assist users in the hardware setup of the BIS M-622-070-A01-03-ST33 Processor. For configuration details see the HF-CNTL Series Reference Manual.

PACKAGE CONTENTS	
Qty	Description
1	BIS M-622-070-A01-03-ST33 Processor
1	BIS M Series Configuration Tag
1	This Installation Guide
2	M5 x 20 mm Antenna Mounting Screws
2	M5 Antenna Mounting Washers
1	Hex Wrench for Antenna Mounting

### TECHNICAL DATA

ELECTRICAL FEATURES	
Power Supply	19.2 to 28.8 VDC
DC Input Current	500 mA
Communication Interface	Profibus –DP
Data Rate	9,6 kbps up to 12 Mbps
RADIO FEATURES	
Frequency	13.56 MHz
Air Protocols	ISO 14443A, ISO 15693
Conducted Output Power	1 W
ENVIRONMENTAL FEATURES	
Operating Temperature	-20° to +50 °C (-4° to +122 °F)
Storage Temperature	-20° to +70 °C (-4° to +158 °F)
Humidity max.	90% non condensing
Protection Class EN 60529	IP65*
PHYSICAL FEATURES	
Dimensions	164 x 112 x 48 mm (6.48 x 4.41 x 1.88 in)
Weight	560 g (19.8 oz)
Enclosure	Powder Coated Aluminum
USER INTERFACE	
LED Indicators	READY, RF, COM, STATUS, OP MODE

\* When all connectors, sealing caps, and antenna are correctly installed.

The BIS M-622-070-A01-03-ST33 Processor and its antenna are intended for indoor use only.

Minimum Mounting Distance Between Adjacent Antennas.


BIS M	-371	-372	-373	-370
-371	60 cm	75 cm	90 cm	50 cm
-372	75 cm	90 cm	1.2 m	65 cm
-373	90 cm	1.2 m	2 m	90 cm
-370	50 cm	65 cm	90 cm	50 cm

### GENERAL VIEW




### CONNECTIVITY


M12 5-pin B-Coded Male Connector (Profibus-IN)

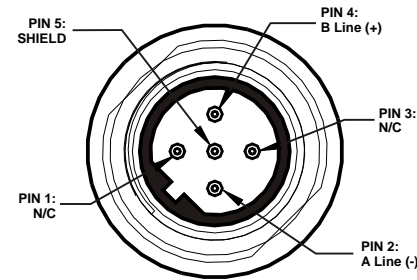

M12 5-pin B-Coded Female Connector (Profibus-OUT)

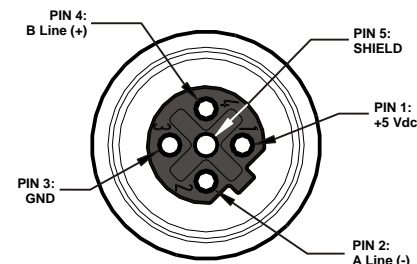


M12 5-pin Male Connector (Power Supply)

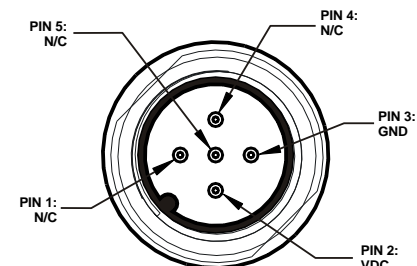

N/C = Not Connected

M12 8-pin Male Connector (RS232)

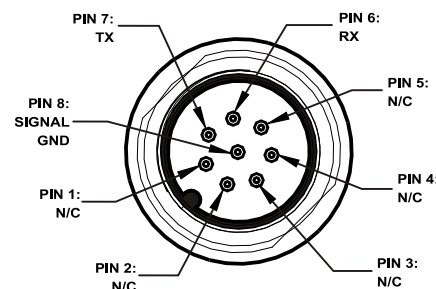


N/C = Not Connected

### LED INDICATORS


	<b>READY</b>	The READY LED is ON after the power up sequence has completed.
	<b>RF</b>	The RF LED illuminates when RF power is being transmitted by the antenna.
	<b>COM</b>	The COM (communications) LED flashes ON and OFF when data is being transmitted between the antenna and a tag. When in Continuous Read mode, the COM LED will remain ON and will turn OFF briefly only while data is being read from or written to a tag.
	<b>STATUS</b>	<b>SOLID GREEN:</b> initialized. <b>FLASHING GREEN:</b> initialized, diagnostic event(s) present. <b>SOLID RED:</b> exception error
	<b>OP MODE</b>	<b>SOLID GREEN:</b> on-line, data exchange <b>FLASHING GREEN:</b> on-line, but idle. <b>FLASHING RED (1 FLASH):</b> parametrization error <b>FLASHING RED (2 FLASHES):</b> Profibus configuration error

Typical Layout

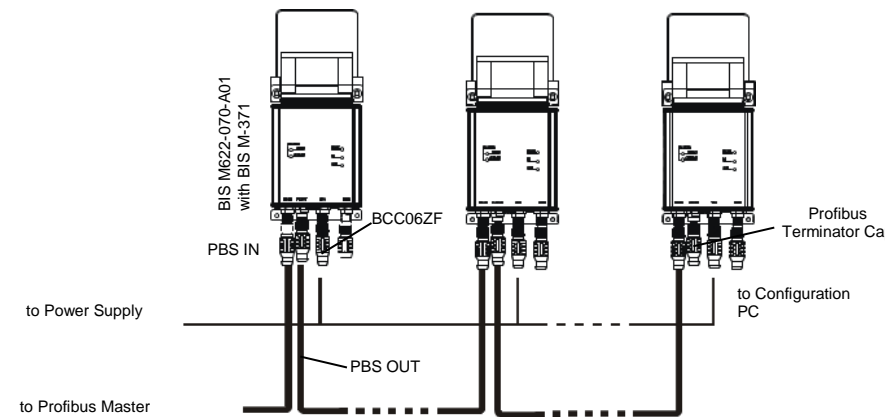

See the BIS M-622 Series Reference Manual for a complete list of accessories including alternative cables and connectors.

### DIMENSIONS

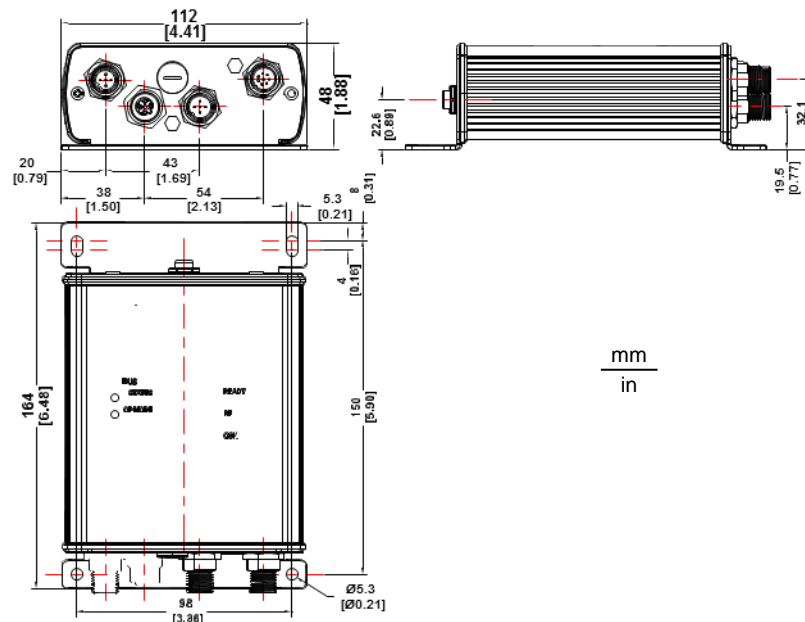

mm  
in

### INSTALLATION GUIDELINES

- RF performance and read/write range can be negatively impacted by the proximity of metallic objects and liquids. Avoid mounting the BIS M-37\_ antenna within 15 cm (6 inches) of any metallic object or wet surface.
- Do not route cables near other unshielded cables or near wiring carrying high voltage or high current. Cross cables at perpendicular intersections and avoid routing cables near motors and solenoids.
- Avoid mounting the Processor near sources of EMI (electro-magnetic interference) or near devices that generate high ESD (electro-static discharge) levels. Always use adequate ESD prevention measures to dissipate potentially high voltages.
- If electrical interference is encountered (as indicated by a significant reduction in read/write performance), relocate the Processor to an area free from potential sources of interference.

### INSTALLATION

The BIS M-622-070-A01-03-ST33 Processor is designed for Profibus RFID applications, where the Processor is connected as a slave node in a Profibus (DP) network via compatible cables directly to a Profibus Master (host). The default Node ID is 63.

- Select a suitable location for the Processor/Antenna.
- Mount the BIS M-37\_ Antenna to the BIS M Processor, either Directly or Remotely, as described in the BIS M-37\_ Installation Guide included with the antenna.
- Mount the Processor and Antenna to your mounting fixture using **M5 (or #10)** diameter screws (*not included*) and secure them with appropriate washers and nuts. Tighten screws to **1.7 Nm or 15 lbs per inch ± 10%**.
- Attach Profibus-compatible data cables to the 5-pin B-Coded (reverse-keyed), male and female M12 interface connectors on the BIS M-622. Connect the other end of the cables to your Profibus network.
- Build a power supply cable using the BCC06ZF M12 5-pin female connector. Use minimum 24 AWG wires for connection to the power supply lines according to the Vdc connector pinout. Connect the BCC06ZF M12 5-pin female connector to the M12 5-pin male connector on the Processor. Connect the other end of the cable (wires or user-supplied connectors) to the power supply.
- Apply power to the Processor after all cable connections have been made. The LEDs on the unit will flash. The READY LED is ON whenever power is applied to the BIS M.

To configure and control the BIS M-622-070-A01-03-ST33 Processor and send RFID commands for testing purposes, download and install the Dashboard Configuration Tool from [www.balluff.com](http://www.balluff.com). The Dashboard Configuration Tool uses the PC RS232 serial port to communicate to the Processor's RS232 serial port. To enable communication:

(over)

1. To connect the Processor's RS232 serial port to the PC you have two choices; the first one is the quickest: a) Connect the BCC0ETJ M12 8-pin female connector to the M12 8-pin male interface connector on the BIS M-622-070-A01-03-ST33. Connect the BCC0ETJ 9-pin female D-sub connector to an RS232 COM port on the host computer, or, b) Build your own communication cable using the BCC0A03 connector M12 8-pin female connector and follow the schematic shown in the Reference Manual.
2. On the host computer, set COM port parameters to: 9600 baud, 8 data bits, 1 stop bit, no parity and no handshaking.
3. Run the Dashboard™ Configuration Tool.

## COMPLIANCE

---

**Only Datalogic BIS M37\_ antennas are certified for use with the BIS M-622-070-A01-03-ST33 Processors.**

**This product is intended to be installed by Qualified Personnel only.**

This product must not be used in explosive environments.

### **Power Supply**

This device is intended to be supplied by a UL Listed or CSA Certified Power Unit with «Class 2» or LPS power source.

